


Whirlpool WGD5600XW1 01 - TOP AND CONSOLE PARTS

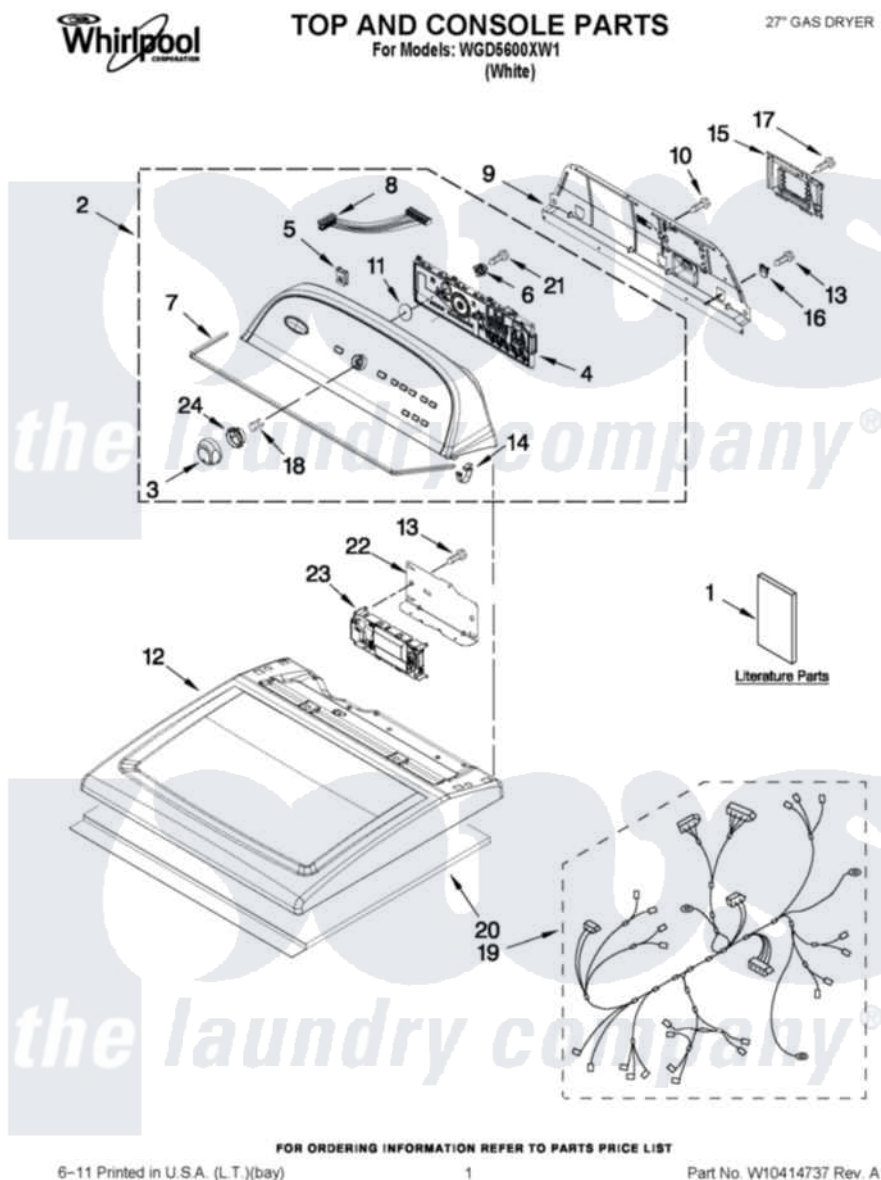

6-11 Printed in U.S.A. (L.T.)(bay)

1

Part No. W10414737 Rev. A

Whirlpool Residential Whirlpool WGD5600XW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10097053		Not Available	GUIDE, USE & CARE
"	W10097034		Not Available	TECH SHEET
2	W10269610			Console Assembly
3	W10251392			Knob Assembly
4	W10269625			User Interface Assembly
5	W10298336			8-18 Nch, U-Type NUT
6	W10274524			Tensioner, Facia
7	W10280079			Seal, Console
8	W10285494			Cable, User Interface
9	W10096969			Panel, Rear Console
10	693995			Screw, Hex Head
11	W10323092			Seal, User Interface
12	W10260246			Top
13	3390647	488729		Screw
14	8312709			Clip-Console

15	W10338363		Cover, Terminal Block
16	W10279552		Plug-Upper Rear Panel
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10253982		Harness, Wiring
20	W10123956		Dampening Panel
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10317636		Control, Electronic
24	W10325119		Spacer, Knob


the laundry company[®]


the laundry company[®]


the laundry company[®]