


Whirlpool WGD5610XW0 01 - TOP AND CONSOLE PARTS

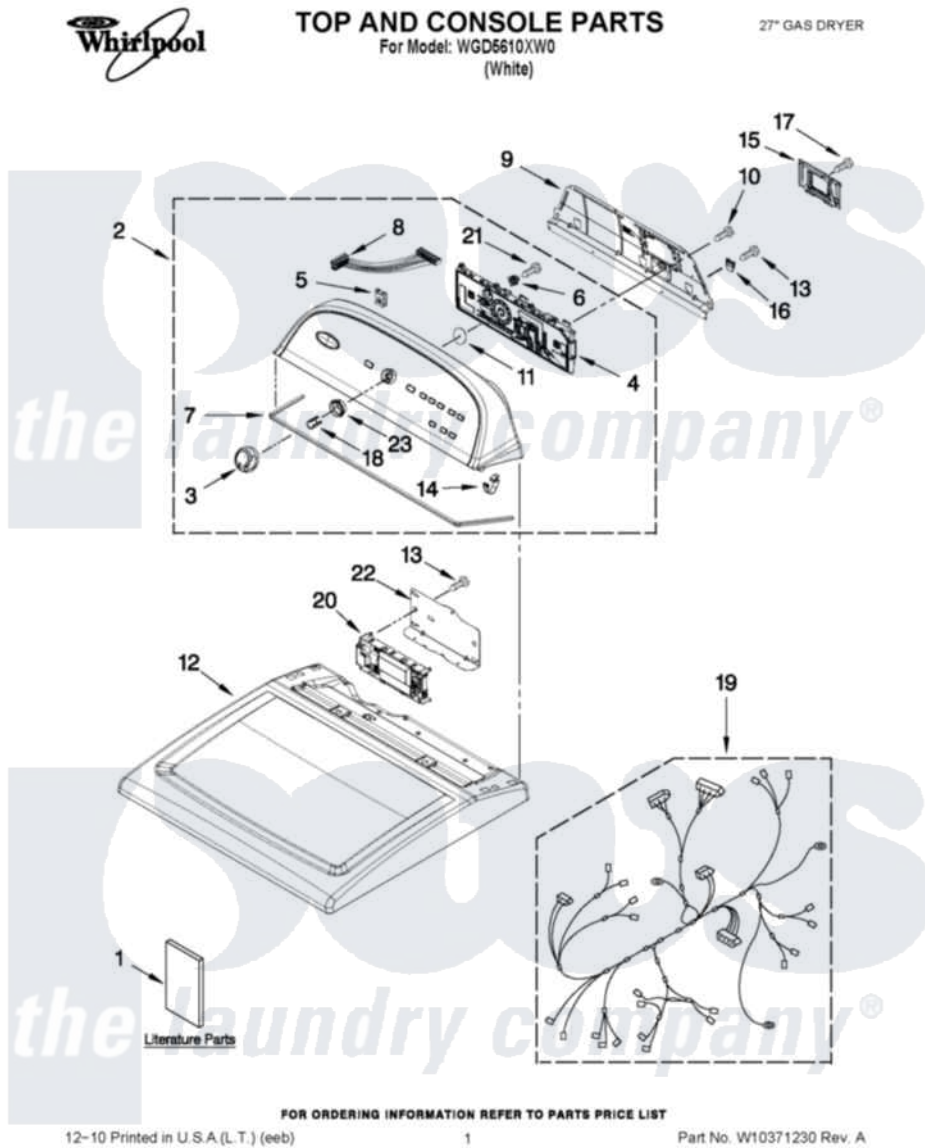

Whirlpool Residential Whirlpool WGD5610XW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10097053		Not Available	GUIDE, USE & CARE
"	W10097034		Not Available	TECH SHEET
2	W10295169			Console Assembly
3	W10251392			Knob Assembly
4	W10352593			User Interface Assembly
5	W10298336			8-18 Nch, U-Type NUT
6	W10274524			Tensioner, Facia
7	W10280079			Seal, Console
8	W10285494			Cable, User Interface
9	W10096969			Panel, Rear Console
10	693995			Screw, Hex Head
11	W10323092			Seal, User Interface
12	W10260246			Top
13	3390647	488729		Screw
14	8312709			Clip-Console

15	W10338363		Cover, Terminal Block
16	W10279552		Plug-Upper Rear Panel
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10253982		Harness, Wiring
20	W10352638		Control, Electronic
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10325119		Spacer, Knob

