


Whirlpool WGD5610XW0 02 - CABINET PARTS

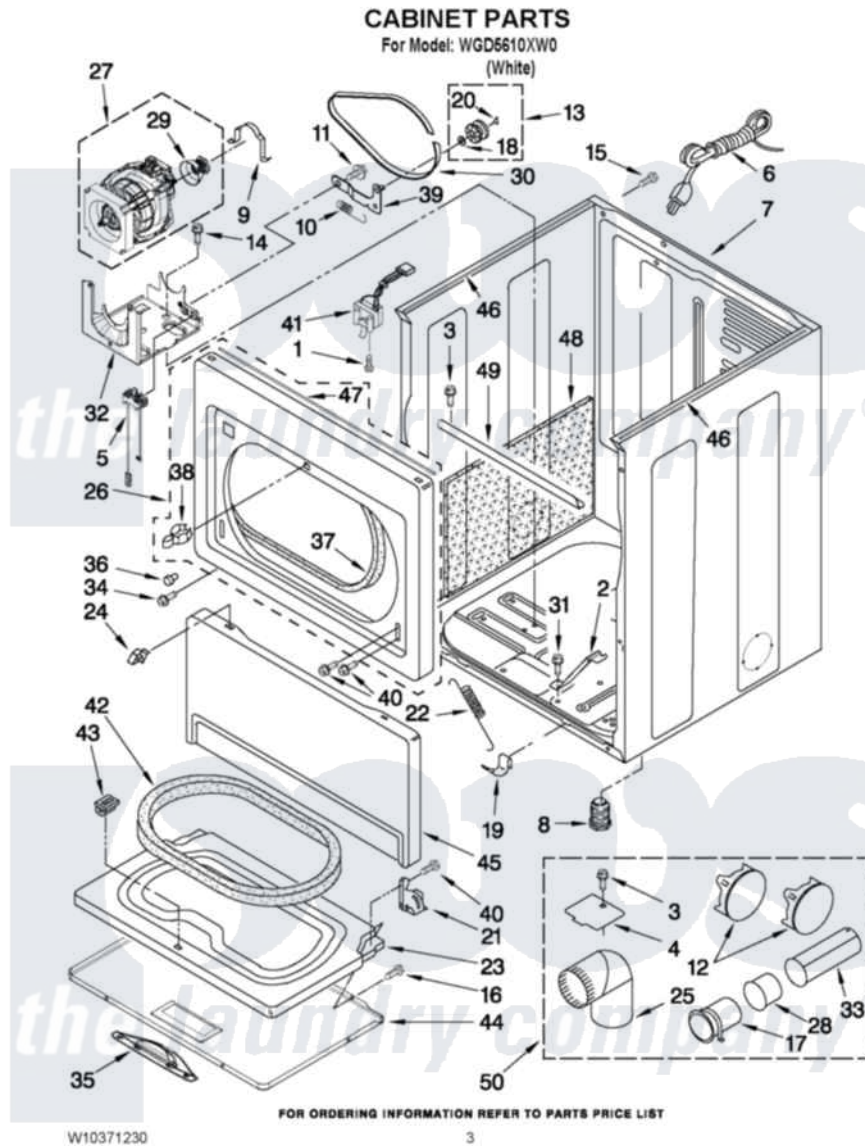

Whirlpool Residential Whirlpool WGD5610XW0 Dryer Parts Parts Diagram 02 - CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697773	3395530		Screw
2	8529757			Bracket, Burner
3	3390647	488729		Screw
4	3394331			Plate Cover
5	W10246525	W10314253		Switch, Assembly Broken Belt
6	344020	3401402		Cord, Power
7	8310656			Cabinet
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	49252			Plug, Multivent
13	3388672	279640		Pulley-ldr
14	343641	681414		Screw, 10AB X 1/2
				Screw, 9A X 3/8 Hex Washer

15	8533971	90767	Screw, 0A X 3/8 Hex Washer Head Tapping
16	342055	488627	Screw
17	8563747		Exhaust Pipe Medium Pipe
18	W10121334		Washer, Thrust
19	W10291934		Clip
20	690997		Washer, Thrust
21	3387560		Hinge, Door
"	3387559		Hinge, Door
22	3387565		Spring, Door
23	8066045		Door Inner
24	3388229		Retainer, Toe Panel
25	49026		4" - 90° Elbow
26	697227	279659	Panel
27	8538263	279787	Motor-Drive
28	8563750		Exhaust Pipe
29	8578220		Pulley, Motor
30	3387610	661570	Belt
31	693995		Screw, Hex Head
32	W10242878		Bracket, Motor Mounting
33	8563749		Exhaust Pipe
34	8281212	W10080800	Screw, 8-18 X 3/8
35	W10284093		Handle, Door
36	693152		Bumper, Console
37	3387242		Seal, Front Panel
38	696144	279570	Latch
39	3388674	W10118756	Idler Bracket
40	3357011	308685	Side Trim)
41	3406107		Door Switch Assembly
42	W10325058		Seal, Door
43	690081	279570	Latch
44	W10279553		Door, Front
45	697215	3406797	Toe Panel
46	W10336128		Seal, Spill Guard
47	W10312811		Seal, Spill Guard
48	W10123956		Dampening Panel
49	W10236068		Bracket, Cabinet
NI	W10331132		Dryer Exhaust Kit

