


# Whirlpool WGD5700SW0 01 - TOP AND CONSOLE PARTS

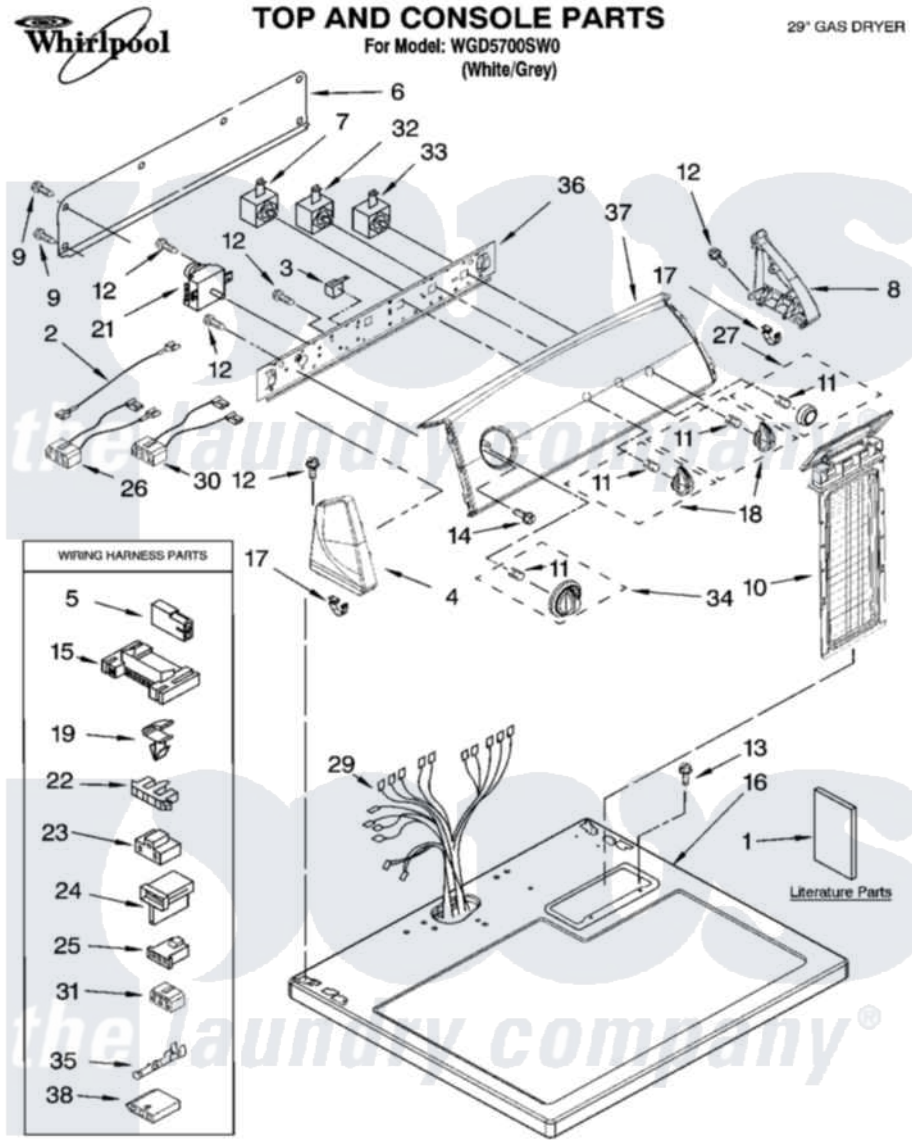

5-06 Litho in U.S.A. (LT)

1

Part No. 8181238

[Whirlpool Residential Whirlpool WGD5700SW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	8578183		Not Available	Use And Care Guide
"	8576811		Not Available	Wiring Diagram
"	W10042960		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">694419</a>			Mini-Buzzer
4	8566035	<a href="#">8565957</a>		Cap, End
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3399639</a>			Switch, Rotary Temperature
8	8566032	<a href="#">8565954</a>		Cap, End
9	<a href="#">693995</a>			Screw, Hex Head

10	<a href="#">8557857</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>	Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8559800	<a href="#">8563663</a>	Top
17	<a href="#">8312709</a>		Clip-Console
18	<a href="#">W10034380</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
21	<a href="#">8299766</a>		Timer Assembly
22	<a href="#">3397269</a>		Connector, Timer
23	<a href="#">3401144</a>		Connector
24	<a href="#">3403499</a>		Connector, 2-Postion
25	<a href="#">3403498</a>		Connector, 3-Position
26	<a href="#">3397695</a>		Wire, Jumper
27	<a href="#">W10034790</a>		Knob, Push-To-Start
29	<a href="#">8299879</a>		Harness, Wiring
30	3396029	<a href="#">8539893</a>	Wire, Jumper
31	<a href="#">3347243</a>		Block, Disconnect
32	<a href="#">3405156</a>		Switch, Rotary
33	<a href="#">3398095</a>		Switch, Push-To-Start
34	<a href="#">W10034750</a>		Timer Knob Assembly
35	<a href="#">94614</a>		Terminal
36	<a href="#">8566052</a>		Bracket, Console
37	<a href="#">8578859</a>		Panel, Control
38	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals

