


Whirlpool WGD5700VH0 02 - CABINET PARTS

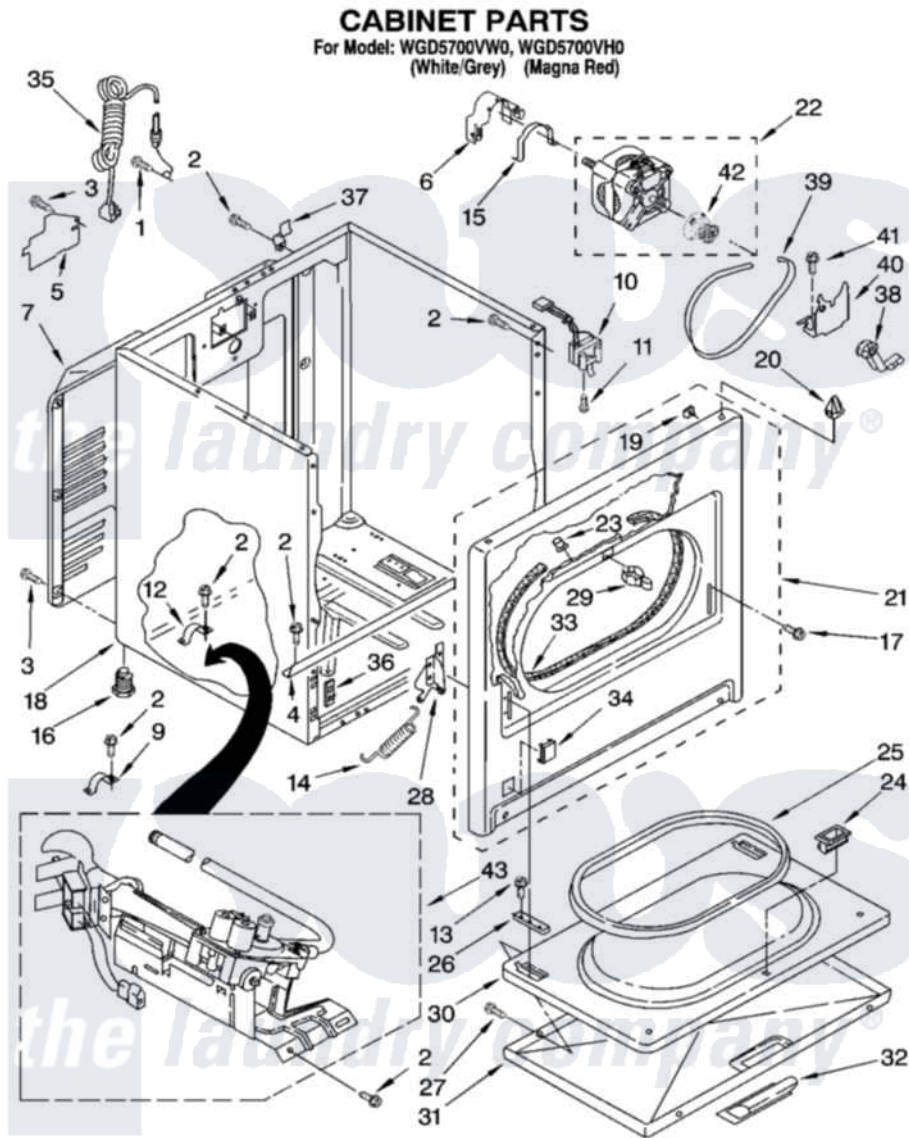

W10239604

3

Whirlpool [Residential Whirlpool WGD5700VH0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	8541400			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	3404162			Clamp, Motor
7	3396805	280043		Panel-Rear
9	3980175			Clamp, Elbow
10	3406107			Door Switch Assembly
11	697773	3395530		Screw
12	341029			Clamp, Pipe Door Spring
13	3357011	308685		Side Trim)
14	W10041960			Spring, Door
15	W10121316			Plug, Multivent
16	3392100	49621		Feet-Leveling
"	279810			Foot-Optional

17	342043	486146	Screw
18	8560603	Not Available	Cabinet (Includes Illus. 4) (White)
"	W10208295		Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	3395197	279740	Panel
"	W10208304	W10246470	Panel
22	W10194250	279827	Motor-Drive
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	3390731		Seal, Door
26	337189		Clip, Hinge
27	694091		Trim, Side Right Hand
28	8066056		Hinge, Door
"	8066057		Hinge, Door
29	696144	279570	Latch
30	695737		Door, Rear
31	3393549		Door, Front
"	W10205714		Door, Front
32	W10095180		Handle, Door
"	W10205821		Handle, Door
33	3406129		Seal And Bearing Assembly
34	3394975		Plug, Front Panel
"	W10205814		Plug, Front Panel
35	344020	3401402	Cord, Power
36	3394083		Clip, Front Panel
37	8066217		Hinge, Top
38	691366		Idler And Pulley Assembly
39	W10131364	341241	Belt
40	348780		Base, Motor
41	3400500		Bolt, 3405245 5/16-18 X 3/4
42	8066184		Pulley, Motor
43	8318272	W10465748	Burner-Gas

