


Whirlpool WGD5700VH1 01 - TOP AND CONSOLE PARTS

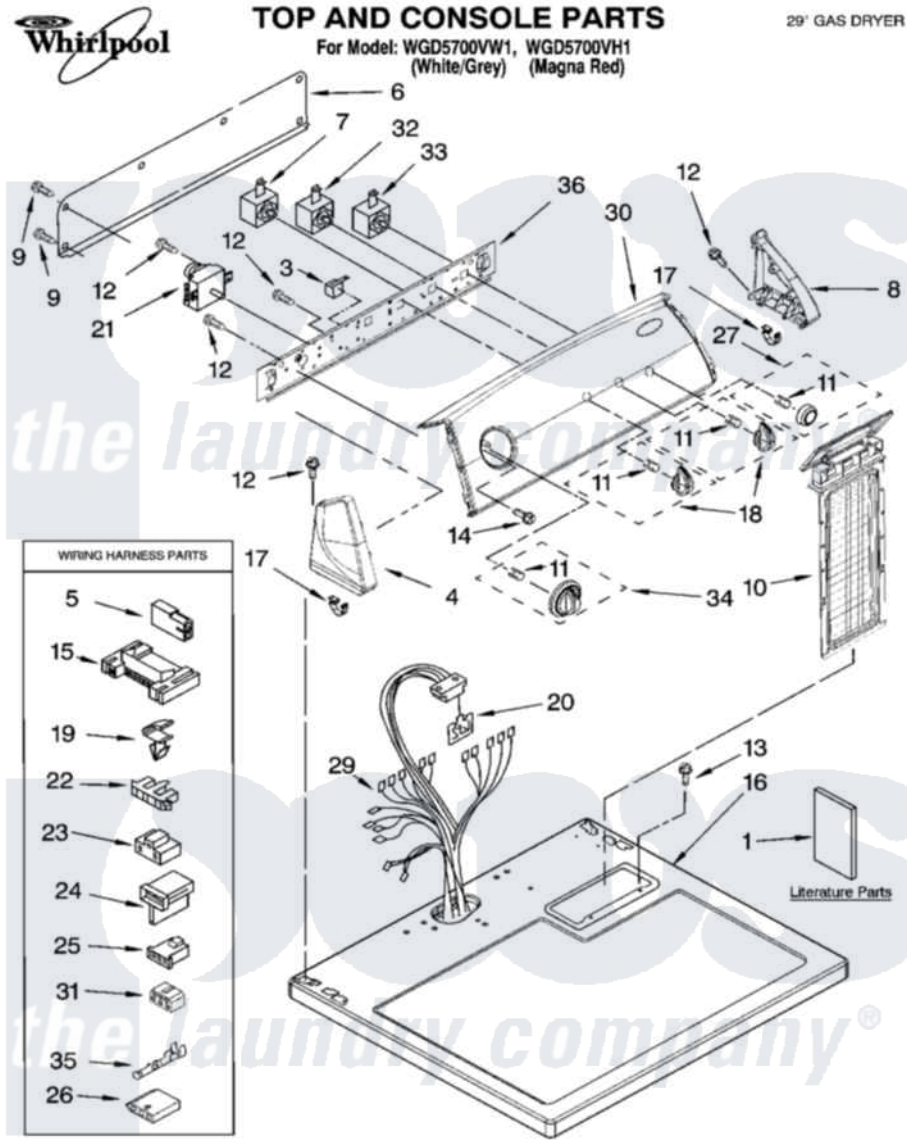

1-09 Litho in U.S.A. (MP)(bay)

1

Part No. W10250367 Rev. A

Whirlpool Residential Whirlpool WGD5700VH1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10150610		Not Available	Use & Care Guide
"	W10185993		Not Available	Wiring Diagram
"	W10042950		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
3	3398093			Buzzer, Adjustable
4	8566035	8565957		Cap, End
"	W10205959			Cap, End
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3405155			Switch, Temperature
8	8566032	8565954		Cap, End
"	W10205953			Cap, End
9	693995			Screw, Hex Head

10	8557857		Screen, Lint
"	W10205825		Screen, Lint
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
"	W10214597		Top
17	8312709		Clip-Console
18	W10034380		Knob, Control
19	3394427		Clip-Harness
20	8558178		Control, Electronic
21	W10185991	Not Available	Timer Assembly (60 Hz.)
22	3397269		Connector, Timer
23	3401144		Connector
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	3936144		Do-It-Yourself Repair Manuals
27	W10034770		Knob, Push-To-Start
29	W10186081		Harness, Wiring
30	W10167873		Panel, Control
31	3347243		Block, Disconnect
32	3405154		Switch Rotary
33	3398094		Switch, Push To Start
34	W10034750		Timer Knob Assembly
35	94614		Terminal
36	8566052		Bracket, Console

