


# Whirlpool WGD5700VW0 01 - TOP AND CONSOLE PARTS

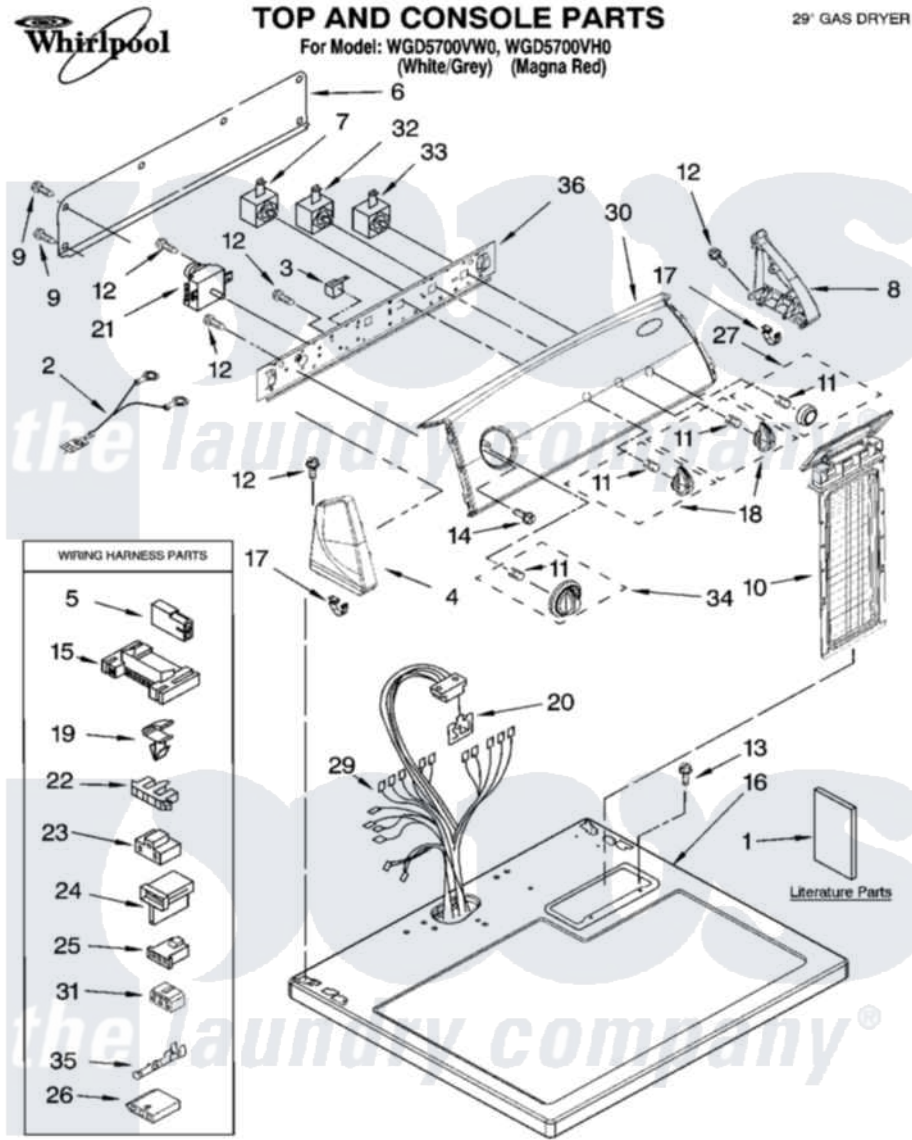

11-08 Litho in U.S.A. (LT)(bay)

1

Part No. W10239604 Rev. A

Whirlpool Residential Whirlpool WGD5700VW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10150610		Not Available	Use & Care Guide
"	8299791		Not Available	Wiring Diagram
"	W10042950		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3401668</a>			Wire, Jumper
3	<a href="#">3398093</a>			Buzzer, Adjustable
4	8566035	<a href="#">8565957</a>		Cap, End
"	<a href="#">W10205959</a>			Cap, End
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3405155</a>			Switch, Temperature

8	<a href="#">8566032</a>	<a href="#">8565954</a>	Cap, End
"	<a href="#">W10205953</a>		Cap, End
9	<a href="#">693995</a>		Screw, Hex Head
10	<a href="#">8557857</a>		Screen, Lint
"	<a href="#">W10205825</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>	Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8559800	<a href="#">8563663</a>	Top
"	<a href="#">W10214597</a>		Top
17	<a href="#">8312709</a>		Clip-Console
18	<a href="#">W10034380</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">8558178</a>		Control, Electronic
21	<a href="#">3406725</a>		Timer Assembly
22	<a href="#">3397269</a>		Connector, Timer
23	<a href="#">3401144</a>		Connector
24	<a href="#">3403499</a>		Connector, 2-Postion
25	<a href="#">3403498</a>		Connector, 3-Position
26	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
27	<a href="#">W10034770</a>		Knob, Push-To-Start
29	<a href="#">8299891</a>		Harness, Wiring
30	<a href="#">W10167873</a>		Panel, Control
31	<a href="#">3347243</a>		Block, Disconnect
32	<a href="#">3405154</a>		Switch Rotary
33	<a href="#">3398094</a>		Switch, Push To Start
34	<a href="#">W10034750</a>		Timer Knob Assembly
35	<a href="#">94614</a>		Terminal
36	<a href="#">8566052</a>		Bracket, Console

