


Whirlpool WGD5700XW1 01 - TOP AND CONSOLE PARTS

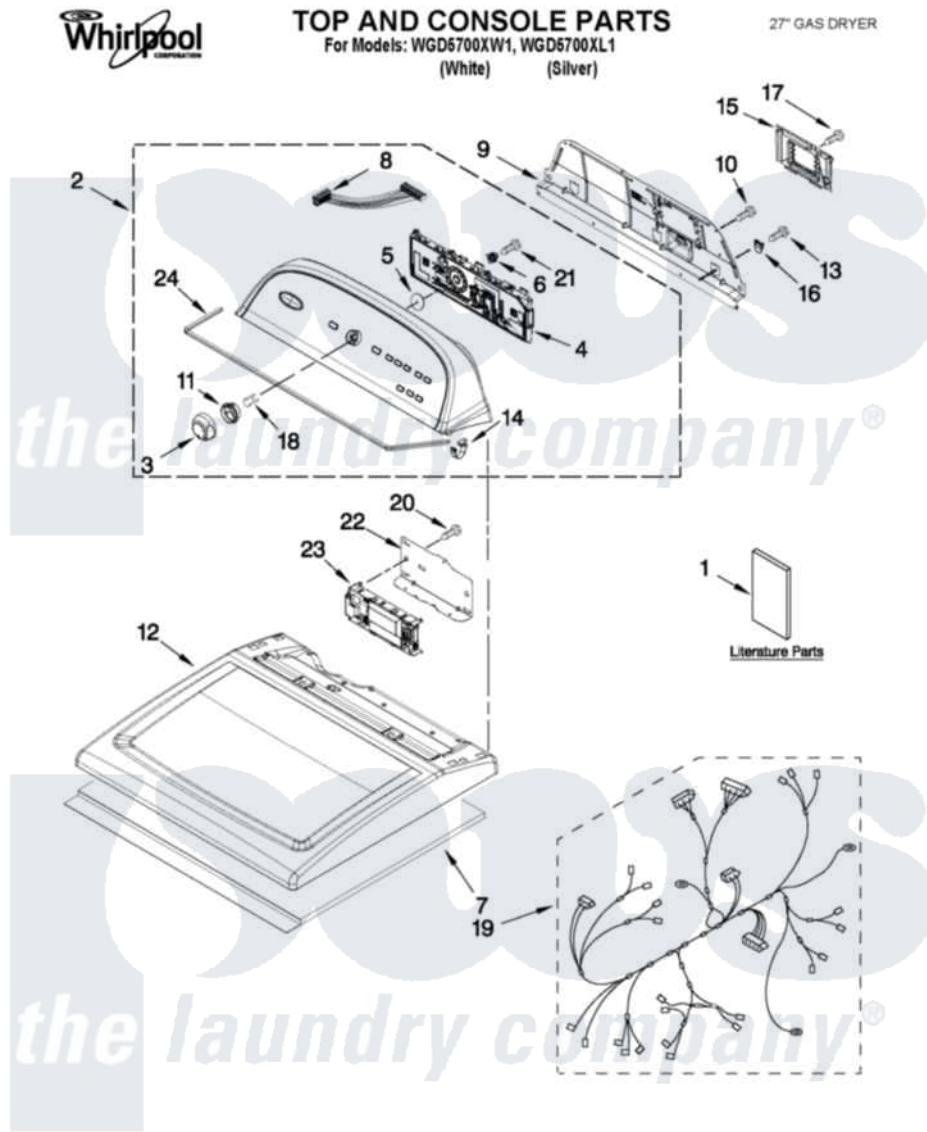

6-11 Printed in U.S.A. (L.T.) (psw)

1

Part No. W10414738 Rev. A

Whirlpool Residential Whirlpool WGD5700XW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10097053		Not Available	GUIDE, USE & CARE
"	W10097034		Not Available	TECH SHEET
2	W10269611			Console Assembly
"	W10293251			Console Assembly
3	W10251392			Knob Assembly
"	W10251394			Assembly, Knob White And Silver Models
4	W10269626			User Interface Assembly
5	W10323092			Seal, User Interface
6	W10274524			Tensioner, Facia
7	W10123956			Dampening Panel
8	W10285494			Cable, User Interface
9	W10096969			Panel, Rear Console
10	693995			Screw, Hex Head
11	W10325119			Spacer, Knob

12	W10260246		Top
"	W10268729		Top
13	3390647	488729	Screw
14	8312709		Clip-Console
15	W10338363		Cover, Terminal Block
16	W10279552		Plug-Upper Rear Panel
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10287253		Harness, Wiring
20	W10298336		8-18 Nch, U-Type NUT
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10214008		Control, Electronic
24	W10280079		Seal, Console

