


Whirlpool WGD5810SW0 01 - TOP AND CONSOLE PARTS

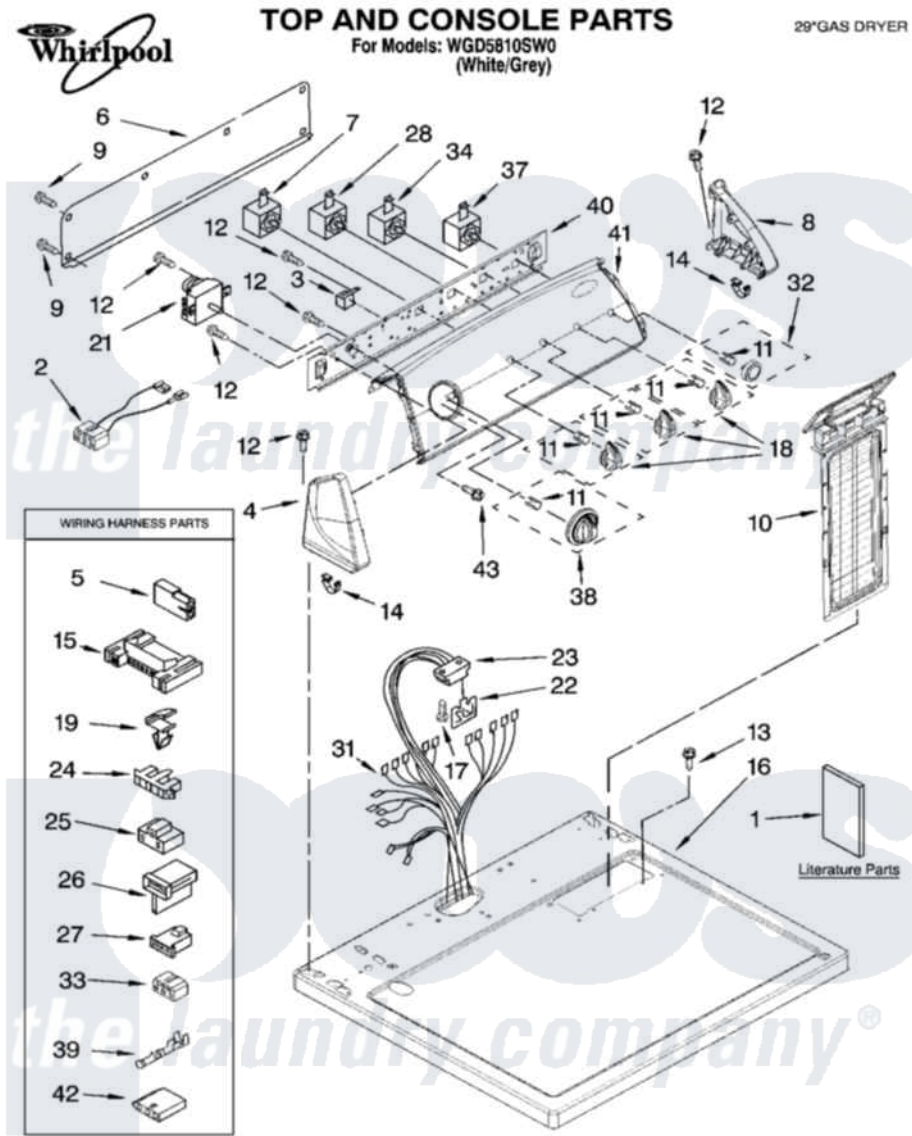

6-06 Litho in U.S.A.(LT)

1

Part No. 8181403

Whirlpool Residential Whirlpool WGD5810SW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	W10042950		Not Available	Sheet, Cycle Feature
"	8578370		Not Available	Use & Care Guide
"	8576803		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401695			Wire, Jumper Buzzer
3	694419			Mini-Buzzer
4	8566035	8565957		Cap, End
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3405155			Switch, Temperature
8	8566032	8565954		Cap, End
9	693995			Screw, Hex Head

10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8312709		Clip-Console
15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
17	359625	487240	Screw, For Mtg. Service Capacitor
18	W10043480		Knob, Control
19	3394427		Clip-Harness
21	3406725		Timer Assembly
22	8558178		Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3405152		Switch, Wrinkle Shield
31	8299891		Harness, Wiring
32	W10034770		Knob, Push-To-Start
33	3347243		Block, Disconnect
34	3405154		Switch Rotary
37	3398094		Switch, Push To Start
38	W10034750		Timer Knob Assembly
39	94614		Terminal
40	8566052		Bracket, Console
41	W10028950		Panel, Control
42	3936144		Do-It-Yourself Repair Manuals
43	8533951	3400859	Screw, Grounding

