


# Whirlpool WGD5850SW0 01 - TOP AND CONSOLE PARTS

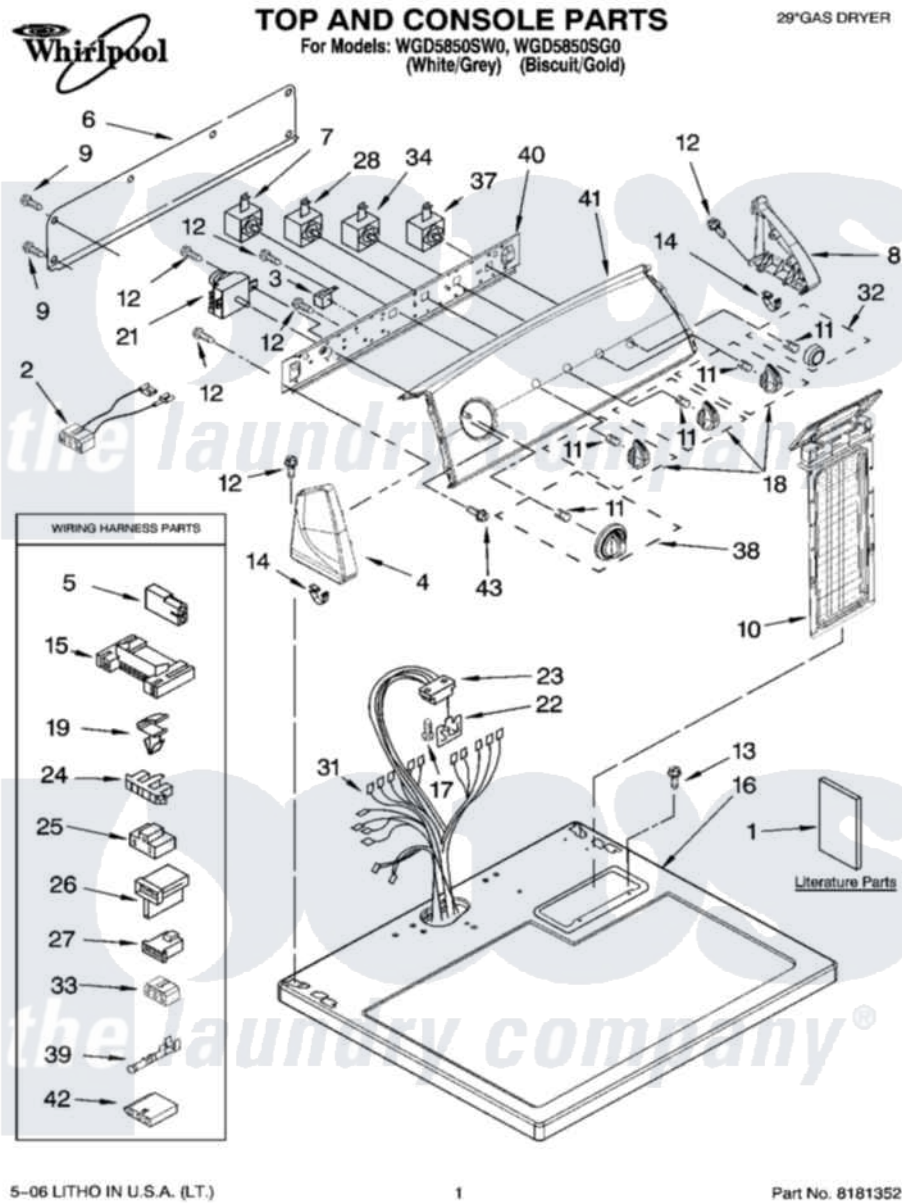

5-06 LITHO IN U.S.A. (LT.)

1

Part No. 8181352

Whirlpool Residential Whirlpool WGD5850SW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	W10042950		Not Available	Sheet, Cycle Feature
"	8578183		Not Available	Use And Care Guide
"	8576803		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3401695</a>			Wire, Jumper Buzzer
3	<a href="#">694419</a>			Mini-Buzzer
4	8566035	<a href="#">8565957</a>		Cap, End
"	8566036	<a href="#">8565958</a>		Cap, End
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">8530169</a>			Switch, Temperature
8	8566032	<a href="#">8565954</a>		Cap, End

"	8566033	<a href="#">8565955</a>	Cap, End
9	<a href="#">693995</a>		Screw, Hex Head
10	<a href="#">8557857</a>		Screen, Lint
"	<a href="#">8557858</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">8312709</a>		Clip-Console
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">W10028870</a>		Top
"	<a href="#">W10028880</a>		Top
17	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
18	<a href="#">W10034380</a>		Knob, Control
"	<a href="#">W10034390</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
21	<a href="#">3406725</a>		Timer Assembly
22	<a href="#">8558178</a>		Control, Electronic
23	<a href="#">3391885</a>		Connector, Edge
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
28	<a href="#">3405152</a>		Switch, Wrinkle Shield
31	<a href="#">8299890</a>		Harness, Wiring
32	<a href="#">W10034770</a>		Knob, Push-To-Start
"	<a href="#">W10034780</a>		Knob, Push-To-Start
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3405154</a>		Switch Rotary
37	<a href="#">3398094</a>		Switch, Push To Start
38	<a href="#">W10034750</a>		Timer Knob Assembly
"	<a href="#">W10034760</a>		Timer Knob Assembly
39	<a href="#">94614</a>		Terminal
40	<a href="#">8566052</a>		Bracket, Console
41	<a href="#">8578863</a>		Panel, Control
"	<a href="#">8578864</a>		Panel, Control
42	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
43	8533951	<a href="#">3400859</a>	Screw, Grounding