


Whirlpool WGD5900SB0 01 - TOP AND CONSOLE PARTS

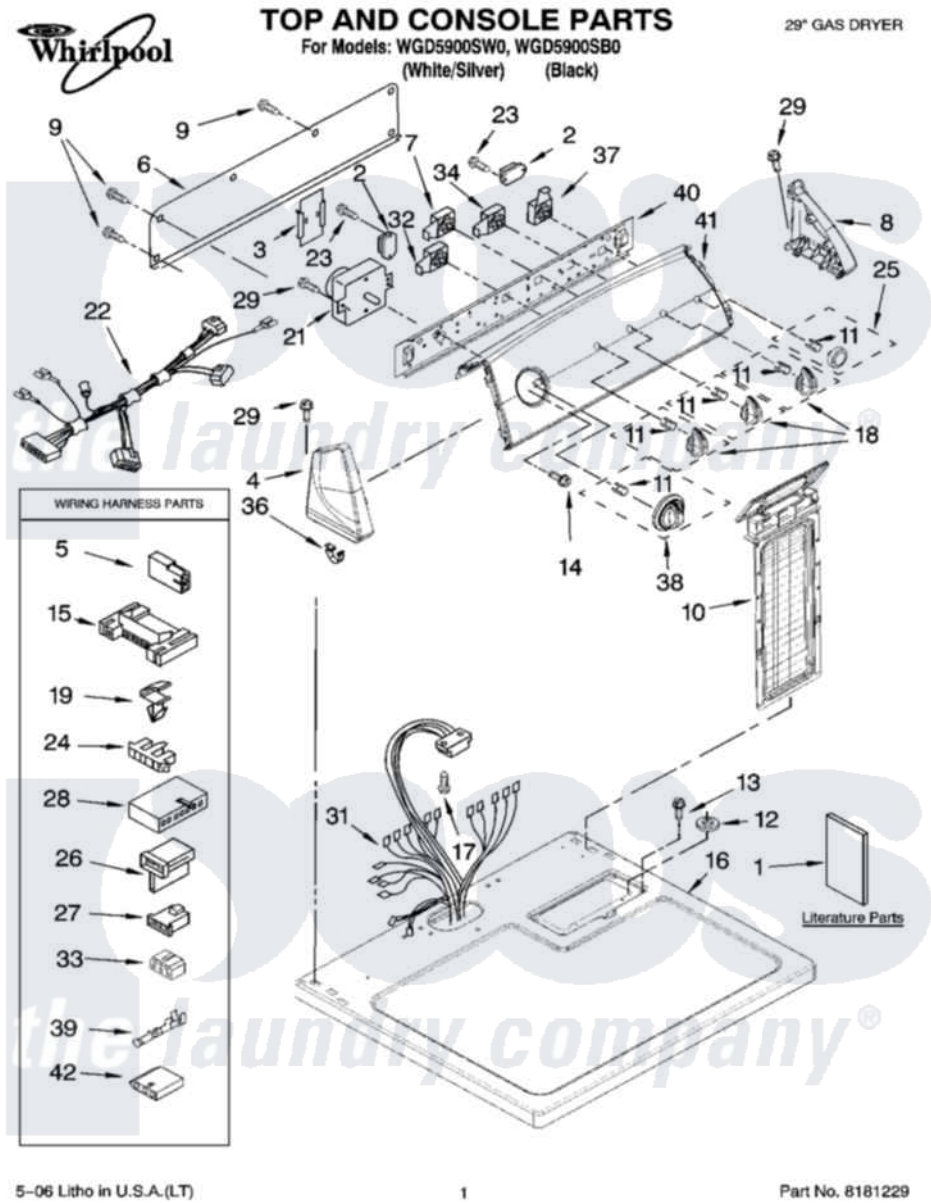

5-06 Litho in U.S.A.(LT)

1

Part No. 8181229

Whirlpool Residential Whirlpool WGD5900SB0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	W10042910		Not Available	Sheet, Cycle Feature
"	8578183		Not Available	Use And Care Guide
"	W10042940		Not Available	Tech Sheet
"	W10042920		Not Available	Sheet, Feature Resource Saver
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3405281			Power Relay
3	3976623	W10116566		Control-Elec
4	8566035	8565957		Cap, End
"	8566037	8565959		Cap, End
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3405152			Switch, Wrinkle Shield

8	8566032	8565954	Cap, End
"	8566034	8565956	Cap, End
9	693995		Screw, Hex Head
10	8557857		Screen, Lint
"	8557859		Screen, Lint
11	8536939		Clip, Knob
12	237446	487596	Washer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	W10028870		Top
"	W10028890		Top
17	343641	681414	Screw, 10AB X 1/2
18	W10034380		Knob, Control
19	3394427		Clip-Harness
21	8299771		Timer Assembly
22	8283281		Harness, Console
23	3388228		Screw, 8-18 X 1/32
24	3397269		Connector, Timer
25	W10034770		Knob, Push-To-Start
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3936150		Connector, 7-Circuit
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8299900		Harness, Wiring
32	8299970		Switch, Temperature
33	3347243		Block, Disconnect
34	3405151		Switch, End Of Cycle
36	8312709		Clip-Console
37	3977456		Switch, Push-To-Start
38	W10034750		Timer Knob Assembly
39	94614		Terminal
40	8566052		Bracket, Console
41	8566077		Panel, Control
42	3936144		Do-It-Yourself Repair Manuals

