


Whirlpool WGD6200SW1 01 - TOP AND CONSOLE PARTS

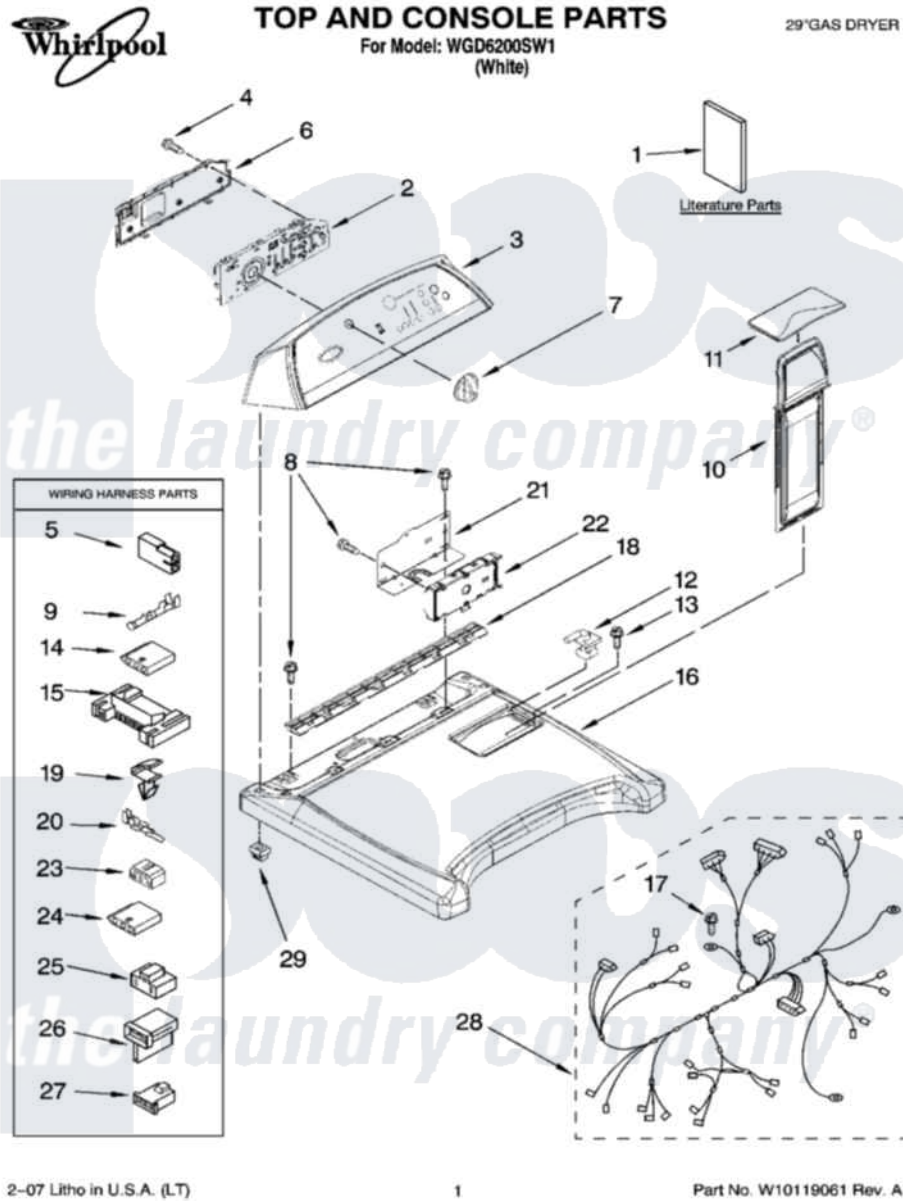

2-07 Litho in U.S.A. (LT)

1

Part No. W10119061 Rev. A

Whirlpool Residential Whirlpool WGD6200SW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10054090		Not Available	Guide, Quick Start
"	W10054080		Not Available	Use & Care Guide
"	W10054160		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8563976			Assembly, User Interface
3	W10110326			Panel, Console
4	W10003770			Screw, 6-19 X 1/2
5	717252			Receptacle, Terminal
6	8564265			Cover, Rear- User Interface
7	8574957			Knob, Assembly
8	337686		Not Available	SCREW, 8-18 X .500
9	94614			Terminal
10	8572270			Assembly, Lint Screen

11	W10044320	W10168227	Cover, Lint Screen
12	W10044470		Hinge, RH
"	W10044480		Hinge, L.H.
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3936144		Do-It-Yourself Repair Manuals
15	3395683		Receptacle, Multi-Terminal
16	8565021		Top
17	343641	681414	Screw, 10AB X 1/2
18	8558863		Bracket, Console
19	3394427		Clip-Harness
20	94613	596797	Terminal
21	8563853		Bracket, Machine Controller
22	W10111608	W10111617	Control, Electronic
23	3347243		Block, Disconnect
24	353424		Plug, Terminal
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	8299917	W10111432	Harness, Wiring
29	8558853		Screw, Grommet

