


Whirlpool WGD6200SW2 01 - TOP AND CONSOLE PARTS

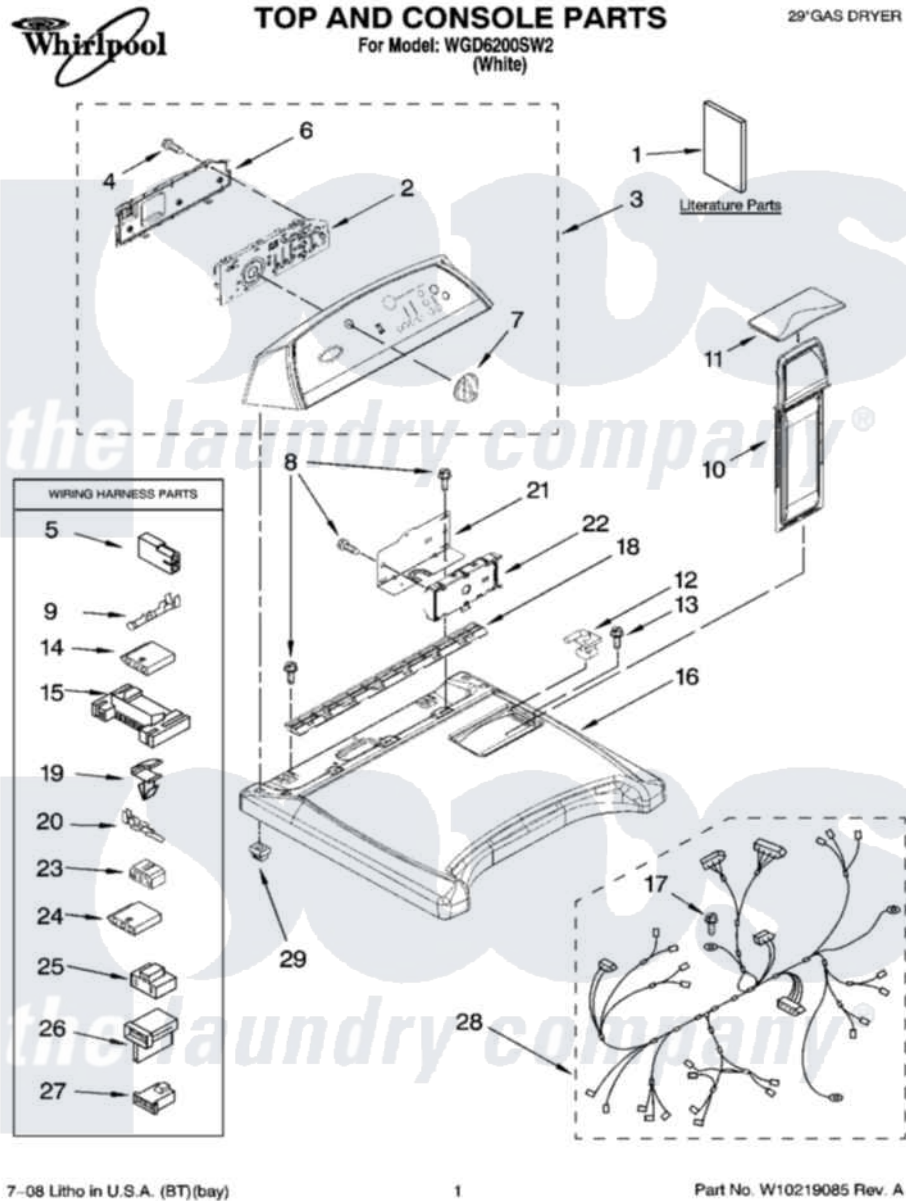

Whirlpool Residential Whirlpool WGD6200SW2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150650		Not Available	Guide, Quick Start
"	W10150626		Not Available	Use & Care Guide
"	W10054160		Not Available	Wiring Diagram
"	W10054110		Not Available	Performance, Tip Sheet
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	8563976			Assembly, User Interface
3	8571856		Not Available	Console Assembly
4	W10003770			Screw, 6-19 X 1/2
5	717252			Receptacle, Terminal
6	8564265			Cover, Rear- User Interface
7	8574957			Knob, Assembly
8	337686		Not Available	SCREW, 8-18 X .500
9	94614			Terminal
10	8572270			Assembly, Lint Screen
11	W10168227			Cover, Lint Screen

12	W10044470	Hinge, RH
"	W10044480	Hinge, L.H.
13	3369138	Screw, 8-18 X 5/8
14	3936144	Do-It-Yourself Repair Manuals
15	3395683	Receptacle, Multi-Terminal
16	8565021	Top
17	343641 681414	Screw, 10AB X 1/2
18	8558863	Bracket, Console
19	3394427	Clip-Harness
20	94613 596797	Terminal
21	8563853	Bracket, Machine Controller
22	W10111617	Control, Electronic
23	3347243	Block, Disconnect
24	353424	Plug, Terminal
25	3401144	Connector
26	3403499	Connector, 2-Postion
27	3403498	Connector, 3-Position
28	W10111432	Harness, Wiring
29	W10112673	Screw, Grommet

