


Whirlpool WGD6400SG2 02 - CABINET PARTS

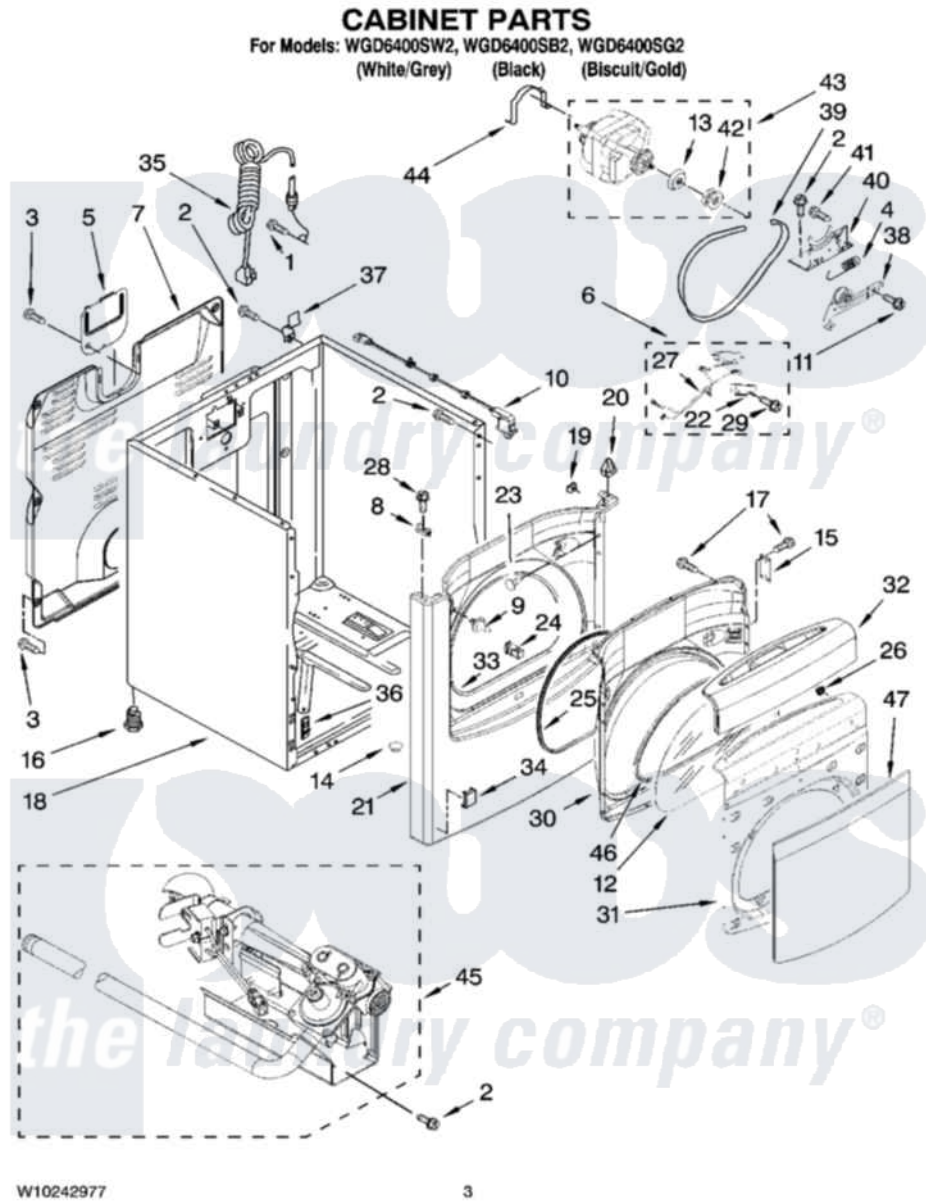

Whirlpool [Residential Whirlpool WGD6400SG2 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|---------------------------|---------------|------------------------------|
| 1 | 8533974 | 4331106 | | Screw, No.10-32 X 7/16 |
| 2 | 3390631 | | | Screw, 10-16 X 3/8 |
| 3 | 693995 | | | Screw, Hex Head |
| 4 | 3387374 | | | Spring, Idler |
| 5 | 8558833 | | | Plate, Cover Terminal Block |
| 6 | 8566208 | | | Assembly, Switch |
| 7 | 8558830 | | Not Available | Panel, Rear |
| 8 | 8568303 | | | Locator, Snap Down |
| 9 | 8572983 | W10295405 | | Strike |
| 10 | 3978977 | W10201787 | | Switch-Dor |
| 11 | 3389420 | | | Retainer-Idler 1/4-20 X 1/16 |
| 12 | 8565015 | | | Glass, Inner Door |
| 13 | 8578538 | | | Restrainer, Belt |
| 14 | 8578560 | | | Hole, Plug |
| 15 | 8565018 | | | Assembly, Hinge And Pin |
| " | W10050090 | | | Assembly, Hinge And Pin |

| | | | |
|----|---------------------------|---------------------------|---------------------------|
| " | W10050050 | | Assembly, Hinge And Pin |
| 16 | 3392100 | 49621 | Feet-Leveling |
| " | 279810 | | Foot-Optional |
| 17 | 342055 | 488627 | Screw |
| 18 | W10183827 | W10223154 | Cabinet |
| " | W10045390 | W10110409 | Cabinet |
| " | 8572115 | 8563673 | Cabinet |
| 19 | W10007520 | | Clip, Ground |
| 20 | 8576625 | | Lock, Front Top |
| 21 | 8565033 | W10174287 | Panel |
| " | 8565036 | W10174290 | Panel |
| " | 8565035 | W10174289 | Panel |
| 22 | 8564011 | | Bracket-Switch |
| 23 | 3404413 | | Plug, Hinge Hole |
| " | 3404416 | | Plug-Hole |
| " | 3404415 | | Plug, Hinge Hole |
| 24 | W10111905 | | Assembly, Door Catch |
| 25 | W10130493 | W10239307 | Seal-Door |
| 26 | 308499 | | Nut-1/4 Hf Self-Thread |
| 27 | 8539897 | | Jumper, |
| 28 | W10100830 | | Screw, 10-16 X 3/64 |
| 29 | 8539897 | | Jumper, |
| 30 | 8565037 | | Door Inner |
| " | 8575052 | 8565037 | Door Inner |
| 31 | W10116925 | | Door, Outer |
| " | W10116927 | | Door, Outer |
| " | W10116926 | | Door, Outer |
| 32 | W10111246 | W10119087 | Handle |
| " | W10111248 | | Handle, Door |
| " | W10111247 | | Door Handle |
| 33 | W10044490 | | Seal, Front Panel |
| 34 | 8564457 | | Plug, Front Panel |
| " | 8573008 | | Plug, Front Panel |
| " | 8573005 | | Plug, Front Panel |
| 35 | 344020 | 3401402 | Cord, Power |
| 36 | 3394083 | | Clip, Front Panel |
| 37 | 238088 | 8066217 | Hinge, Top |
| 38 | 8547174 | | Idler And Pulley Assembly |
| 39 | 8547168 | | Belt, Drive |
| 40 | 8547166 | | Base, Motor |
| 41 | W10002600 | | Screw, 6-20 X 1 1/4 |
| 42 | 8578565 | | Pulley, 60 Hz |
| 43 | 8566152 | W10463866 | Motor-Drve |
| 44 | W10121316 | | Plug, Multivent |
| 45 | W10183825 | | Burner, Assembly 60 Hz |
| 46 | W10076060 | | Gasket, Inner Door |
| 47 | W10116398 | | Window, Outer Door |
| " | 8575049 | | Window, Outer Door |
| " | 8575050 | | Window, Outer Door |