


Whirlpool WGD6400SW0 02 - CABINET PARTS

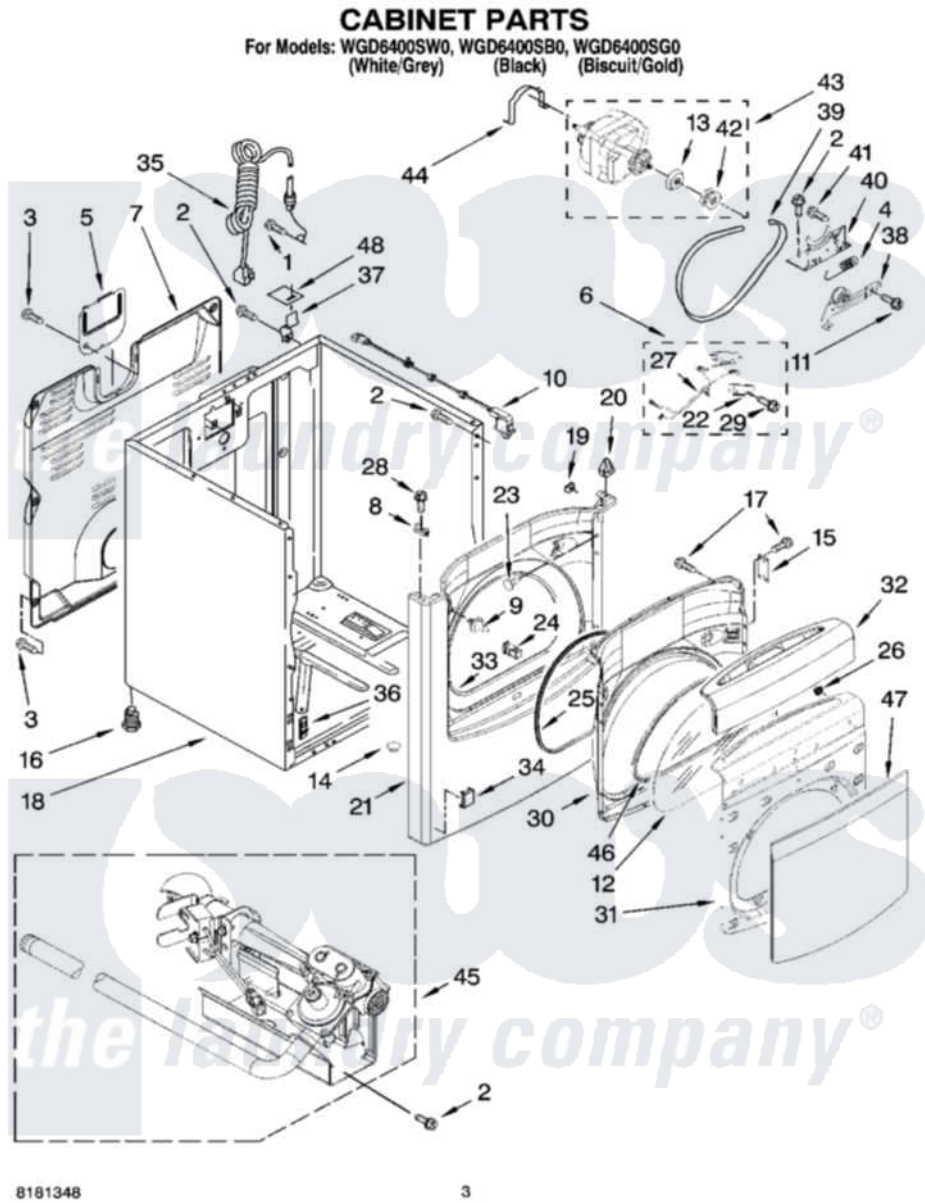

Whirlpool Residential Whirlpool WGD6400SW0 Dryer Parts Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	3387374			Spring, Idler
5	8558833			Plate, Cover Terminal Block
6	8566208			Assembly, Switch
7	8558830		Not Available	Panel, Rear
8	8568303			Locator, Snap Down
9	8572983	W10295405		Strike
10	3978977	W10201787		Switch-Dor
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	8565015			Glass, Inner Door
13	8578538			Restrainer, Belt
14	8578560			Hole, Plug
15	8565018			Assembly, Hinge And Pin
"	W10050090			Assembly, Hinge And Pin

"	W10050050		Assembly, Hinge And Pin
16	3392100	49621	Feet-Leveling
"	279810		Foot-Optional
17	342055	488627	Screw
18	8557569	8563672	Cabinet
"	W10045390	W10110409	Cabinet
"	8572115	8563673	Cabinet
19	W10007520		Clip, Ground
20	8576625		Lock, Front Top
21	8565033	W10174287	Panel
"	8565036	W10174290	Panel
"	8565035	W10174289	Panel
22	8564011		Bracket-Switch
23	3404413		Plug, Hinge Hole
"	3404416		Plug-Hole
"	3404415		Plug, Hinge Hole
24	8572982	W10111905	Assembly, Door Catch
25	8575027	W10239307	Seal-Door
26	308499		Nut-1/4 Hf Self-Thread
27	8539897		Jumper,
28	W10100830		Screw, 10-16 X 3/64
29	8539897		Jumper,
30	8565037		Door Inner
"	8575052	8565037	Door Inner
31	8565042		Door Outer
"	8575025		Door Outer
"	8575024		Door Outer
32	8573847	W10119087	Handle
"	W10050100	W10119089	Handle
"	8573848	W10119088	Handle
33	W10044490		Seal, Front Panel
34	8564457		Plug, Front Panel
"	8573008		Plug, Front Panel
"	8573005		Plug, Front Panel
35	344020	3401402	Cord, Power
36	3394083		Clip, Front Panel
37	238088	8066217	Hinge, Top
38	8547174		Idler And Pulley Assembly
39	8547168		Belt, Drive
40	8547166		Base, Motor
41	W10002600		Screw, 6-20 X 1 1/4
42	8578565		Pulley, 60 Hz
43	8566152	W10463866	Motor-Drve
44	660658		Clamp, Motor Mounting 343481 685441
45	8557890		Burner, Assembly 60 Hz
46	8565016		Gasket, Inner Door
47	8575030		Window, Outer Door
"	8575049		Window, Outer Door
"	8575050		Window, Outer Door
48	18849		Pad, Top Hinge