


Whirlpool WGD6400SW2 01 - TOP AND CONSOLE PARTS

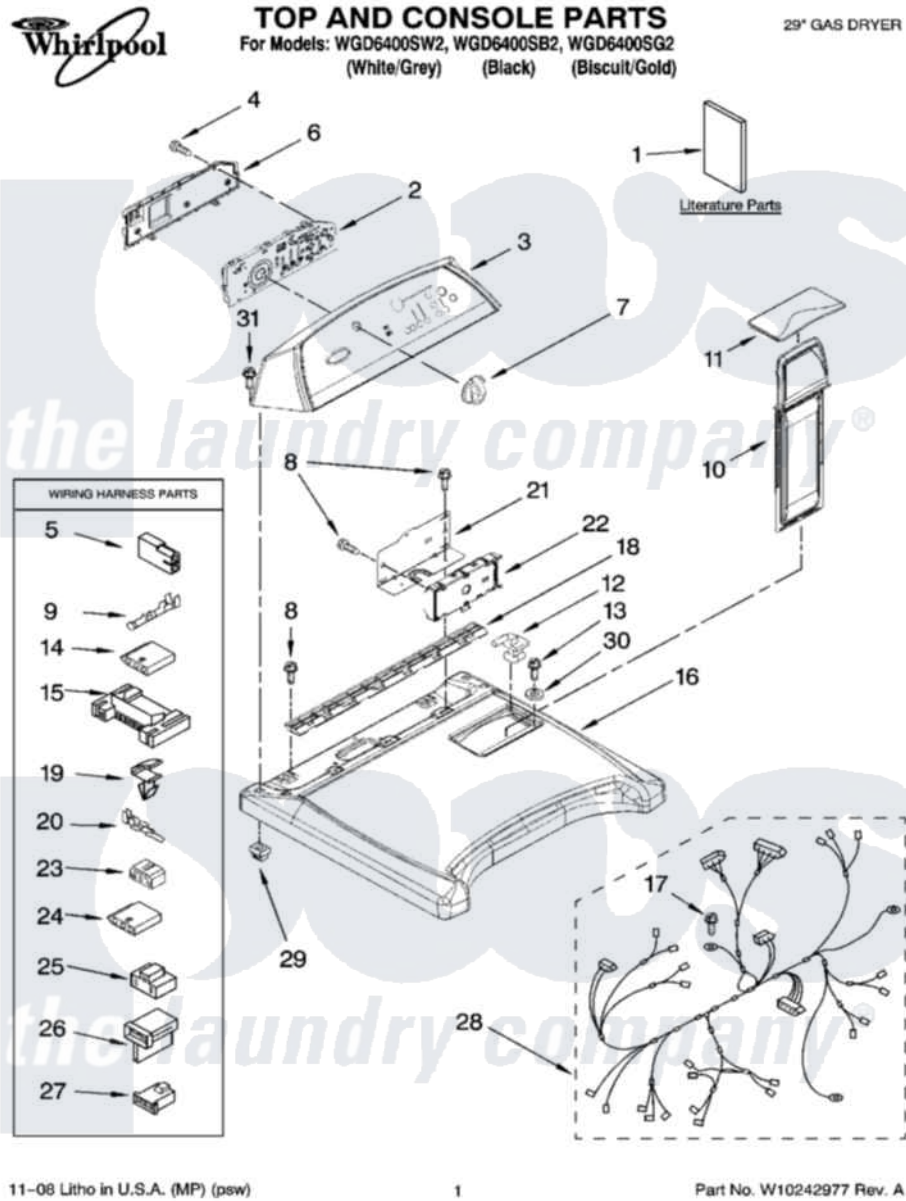

11-08 Litho in U.S.A. (MP) (psw)

1

Part No. W10242977 Rev. A

Whirlpool Residential Whirlpool WGD6400SW2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150650		Not Available	Guide, Quick Start
"	W10150626		Not Available	Use & Care Guide
"	W10054160		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8563974			Assembly, User Interface
3	W10110325			Panel, Console
"	W10110330			Panel, Console
"	W10110328			Panel, Console
4	W10003770			Screw, 6-19 X 1/2
5	717252			Receptacle, Terminal
6	8564265			Cover, Rear- User Interface
7	8574957			Knob, Assembly
"	8574959			Knob, Assembly

"	8574958		Knob, Assembly
8	337686	Not Available	SCREW, 8-18 X .500
9	94614		Terminal
10	8572270		Assembly, Lint Screen
11	W10168227		Cover, Lint Screen
"	W10044360		Cover, Lint Screen
"	W10168229		Cover, Lint Screen
12	W10044470		Hinge, RH
"	W10044480		Hinge, L.H.
13	3196537	3196557	Panel, Manifold
14	3936144		Do-It-Yourself Repair Manuals
15	3395683		Receptacle, Multi-Terminal
16	W10167866		Top Assembly
"	8565028		Top
"	8565027		Top
17	343641	681414	Screw, 10AB X 1/2
18	8558863		Bracket, Console
19	3394427		Clip-Harness
20	94613	596797	Terminal
21	8563853		Bracket, Machine Controller
22	W10111617		Control, Electronic
23	3347243		Block, Disconnect
24	353424		Plug, Terminal
25	3401144		Connector
26	3403499		Connector, 2-Position
27	3403498		Connector, 3-Position
28	W10111432		Harness, Wiring
29	W10112673		Screw, Grommet
30	237446	487596	Washer
31	W10131402		Screw, 8-18 X 1.370

