


**Whirlpool WGD6400SW2 04 - W10183825 BURNER ASSEMBLY,
OPTIONAL PARTS (NOT INCLUDED)**

W10183825 BURNER ASSEMBLY

For Models: WGD6400SW2, WGD6400SB2, WGD6400SG2
(White/Grey) (Black) (Biscuit/Gold)

USE WITH TYPE 1 - NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

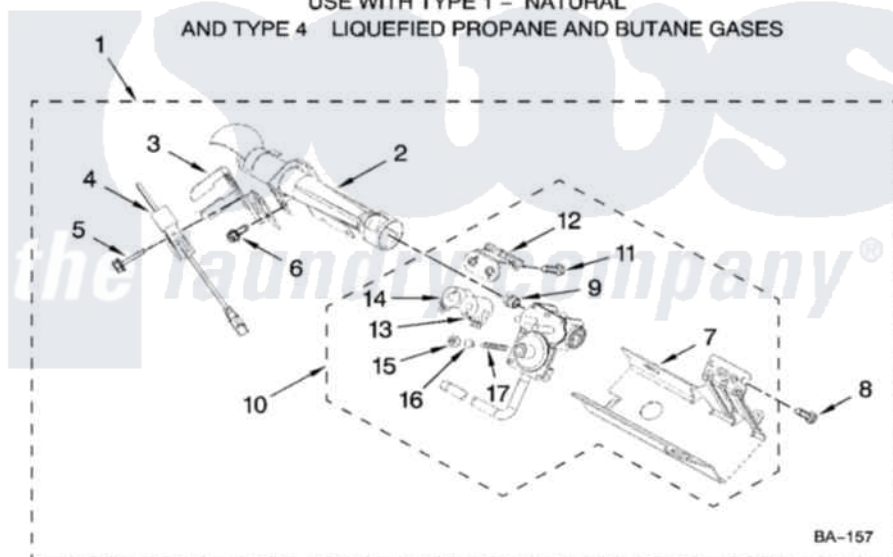

BA-157

W10242977

7

Whirlpool [Residential Whirlpool WGD6400SW2 Dryer Parts](#) Parts Diagram 04 - W10183825 BURNER ASSEMBLY,
OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10183825			Burner, Assembly 60 Hz
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	3390631			Screw, 10-16 X 3/8
7	W10183823			Bracket, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	8281924	W10503171		Gas Valve Serv Assembly Loop
11	694421			Screw, Bracket Mounting

12	8182790		Bracket, Coil
13	694540		Coil, 60 Hz
14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
	BLANK	Not Available	Following Parts Not Illustrated
"	49572	49572A	Conversion Kit To Type L.p.g.f
"	BLANK	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	W10071550	W10071550A	Dryer Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	72032		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	285006		Accessories Side Panel Kits Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

