


Whirlpool WGD6600VU1 01 - TOP AND CONSOLE PARTS

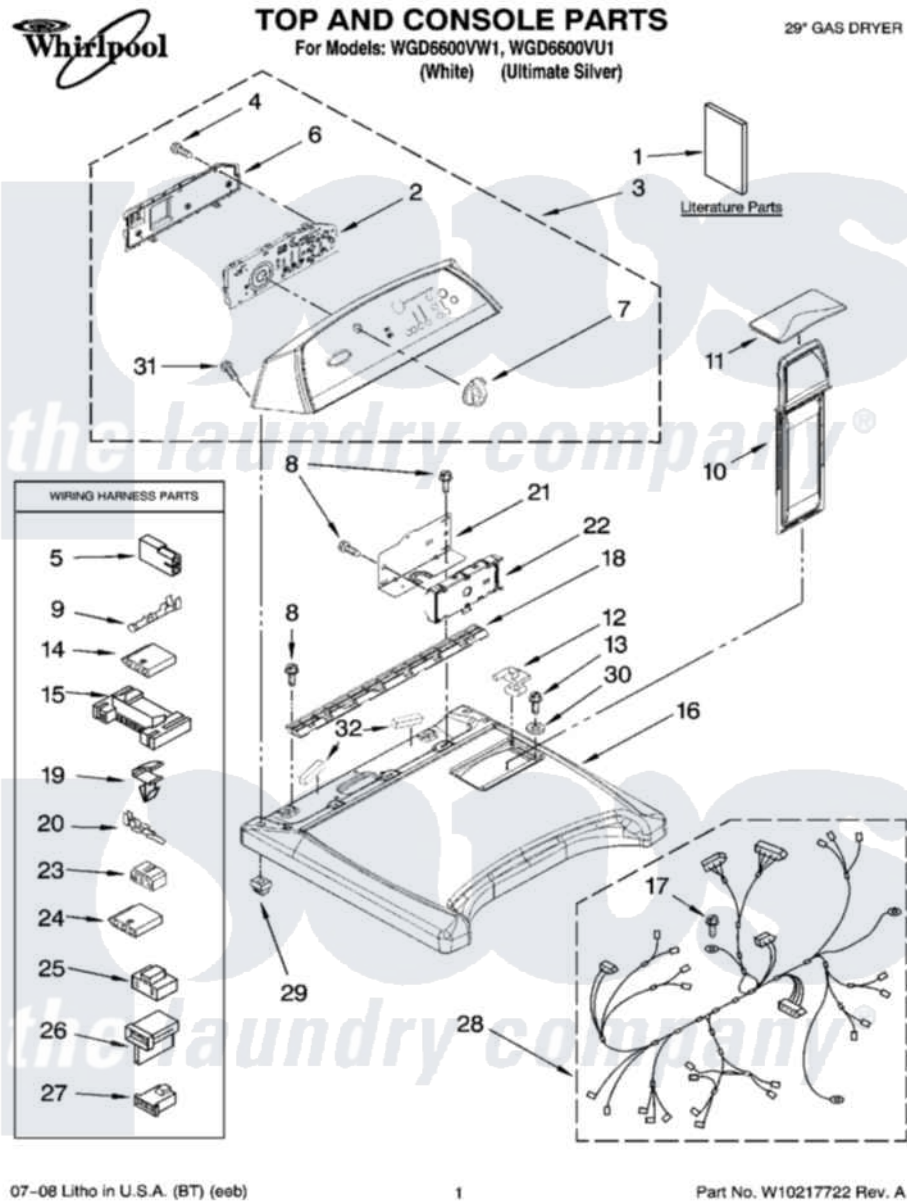

07-08 Litho in U.S.A. (BT) (eeb)

1

Part No. W10217722 Rev. A

Whirlpool [Residential Whirlpool WGD6600VU1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10164752		Not Available	Guide, Quick Start
"	W10150650		Not Available	Guide, Quick Start
"	W10156038		Not Available	Wiring Diagram
"	W10139322		Not Available	TIP SHEET DRYER STEAM
"	W10166439		Not Available	Performance, Tip Sheet
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	W10051165			Assembly, User Interface
3	W10146153			Console Assembly
"	W10183966			Console Assembly
4	W10003770			Screw, 6-19 X 1/2
5	717252			Receptacle, Terminal
6	8564265			Cover, Rear- User Interface
7	8574957			Knob, Assembly
"	W10183632			Knob, Control
8	337686		Not Available	SCREW, 8-18 X .500

9	94614		Terminal
10	8572270		Assembly, Lint Screen
11	W10168227		Cover, Lint Screen
"	W10158260		Cover, Lint Screen
12	W10044470		Hinge, RH
"	W10044480		Hinge, L.H.
13	3196537	3196557	Panel, Manifold
14	3936144		Do-It-Yourself Repair Manuals
15	3395683		Receptacle, Multi-Terminal
16	W10167866		Top Assembly
"	W10158257		Top Assembly
17	343641	681414	Screw, 10AB X 1/2
18	8558863		Bracket, Console
19	3394427		Clip-Harness
20	94613	596797	Terminal
21	8563853		Bracket, Machine Controller
22	W10111616		Control, Electronic
23	3347243		Block, Disconnect
24	353424		Plug, Terminal
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	W10141981		Harness, Wiring
29	W10112673		Screw, Grommet
30	237446	487596	Washer
31	W10131402		Screw, 8-18 X 1.370
32	W10183819		Seal-Foam Console

the laundry company[®]

the laundry company[®]