


Whirlpool WGD6600VW1 02 - CABINET PARTS

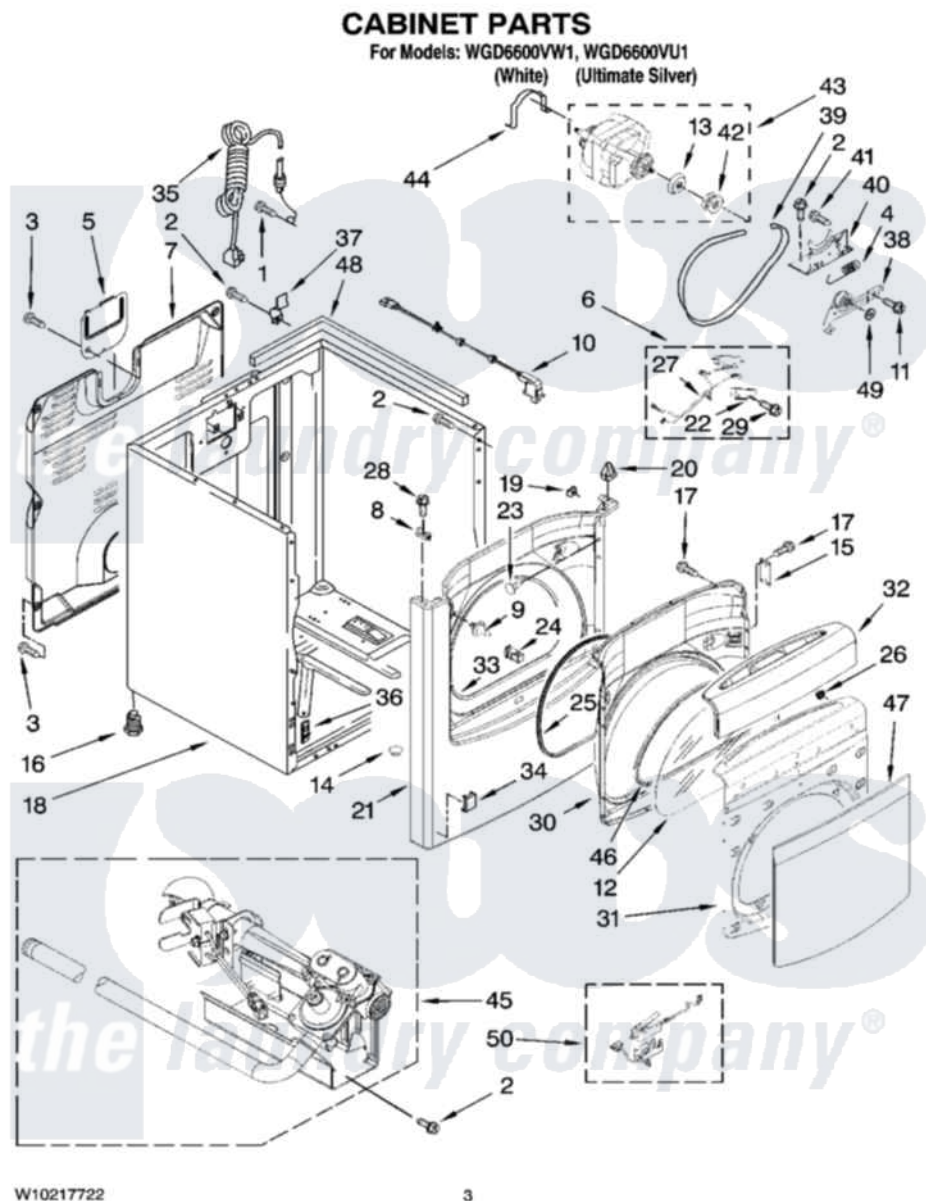

Whirlpool [Residential Whirlpool WGD6600VW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	3387374			Spring, Idler
5	8558833			Plate, Cover Terminal Block
6	8566208			Assembly, Switch
7	W10140148			Panel, Rear
8	8568303			Locator, Snap Down
9	8572983	W10295405		Strike
10	3978977	W10201787		Switch-Dor
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	8565015			Glass, Inner Door
13	8578538			Restrainer, Belt
14	8578560			Hole, Plug
15	8565018			Assembly, Hinge And Pin
"	W10158268			Assembly, Hinge And Pin

16	3392100	49621	Feet-Leveling
"	279810		Foot-Optional
17	342055	488627	Screw
18	W10183827	W10223154	Cabinet
"	W10183832	W10223156	Cabinet
19	W10007520		Clip, Ground
20	8576625		Lock, Front Top
21	8565033	W10174287	Panel
"	W10161496		Panel, Front
22	8564011		Bracket-Switch
23	3404413		Plug, Hinge Hole
"	W10144494		Plug-Hole
24	8572982	W10111905	Assembly, Door Catch
25	W10130493	W10239307	Seal-Door
26	308499		Nut-1/4 Hf Self-Thread
27	8539897		Jumper,
28	W10100830		Screw, 10-16 X 3/64
29	8539897		Jumper,
30	8565037		Door Inner
31	W10116925		Door, Outer
"	W10158278		Door Outer
32	W10111246	W10119087	Handle
"	W10159437		Handle, Door
33	W10044490		Seal, Front Panel
34	8564457		Plug, Front Panel
"	W10158267	W10223145	Panel
35	344020	3401402	Cord, Power
36	3394083		Clip, Front Panel
37	238088	8066217	Hinge, Top
38	8547174		Idler And Pulley Assembly
39	8547168		Belt, Drive
40	8547166		Base, Motor
41	W10002600		Screw, 6-20 X 1 1/4
42	8578565		Pulley, 60 Hz
43	8566152	W10463866	Motor-Drve
44	W10121316		Plug, Multivent
45	W10183825		Burner, Assembly 60 Hz
46	W10076060		Gasket, Inner Door
47	8575030		Window, Outer Door
"	W10158281		Window Outer
48	W10157932		Seal, Foam Cabinet
49	W10121334		Washer, Thrust
50	8564010		Assembly, Switch And Actuator