


Whirlpool WGD7300XW0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

27" ELECTRIC DRYER

For Model: WGD7300XW0
(White)

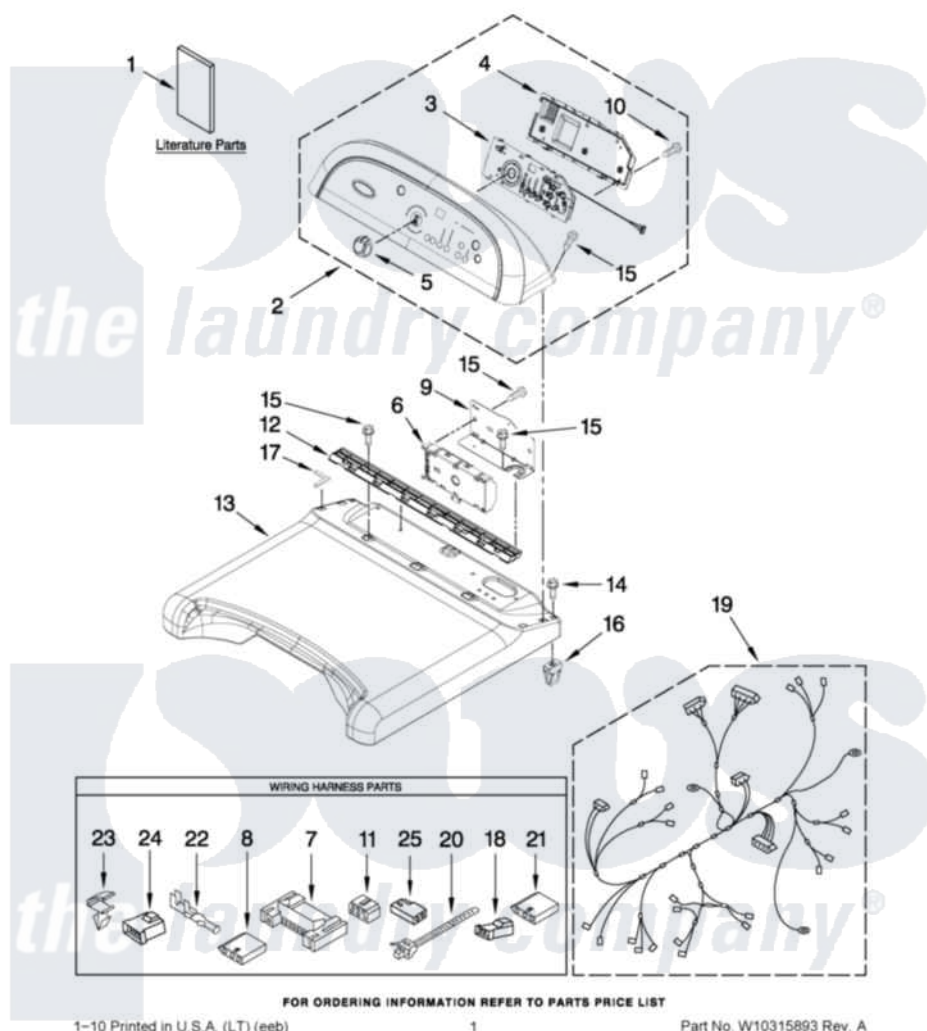

1-10 Printed in U.S.A. (LT) (eeb)

1

Part No. W10315893 Rev. A

[Whirlpool Residential Whirlpool WGD7300XW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10301481		Not Available	TECH, SHEET
"	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10261614		Not Available	INSTALLATION INSTRUCTION (ENGLISH)
2	W10298648			Console Assembly
3	W10298628			Assembly, User Interface
4	8564265			Cover, Rear- User Interface
5	W10211335			Knob, Assembly
6	W10294316			Control Electronic
7	3395683			Receptacle, Multi-Terminal
8	353424			Plug, Terminal
9	W10211337			Bracket, Machine Controller
10	W10003770			Screw, 6-19 X 1/2
11	3347243			Block, Disconnect
12	8558863			Bracket, Console
13	W10211339			Top

14	W10131402		Screw, 8-18 X 1.370
15	337686	Not Available	SCREW, 8-18 X .500
16	W10112673		Screw, Grommet
17	W10185554		Seal, Foam Top
18	3403499		Connector, 2-Postion
19	W10319800		Harness, Wiring Main
20	3391018		Tie Cable
21	3936144		Do-It-Yourself Repair Manuals
22	94614		Terminal
23	3394427		Clip-Harness
24	3403498		Connector, 3-Position
25	717252		Receptacle, Terminal

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]