


Whirlpool WGD7400XW0 01 - TOP AND CONSOLE PARTS

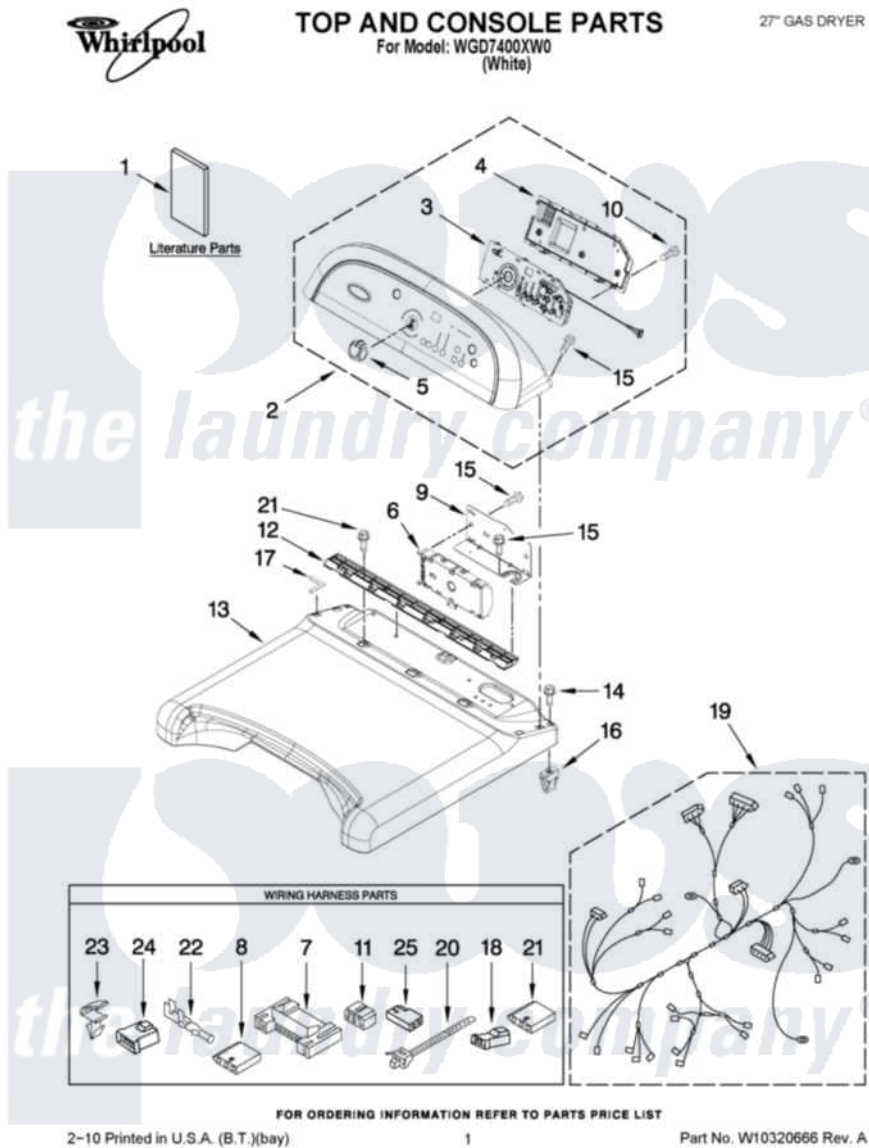

Whirlpool Residential Whirlpool WGD7400XW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10301481		Not Available	TECH, SHEET
"	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10315012		Not Available	GUIDE, USE & CARE (SPANISH)
"	W10261614		Not Available	INSTALLATION INSTRUCTION (ENGLISH)
"	W10267631		Not Available	INSTALLATION INSTRUCTION (SPANISH)
2	W10298647			Console Assembly
3	W10298627			Assembly, User Interface
4	8564265			Cover, Rear- User Interface
5	W10211335			Knob, Assembly
6	W10294317			Control Electronic
7	3395683			Receptacle, Multi-Terminal
8	353424			Plug, Terminal
9	W10211337			Bracket, Machine Controller
10	W10003770			Screw, 6-19 X 1/2

11	3347243		Block, Disconnect
12	8558863		Bracket, Console
13	W10211339		Top
14	W10131402		Screw, 8-18 X 1.370
15	337686	Not Available	SCREW, 8-18 X .500
16	W10112673		Screw, Grommet
17	W10185554		Seal, Foam Top
18	3403499		Connector, 2-Postion
19	W10111059	W10319803	Harness, Wiring Main
20	3391018		Tie Cable
21	3936144		Do-It-Yourself Repair Manuals
22	94614		Terminal
23	3394427		Clip-Harness
24	3403498		Connector, 3-Position
25	717252		Receptacle, Terminal

