


# Whirlpool WGD7800XL0 01 - TOP AND CONSOLE PARTS

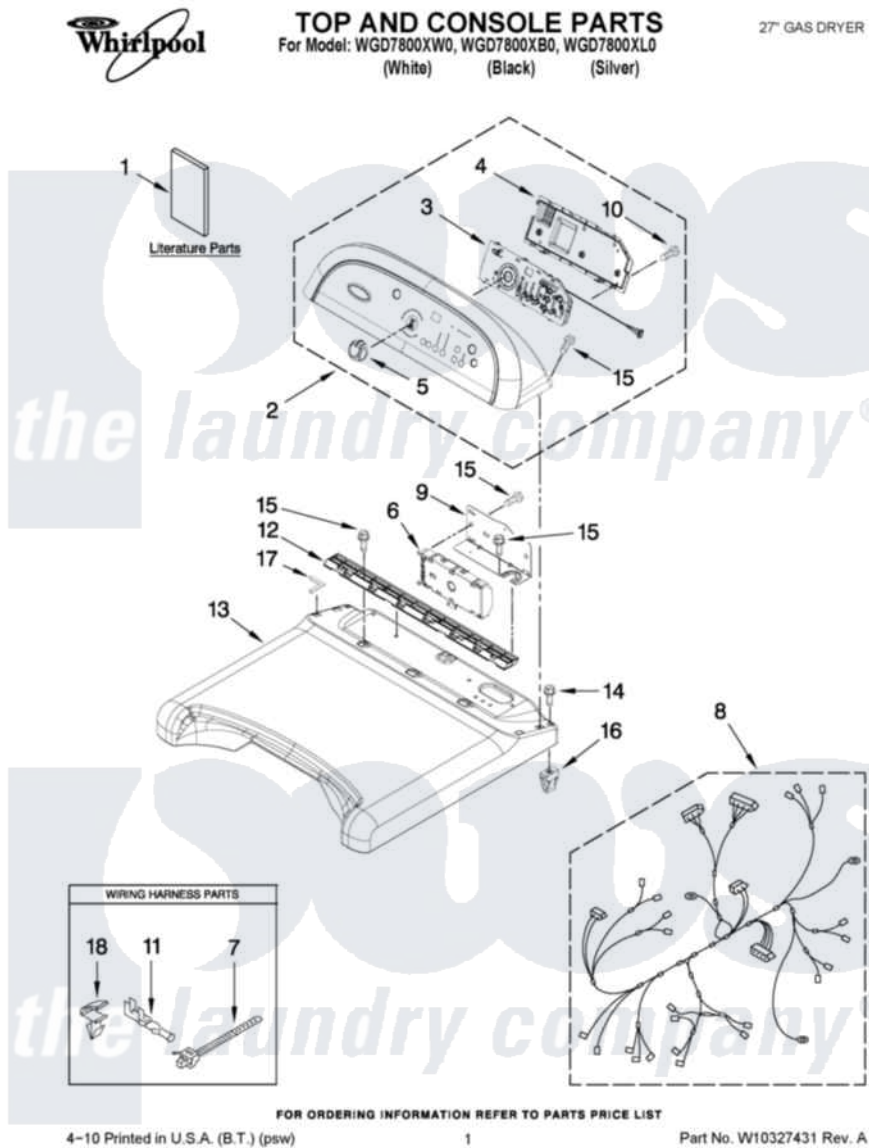

Whirlpool [Residential Whirlpool WGD7800XL0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10301481		Not Available	TECH, SHEET
"	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10315012		Not Available	GUIDE, USE & CARE (SPANISH)
"	W10261614		Not Available	INSTALLATION INSTRUCTION (ENGLISH)
"	W10267631		Not Available	INSTALLATION INSTRUCTION (SPANISH)
2	<a href="#">W10298643</a>			Console Assembly
"	<a href="#">W10298644</a>			Console Assembly
"	<a href="#">W10298645</a>			Console Assembly
3	<a href="#">W10298625</a>			Assembly, User Interface
4	<a href="#">8564265</a>			Cover, Rear- User Interface
5	<a href="#">W10211335</a>			Knob, Assembly
6	<a href="#">W10294317</a>			Control Electronic
7	<a href="#">3391018</a>			Tie Cable
8	<a href="#">W10319805</a>			Harness, Wiring Main

9	<a href="#">W10211337</a>		Bracket, Machine Controller
10	<a href="#">W10003770</a>		Screw, 6-19 X 1/2
11	<a href="#">94614</a>		Terminal
12	<a href="#">8558863</a>		Bracket, Console
13	<a href="#">W10211339</a>		Top
"	<a href="#">W10211340</a>		Top
"	<a href="#">W10211341</a>		Top
14	<a href="#">W10131402</a>		Screw, 8-18 X 1.370
15	337686	Not Available	SCREW, 8-18 X .500
16	<a href="#">W10112673</a>		Screw, Grommet
17	<a href="#">W10185554</a>		Seal, Foam Top
18	<a href="#">3394427</a>		Clip-Harness

**Joos**  
*the laundry company*<sup>®</sup>

**Joos**  
*the laundry company*<sup>®</sup>

**Joos**  
*the laundry company*<sup>®</sup>