


Whirlpool WGD8200YW1 02 - CABINET PARTS

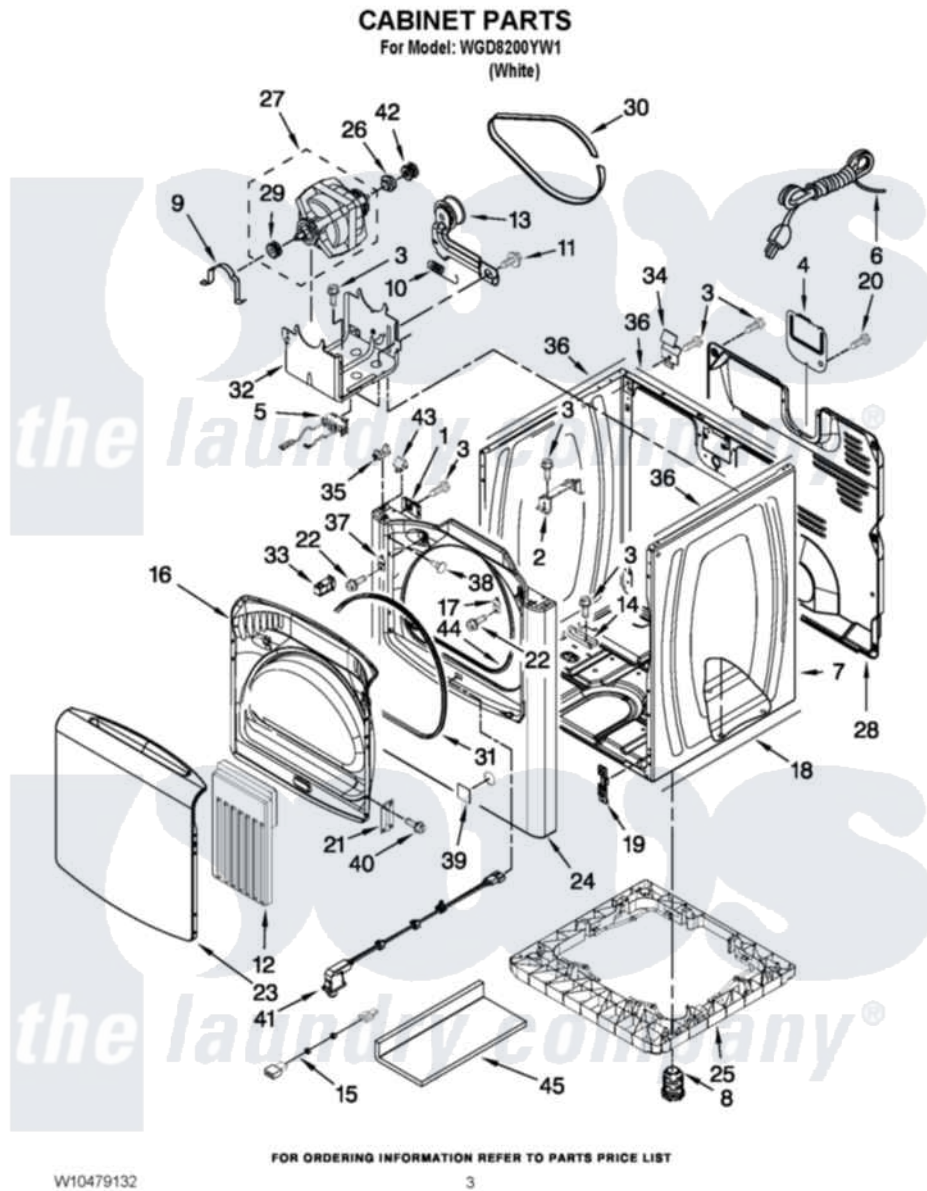

Whirlpool [Residential Whirlpool WGD8200YW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10007520			Clip, Ground
2	8544753			Bracket, Burner
3	3390631			Screw, 10-16 X 3/8
4	8558833			Plate, Cover Terminal Block
5	W10314253			Switch, Assembly Broken Belt
6	W10440460			Cord, Power
7	W10183827	W10223154		Cabinet
8	W10363894			Foot, Dryer
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	8558850			Filler-Big Mouth Axial Door
13	8547160			Pulley Assembly
14	W10201446			Bracket-Gas Pipe
15	W10401808			Jumper, Door

16	8571356		Door Inner
17	W10111888		Plug, Strike
18	W10224768		Seal, Foam Spill Guard
19	3394083		Clip, Front Panel
20	8533974	4331106	Screw, No.10-32 X 7/16
21	8579717		Assembly, Hinge
22	3400805		Screw, 8-18 X 3/64
23	8571361		Door, Outer
24	W10111883	W10312757	Panel
25	W10363887		Riser-Full
26	3393657		Restrainer, Belt
27	8547170	W10448896	Motordrve
28	8558830	Not Available	Panel, Rear
29	8544743		Pulley, Blower
30	8547157		Belt, Drive
31	W10221653	W10239307	Seal-Door
32	8547158		Bracket, Motor
33	W10111905		Assembly, Door Catch
34	238088	8066217	Hinge, Top
35	8568303		Locator, Snap Down
36	W10157932		Seal, Foam Cabinet
37	W10111906	W10295405	Strike
38	W10144494		Plug-Hole
39	8564457		Plug, Front Panel
40	342055	488627	Screw
41	W10318609		Switch, Assembly Door
42	8547171		Pulley,
43	8576625		Lock, Front Top
44	W10044490		Seal, Front Panel
45	W10215725		Cover, Door Switch

