


# Whirlpool WGD8300SB2 01 - TOP AND CONSOLE PARTS

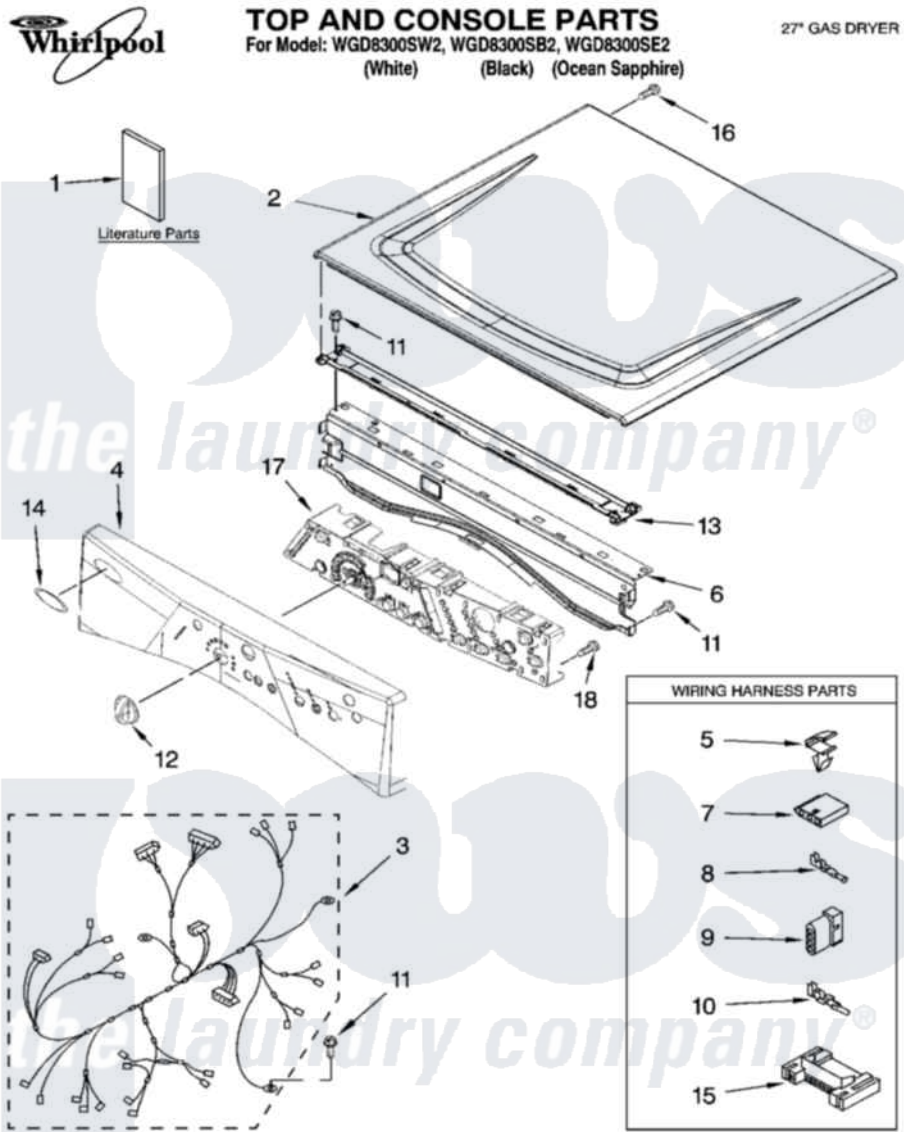

11-08 Printed in U.S.A. (MP) (psw)

1

Part No. W10177419 Rev. B

Whirlpool Residential Whirlpool WGD8300SB2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10151582		Not Available	Use & Care Guide
"	8578904		Not Available	Guide, Quick Start
"	8578834		Not Available	Tech Sheet
2	8563730	<a href="#">W10336080</a>		Top
"	<a href="#">W10129703</a>			Top
"	<a href="#">W10174561</a>			Top
3	<a href="#">W10110973</a>			Harness, Main
4	<a href="#">W10099598</a>			Panel, Console
"	<a href="#">W10099631</a>			Panel, Console
"	<a href="#">W10182077</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8565237</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal

11	3390647	<a href="#">488729</a>	Screw
12	8574974	<a href="#">8574963</a>	Knob, Control
"	<a href="#">W10129067</a>		Knob, Control
"	<a href="#">W10182079</a>		Knob, Assembly
13	<a href="#">8574968</a>		Screw, 10-16 X 1/2
14	W10117943	<a href="#">8303811</a>	Badge, Assembly
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">3400238</a>		Screw, 2-28 X 1/2
17	<a href="#">8571955</a>		Assembly, User Interface
18	<a href="#">3400238</a>		Screw, 2-28 X 1/2

