


Whirlpool WGD8300SE2 01 - TOP AND CONSOLE PARTS

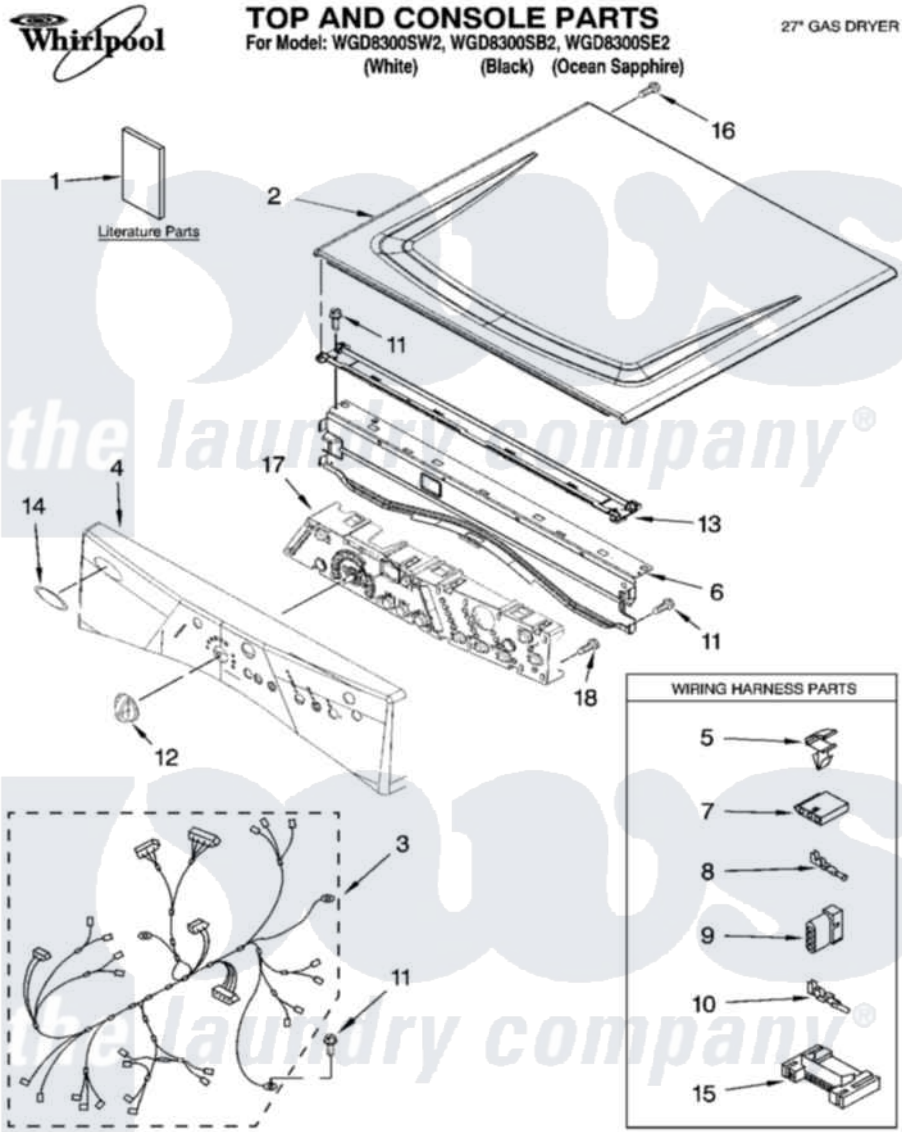

11-08 Printed in U.S.A. (MP) (psw)

1

Part No. W10177419 Rev. B

Whirlpool Residential Whirlpool WGD8300SE2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10151582		Not Available	Use & Care Guide
"	8578904		Not Available	Guide, Quick Start
"	8578834		Not Available	Tech Sheet
2	8563730	W10336080		Top
"	W10129703			Top
"	W10174561			Top
3	W10110973			Harness, Main
4	W10099598			Panel, Console
"	W10099631			Panel, Console
"	W10182077			Panel, Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal

11	3390647	488729	Screw
12	8574974	8574963	Knob, Control
"	W10129067		Knob, Control
"	W10182079		Knob, Assembly
13	8574968		Screw, 10-16 X 1/2
14	W10117943	8303811	Badge, Assembly
15	3395683		Receptacle, Multi-Terminal
16	3400238		Screw, 2-28 X 1/2
17	8571955		Assembly, User Interface
18	3400238		Screw, 2-28 X 1/2

