


Whirlpool WGD8300SW1 05 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

DOOR PARTS
For Model: WGD8300SW1, WGD8300SB1
(White) (Black)

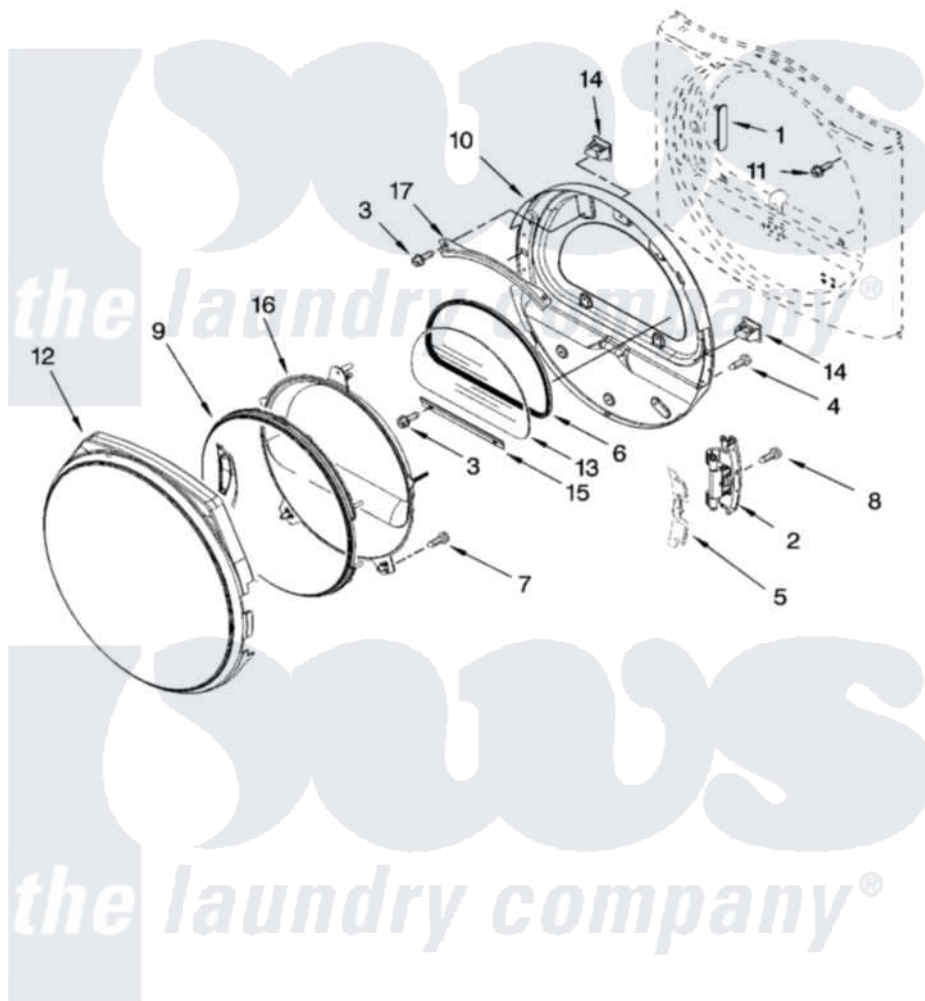

W10159012

9

Whirlpool [Residential Whirlpool WGD8300SW1 Dryer Parts](#) Parts Diagram 05 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8565119			Label, Hinge Hole Cover
2	8578887			Door Hinge Assembly
3	3393258	3373329D		Screw
4	8534044			Screw, 8-18 X 1/2
5	8571839			Cover, Hinge
"	W10129722			Cover, Hinge
6	8579663			Seal, Window
7	8534022			Screw, 8-18 X 1/16
8	W10017850	280203		Screw-Kit
9	W10044180			Door Intermediate Stationary
10	8578933	W10164062		Door Assembly
11	355515			Screw, 8-18 X 11/16
12	8571836			Door Ring
"	W10129706			Door Ring
13	8565117	W10286878		Window

14	690081	279570	Latch
15	8519354		Retainer-Window
16	W10108900		Door Intermediate Stationary
"	W10129704		Door Intermediate Stationary
17	8519356		Retainer-Window
	72017		Paint, Touch-Up
"	72302	Not Available	PAINT, TOUCH-UP (1/2oz.) (Black)
"	350930		Paint, Pressurized Spray B
"	786020	Not Available	PAINT, PRESSURIZED SPRAY (12 oz.) (Black)
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	786302	Not Available	PAINT, BULK (1 qt.) (Black (Uncut))
"	BLANK	Not Available	ACCESSORY PARTS
"	8529894	346764	Kit, Hold Down
"	8563738	W10121663	Dryer Rack
"	8522199		Accessory Parts
"	80047		PAINT, BULK (1 QT.) (KIT, DRYER REPAIR)

