


Whirlpool WGD8410SW0 01 - TOP AND CONSOLE PARTS

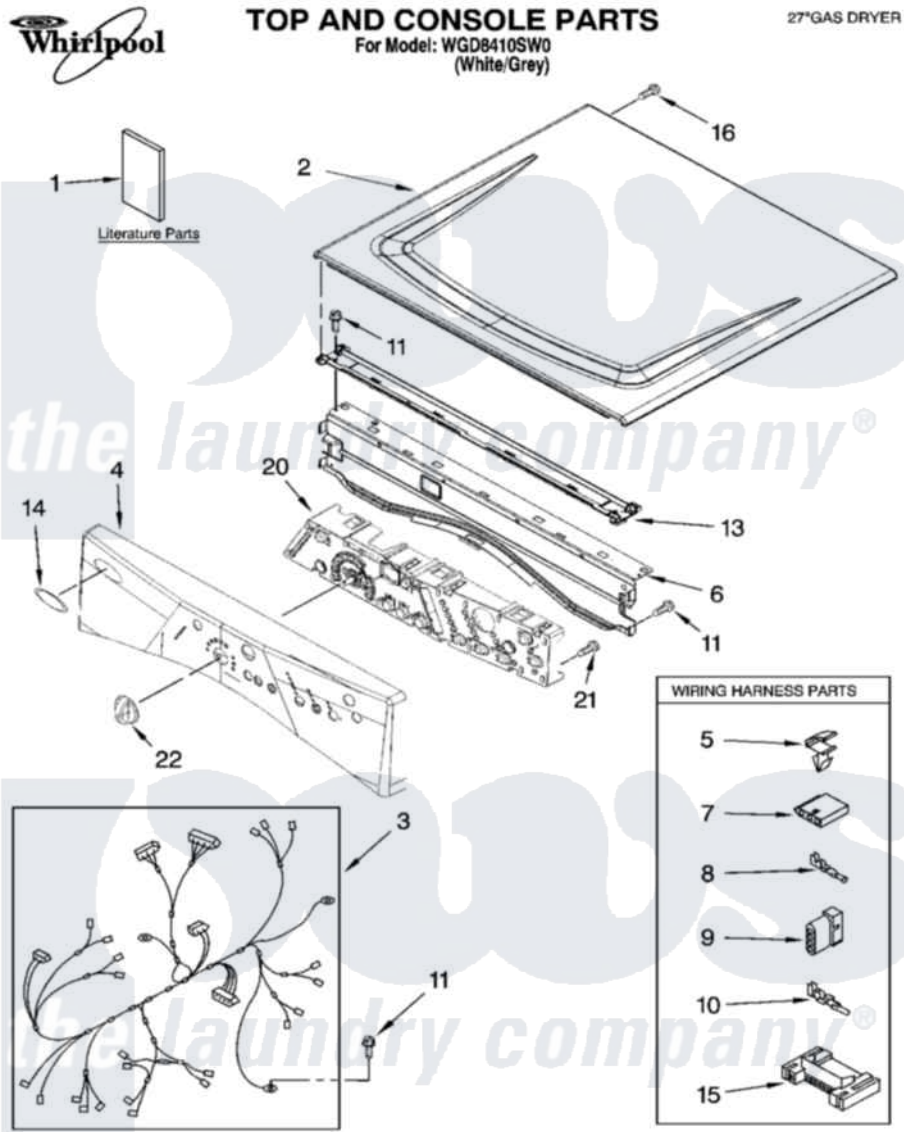

6-06 Printed in U.S.A. (LT)

1

Part No. 8181409

Whirlpool Residential Whirlpool WGD8410SW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10057260		Not Available	Use & Care Guide
"	W10057240		Not Available	Guide, Quick Start
"	W10068670		Not Available	Tech Sheet
2	8563730	W10336080		Top
3	8579741			Harness, Main
4	8571907	W10099600		Panel, Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
13	8574968			Screw, 10-16 X 1/2
14	8303811			Badge, Assembly
15	3395683			Receptacle, Multi-Terminal

16

[3400238](#)

Screw, 2-28 X 1/2

20

[8571920](#)

Assembly, User Interface

21

[3400238](#)

Screw, 2-28 X 1/2

22

8574955

[8574957](#)

Knob, Assembly

