


# Whirlpool WGD8410SW1 01 - TOP AND CONSOLE PARTS

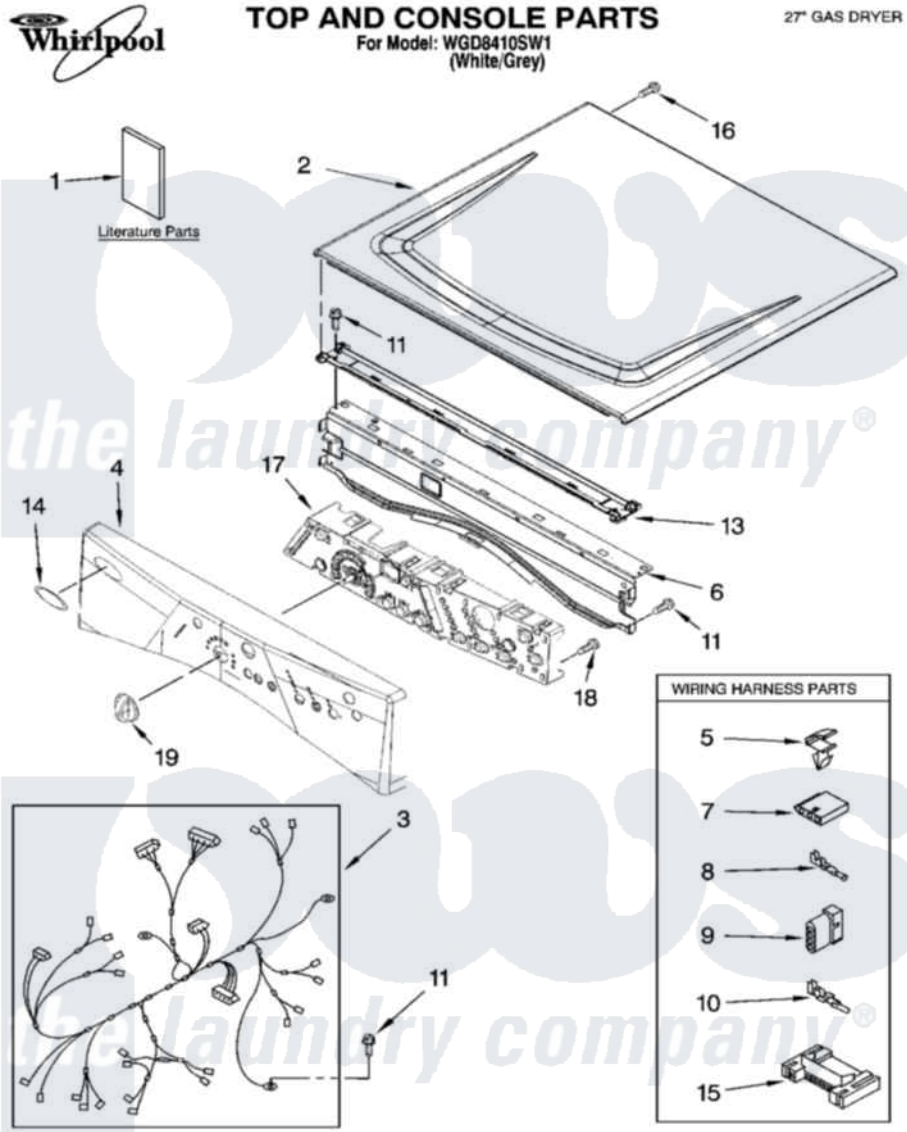

8-07 Printed in U.S.A. (LT)

1

Part No. W10159722 Rev. A

Whirlpool Residential Whirlpool WGD8410SW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10057260		Not Available	Use & Care Guide
"	W10057240		Not Available	Guide, Quick Start
"	W10068670		Not Available	Tech Sheet
2	8563730	<a href="#">W10336080</a>		Top
3	<a href="#">W10110973</a>			Harness, Main
4	<a href="#">W10099600</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8565237</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw
13	<a href="#">8574968</a>			Screw, 10-16 X 1/2
14	W10117943	<a href="#">8303811</a>		Badge, Assembly
15	<a href="#">3395683</a>			Receptacle, Multi-Terminal

16

[3400238](#)

Screw, 2-28 X 1/2

17

[8571920](#)

Assembly, User Interface

18

[3400238](#)

Screw, 2-28 X 1/2

19

[8574963](#)

Knob, Control

