


Whirlpool WGD9051YW1 02 - CABINET PARTS

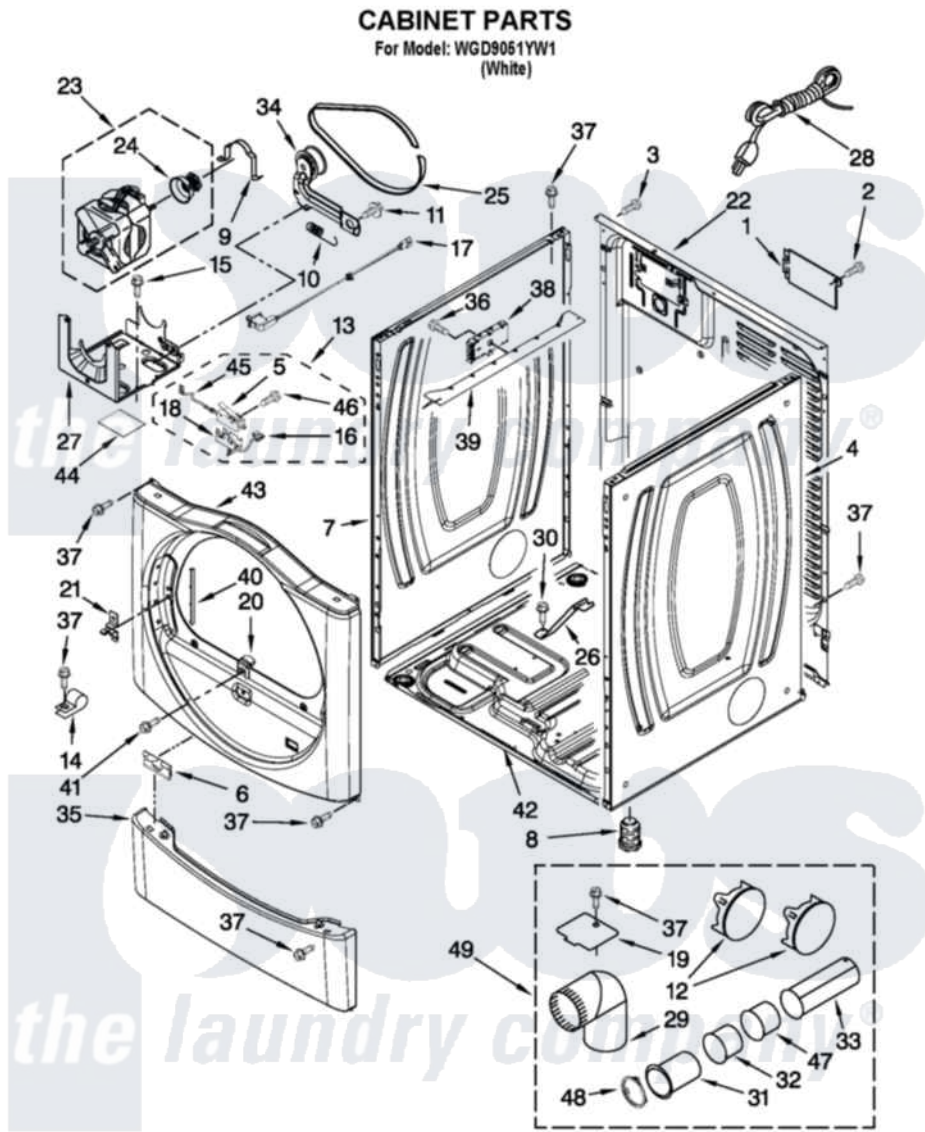

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10484437

3

Whirlpool [Residential Whirlpool WGD9051YW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8317340			Cover, Terminal Block
2	3390814	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	4331106		Screw, No.10-32 X 7/16
4	8565048			Panel, Side
5	8564010			Assembly, Switch And Actuator
6	8519459			Clip, Toe Panel
7	8565054			Panel, Side
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	W10404617			Plug, Multivent
13	W10155571			Switch, Assembly

14	3978776		Bracket, Gas Pipe Switch
15	343641	681414	Screw, 10AB X 1/2
16	8539892		Wire-Motor To Belt Switch
17	W10318609		Switch, Assembly Door
18	8564011		Bracket-Switch
19	W10354249		Plate, Cover
20	8565083		Ramp, Door
21	8565122		Strike, Door
22	8565059		Panel, Rear
23	W10139766	W10396034	Motor Assembly 60 Hz
24	3394341	W10299847	Pulley-Motor
25	W10131172		Belt, Drive
26	8529757		Bracket, Burner
27	W10135695		Bracket, Motor
28	W10440461	3401402	Cord, Power
29	W10416072		Not Available 4" - 90° ELBOW
30	693995		Screw, Hex Head
31	8563747		Exhaust Pipe Medium Pipe
32	W10331278		Exhaust Pipe
33	8563749		Exhaust Pipe
34	W10344192		Idler Assembly
35	8540621		Panel, Toe
36	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
37	3390647	488729	Screw
38	W10450081		Control Board
39	8563727		Bracket, Control
40	W10085210		Label-Hinge Hole Cover Front Panel
41	3357011	308685	Side Trim)
42	8565046		(BROKEN BELT BASE, CABINET SWITCH)
43	W10251264		Front Panel Assembly
44	W10212660		Pad, Sound Dampening
45	W10167613		Wire, Belt Switch
46	W10002600		Screw, 6-20 X 1 1/4
47	W10331277		Not Available EXHAUST PIPE (SHORT)
48	W10344699		Collar, Duct
NI	W10470674		Dryer Exhaust Kit

the laundry company®