


# Whirlpool WGD9270XL1 01 - TOP AND CONSOLE PARTS

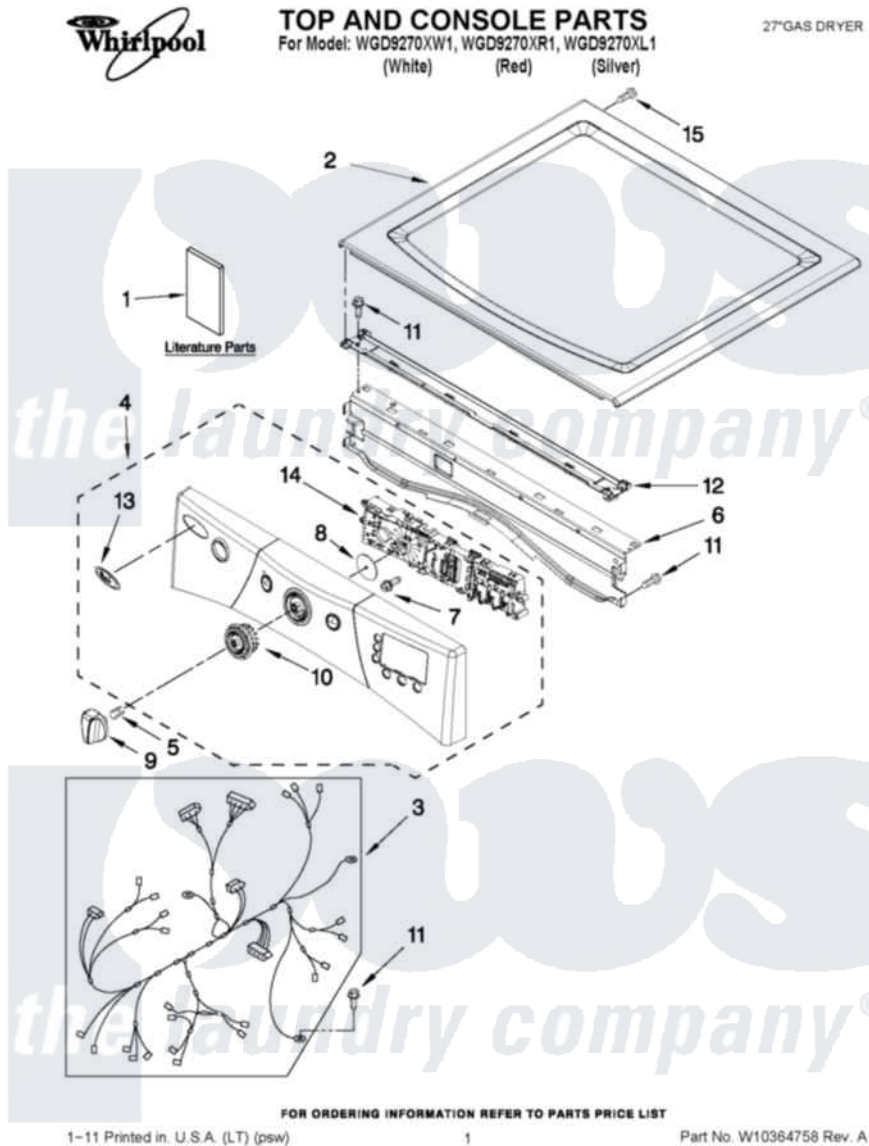

Whirlpool Residential Whirlpool WGD9270XL1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10294025		Not Available	TECH SHEET
"	W10240584		Not Available	INSTALLATION, INSTRUCTION
2	<a href="#">W10336080</a>			Top
"	<a href="#">W10336090</a>			Top
"	<a href="#">W10336091</a>			Top
3	<a href="#">W10278758</a>			Harness, Main
4	W10329850	<a href="#">W10215462</a>		Panel, Console
"	W10329852	<a href="#">W10215463</a>		Panel, Console
"	W10329851	<a href="#">W10215464</a>		Panel, Console
5	<a href="#">W10153920</a>			Spring, Knob
6	<a href="#">8565237</a>			Bracket, Console
7	<a href="#">W10006580</a>			Screw, M3-1.12 X12 Pn 6l Spl
8	<a href="#">8572039</a>			Seal, User Interface
9	<a href="#">W10215781</a>			Knob Assembly
"	<a href="#">W10247262</a>			Knob Assembly

10	<a href="#">W10237301</a>		Cycle, Light Guide
11	3390647	<a href="#">488729</a>	Screw
12	<a href="#">W10266747</a>		Channel-Water, Dryer
13	W10117943	<a href="#">8303811</a>	Badge, Assembly
14	<a href="#">W10215475</a>		Assembly, User Interface
15	<a href="#">3400238</a>		Screw, 2-28 X 1/2

