


Whirlpool WGD9270XR1 01 - TOP AND CONSOLE PARTS

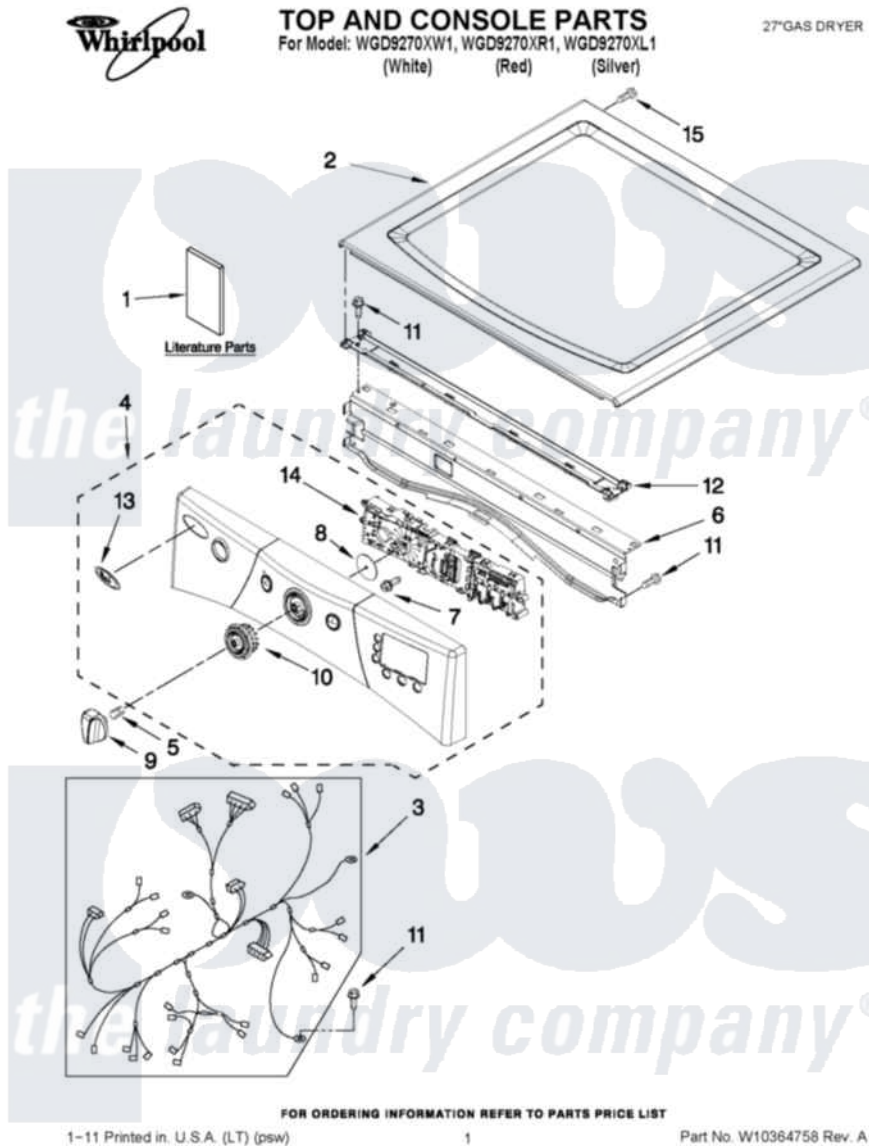

Whirlpool Residential Whirlpool WGD9270XR1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10294025		Not Available	TECH SHEET
"	W10240584		Not Available	INSTALLATION, INSTRUCTION
2	W10336080			Top
"	W10336090			Top
"	W10336091			Top
3	W10278758			Harness, Main
4	W10329850	W10215462		Panel, Console
"	W10329852	W10215463		Panel, Console
"	W10329851	W10215464		Panel, Console
5	W10153920			Spring, Knob
6	8565237			Bracket, Console
7	W10006580			Screw, M3-1.12 X12 Pn 6l Spl
8	8572039			Seal, User Interface
9	W10215781			Knob Assembly
"	W10247262			Knob Assembly

10	W10237301		Cycle, Light Guide
11	3390647	488729	Screw
12	W10266747		Channel-Water, Dryer
13	W10117943	8303811	Badge, Assembly
14	W10215475		Assembly, User Interface
15	3400238		Screw, 2-28 X 1/2

