


# Whirlpool WGD9270XW1 01 - TOP AND CONSOLE PARTS

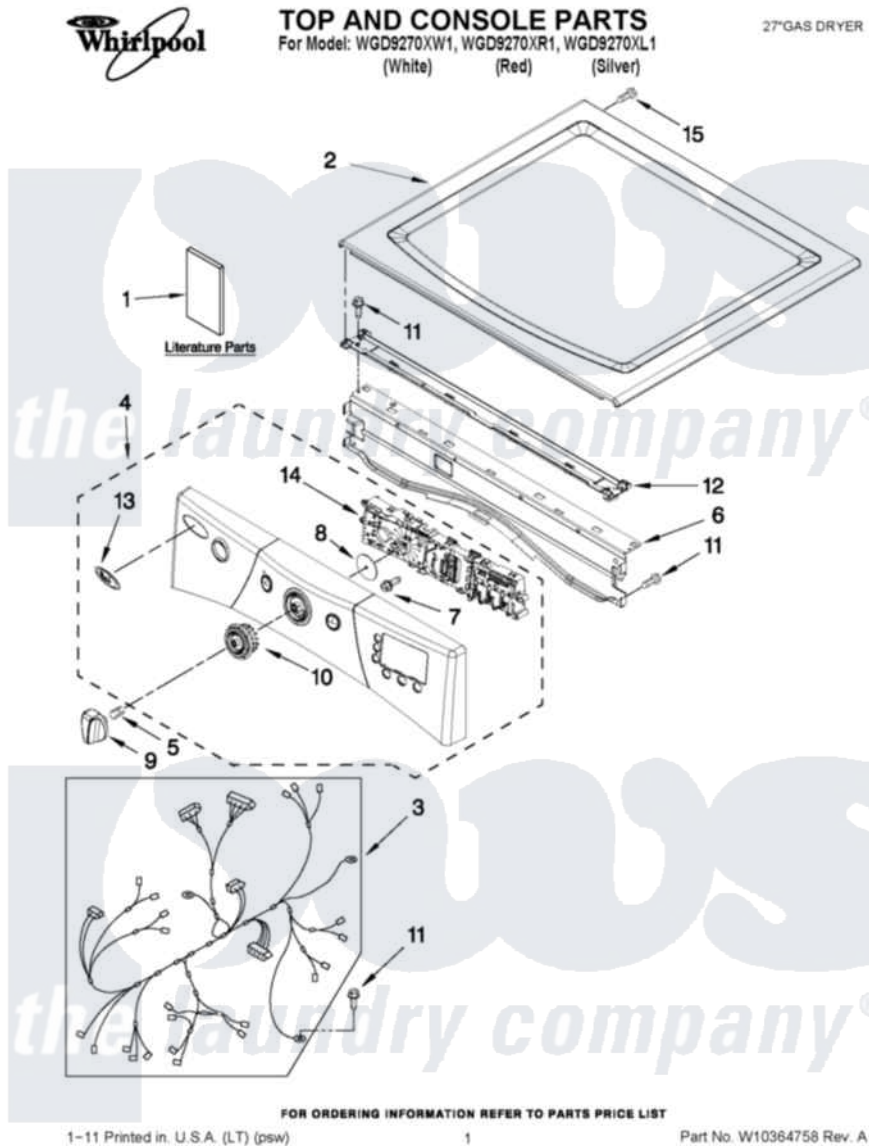

Whirlpool Residential Whirlpool WGD9270XW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

| Item | Original Part Number      | Replaced By               | Status        | Part Description             |
|------|---------------------------|---------------------------|---------------|------------------------------|
| 1    | W10293937                 |                           | Not Available | USE & CARE GUIDE             |
| "    | W10294025                 |                           | Not Available | TECH SHEET                   |
| "    | W10240584                 |                           | Not Available | INSTALLATION, INSTRUCTION    |
| 2    | <a href="#">W10336080</a> |                           |               | Top                          |
| "    | <a href="#">W10336090</a> |                           |               | Top                          |
| "    | <a href="#">W10336091</a> |                           |               | Top                          |
| 3    | <a href="#">W10278758</a> |                           |               | Harness, Main                |
| 4    | W10329850                 | <a href="#">W10215462</a> |               | Panel, Console               |
| "    | W10329852                 | <a href="#">W10215463</a> |               | Panel, Console               |
| "    | W10329851                 | <a href="#">W10215464</a> |               | Panel, Console               |
| 5    | <a href="#">W10153920</a> |                           |               | Spring, Knob                 |
| 6    | <a href="#">8565237</a>   |                           |               | Bracket, Console             |
| 7    | <a href="#">W10006580</a> |                           |               | Screw, M3-1.12 X12 Pn 6l Spl |
| 8    | <a href="#">8572039</a>   |                           |               | Seal, User Interface         |
| 9    | <a href="#">W10215781</a> |                           |               | Knob Assembly                |
| "    | <a href="#">W10247262</a> |                           |               | Knob Assembly                |

|    |                           |                         |                          |
|----|---------------------------|-------------------------|--------------------------|
| 10 | <a href="#">W10237301</a> |                         | Cycle, Light Guide       |
| 11 | 3390647                   | <a href="#">488729</a>  | Screw                    |
| 12 | <a href="#">W10266747</a> |                         | Channel-Water, Dryer     |
| 13 | W10117943                 | <a href="#">8303811</a> | Badge, Assembly          |
| 14 | <a href="#">W10215475</a> |                         | Assembly, User Interface |
| 15 | <a href="#">3400238</a>   |                         | Screw, 2-28 X 1/2        |

