


# Whirlpool WGD9400SW3 01 - TOP AND CONSOLE PARTS

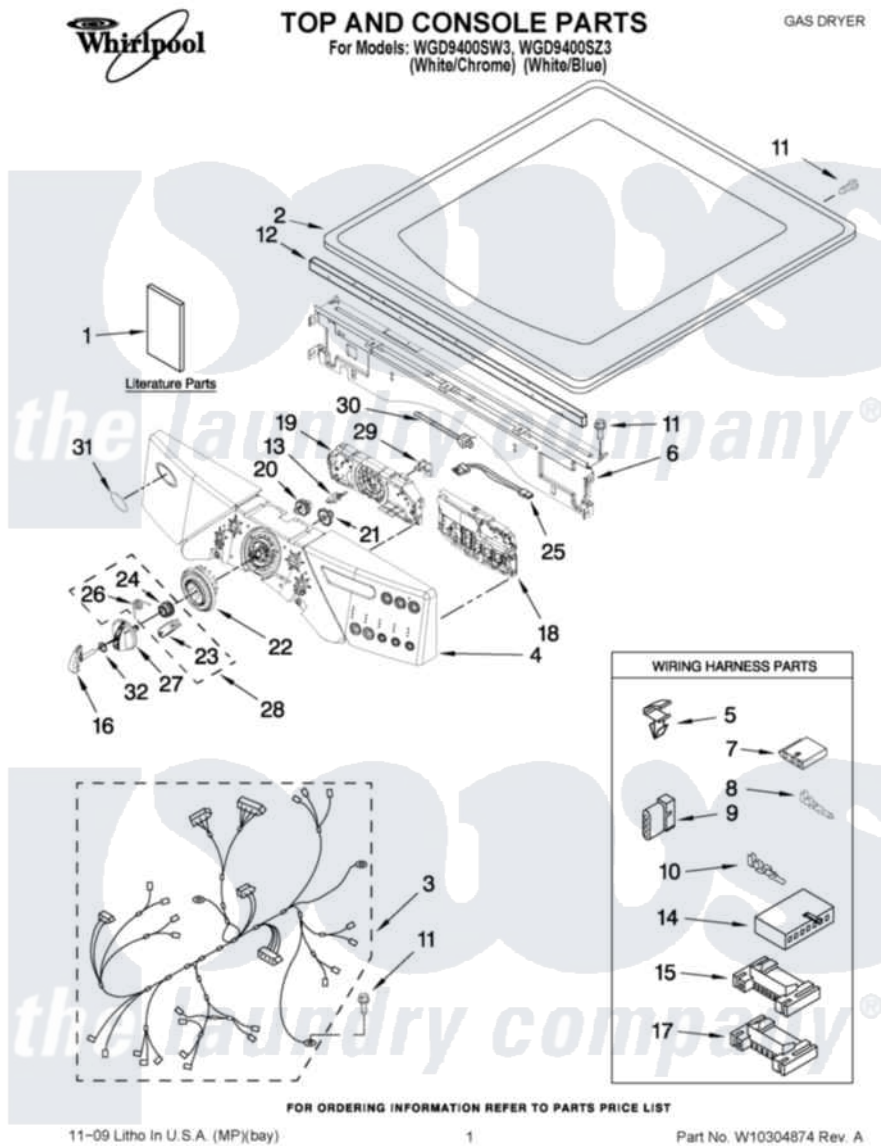

Whirlpool Residential Whirlpool WGD9400SW3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10224575		Not Available	USE & CARE GUIDE
"	W10258369		Not Available	TECH SHEET
"	W10255469		Not Available	INSTALLATION INSTRUCTIONS
2	3980634	<a href="#">W10117263</a>		Top
3	<a href="#">W10111062</a>			Harness, Main
4	<a href="#">W10246730</a>			Panel, Console And 31)
"	<a href="#">W10246731</a>			Panel, Console And 31)
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">W10215656</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw
12	<a href="#">W10112267</a>			Foam-Seal Control Bracket
13	W10030070	<a href="#">W10012480</a>		Kit

14	<a href="#">3936150</a>		Connector, 7-Circuit
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">W10029940</a>		Cap, Knob
17	<a href="#">2203186</a>		Connector, 5-Circuit
18	<a href="#">W10280099</a>		User Interface
19	<a href="#">W10279688</a>		User Interface
20	<a href="#">W10012430</a>		Encoder, Wheel Kit.
21	<a href="#">W10012440</a>		Retainer-Snap
22	<a href="#">W10012410</a>		Knob, Light Ring
23	W10012810	<a href="#">280230</a>	Encoder, Wheel Kit.
24	W10012460	<a href="#">280230</a>	Encoder, Wheel Kit.
25	<a href="#">W10242906</a>		Harness, Communication
26	W10012820	<a href="#">280230</a>	Encoder, Wheel Kit.
27	N/P	Not Available	KNOB BASE (NOT SERVICABLE)
28	<a href="#">280230</a>		Encoder, Wheel Kit.
29	<a href="#">W10112268</a>		Clip-Harness
30	<a href="#">3391018</a>		Tie Cable
31	W10117943	<a href="#">8303811</a>	Badge, Assembly
32	<a href="#">W10012830</a>		Knob, 0-Ring

