


Whirlpool WGD9400SZ3 01 - TOP AND CONSOLE PARTS

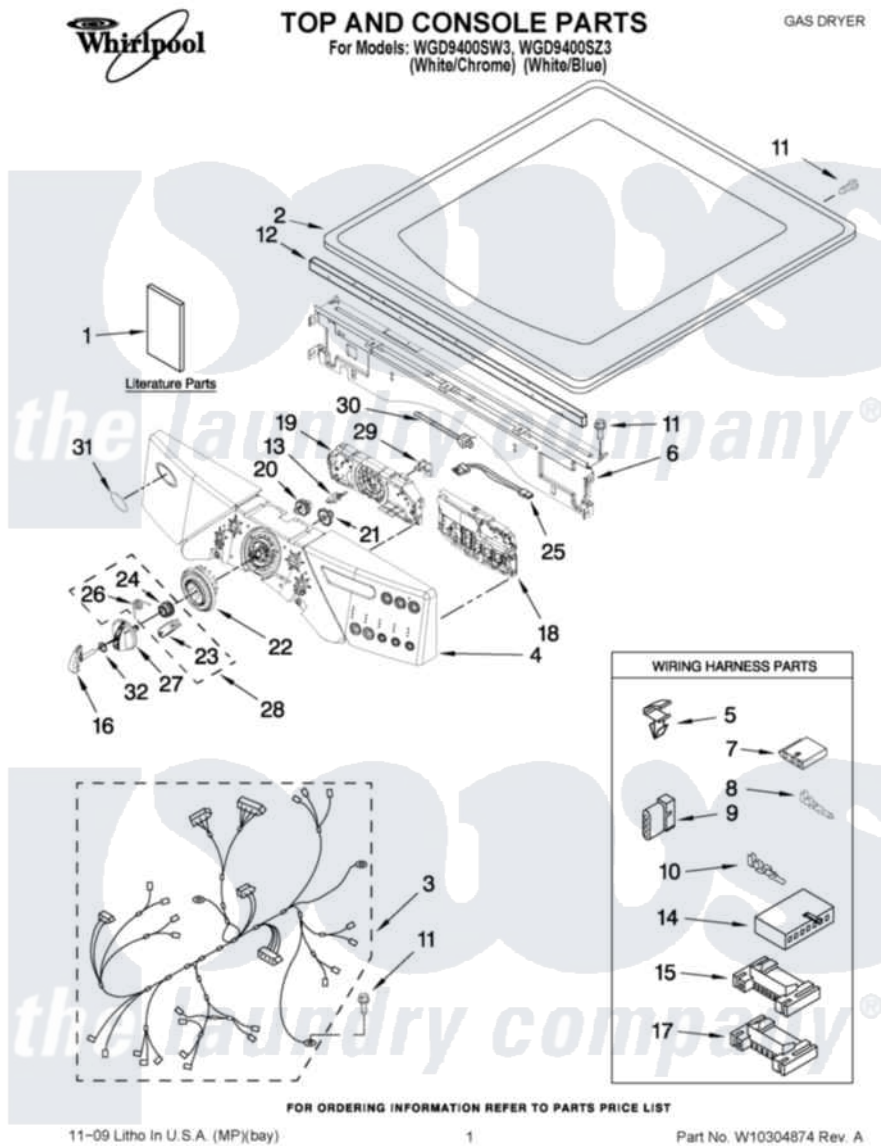

Whirlpool Residential Whirlpool WGD9400SZ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10224575		Not Available	USE & CARE GUIDE
"	W10258369		Not Available	TECH SHEET
"	W10255469		Not Available	INSTALLATION INSTRUCTIONS
2	3980634	W10117263		Top
3	W10111062			Harness, Main
4	W10246730			Panel, Console And 31)
"	W10246731			Panel, Console And 31)
5	3394427			Clip-Harness
6	W10215656			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	W10112267			Foam-Seal Control Bracket
13	W10030070	W10012480		Kit

14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	W10029940		Cap, Knob
17	2203186		Connector, 5-Circuit
18	W10280099		User Interface
19	W10279688		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10242906		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	N/P	Not Available	KNOB BASE (NOT SERVICABLE)
28	280230		Encoder, Wheel Kit.
29	W10112268		Clip-Harness
30	3391018		Tie Cable
31	W10117943	8303811	Badge, Assembly
32	W10012830		Knob, 0-Ring

