


Whirlpool WGD9450WW0 01 - TOP AND CONSOLE PARTS

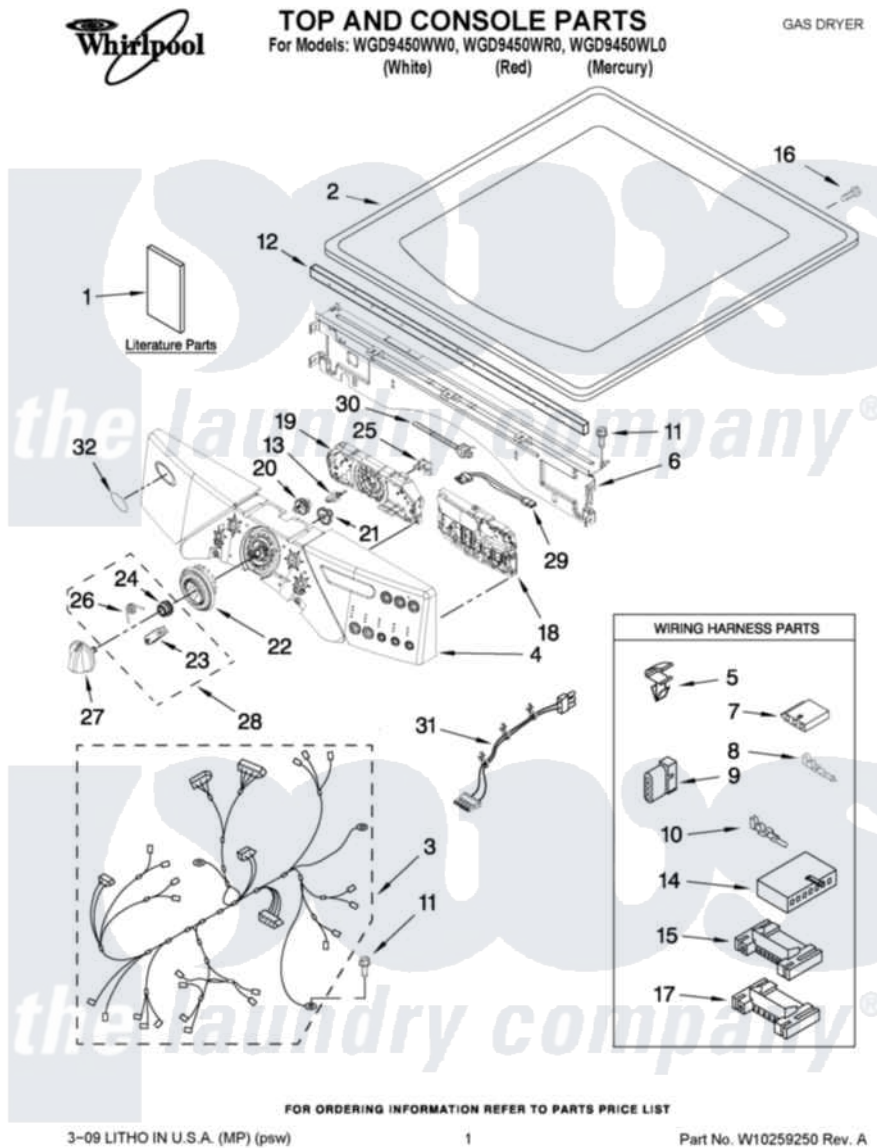

Whirlpool Residential Whirlpool WGD9450WW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10244607			Use And Care Guide
"	W10251192		Not Available	TECH SHEET
"	W10224610		Not Available	INSTALLATION (INSTRUCTION)
2	3980634	W10117263		Top
"	W10249738			Toe Panel
"	W10249739			Top
3	W10111011			Harness, Main
4	W10246587	W10255226		Panel, Console
"	W10251615	W10255228		Panel, Console
"	W10251609	W10255227		Panel, Console
5	3394427			Clip-Harness
6	W10215656			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal

11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	98139	303776	Screw
17	2203186		Connector, 5-Circuit
18	W10248079	Not Available	USER-INTERFACE (RIGHT)
19	W10121375		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10250089		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10112268		Clip-Harness
26	W10012820	280230	Encoder, Wheel Kit.
27	W10190685		Knob, Control
28	W10012480		Kit
29	W10095960		Harness, Communication
30	3391018		Tie Cable
31	W10111020		Power Cable, User-Interface
32	W10117943	8303811	Badge, Assembly

