


Whirlpool WGD9470WL2 01 - TOP AND CONSOLE PARTS

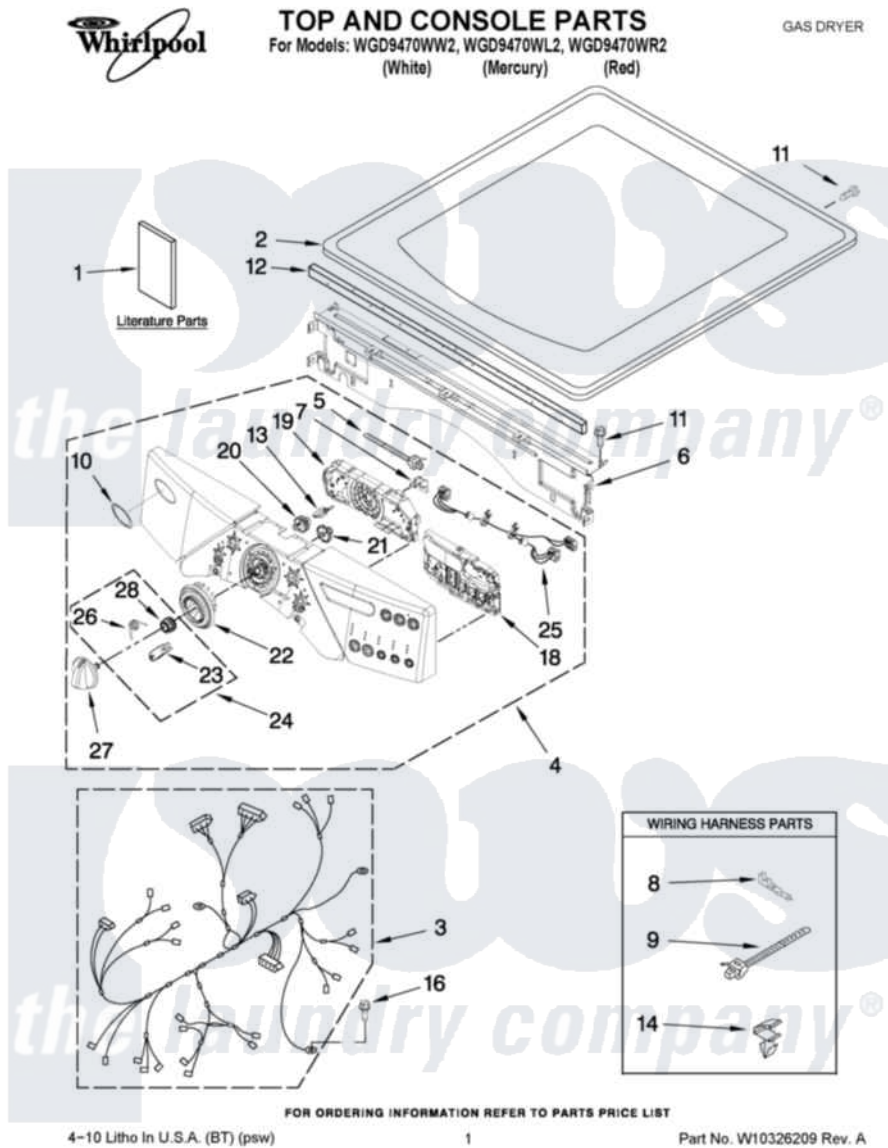

Whirlpool Residential Whirlpool WGD9470WL2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10244607			Use And Care Guide
"	W10298850		Not Available	TECH SHEET
"	W10255469		Not Available	INSTALLATION INSTRUCTIONS
2	3980634	W10117263		Top
"	W10249738			Toe Panel
"	W10249739			Top
3	W10111069			Harness, Main
4	W10255229			Panel, Console
"	W10255231			Panel, Console
"	W10255230			Panel, Console
5	3391018			Tie Cable
6	W10215656			Bracket, Console
7	W10112268			Clip-Harness
8	94614			Terminal
9	3391018			Tie Cable
10	W10117943	8303811		Badge, Assembly

11	489463		Screw, 8-18 X 1/16
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3394427		Clip-Harness
16	693995		Screw, Hex Head
18	W10279773		User Interface
19	W10279709		User Interface,
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10250089		Knob, Light Ring
23	W10006660	Not Available	RAST, WHEEL ASSY. (SERVICE ONLY WITH ITEM. 24)
24	280230		Encoder, Wheel Kit.
25	W10242906		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10190685		Knob, Control
28	W10133763	Not Available	DETENT WHEEL (SERVICE ONLY WITH ILLUS. 28)

