


Whirlpool WGD9470WR1 05 - DOOR PARTS

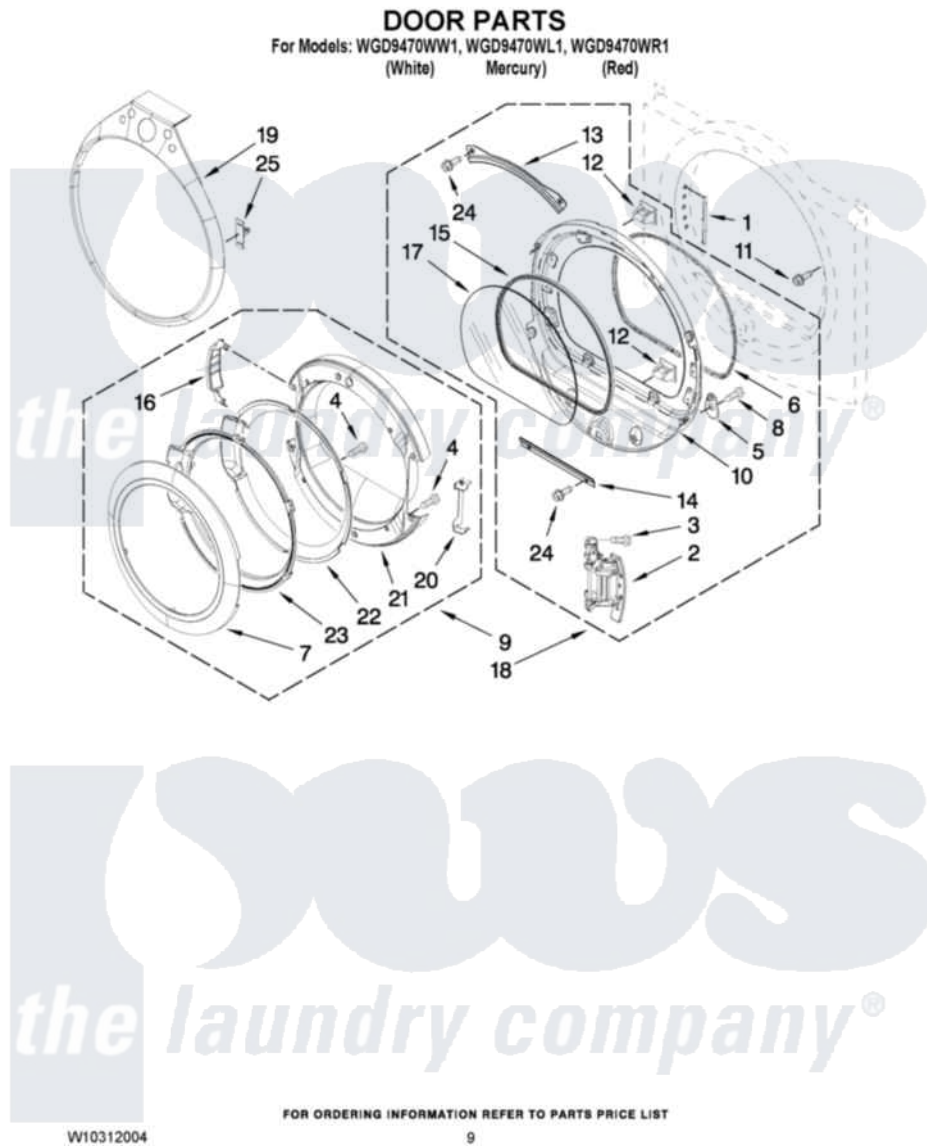

Whirlpool [Residential Whirlpool WGD9470WR1 Dryer Parts](#) Parts Diagram 05 - DOOR PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10085230			Label, Hinge Hole Cover
2	W10139920			Door Hinge Assembly
3	W10159996			Screw, 10-24 X 25/64
4	9742177			Screw, 8-18 X .625
5	W10048910			Screw-Plug
6	W10139457			Seal-Door Handle, Ring Door
7	W10193522			Door Frame Assembly
8	3400224			Screw, 1/4-20 X 3/8
9	W10193530			Door Assembly
10	8578229			Door Assembly
11	355515			Screw, 8-18 X 11/16
12	690081	279570		Latch
13	8519356			Retainer-Window
14	8519354			Retainer-Window
15	8579662			Gasket, Window
16	W10180119			Cover-Hinge, Stationary Cover Hinge

17	8566254		Glass-Window
18	8577819		Door Assembly
19	W10246600		Tear-Drop Trim And Clip Assembly
"	W10249767		Tear-Drop Trim And Clip Assembly
"	W10249765		Tear-Drop Trim And Clip Assembly
20	W10180120		Shield, Door
21	W10180118		Door, Intermediate
22	W10180117		Door Mask
23	W10171571		Screen, Door
24	3393258	3373329D	Screw
25	W10129065		Trim-Clip Metal

the laundry company[®]

the laundry company[®]

the laundry company[®]