



Whirlpool Residential Whirlpool WGD9470WR1 Dryer Parts Parts Diagram 06 - OPTIONAL PARTS (NOT INCLUDED)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	72017			Paint, Touch-Up
"	W10218245			Paint, Touch-Up
"	W10268217			Paint, Touch-Up
"	W10218247			Paint, Pressurized Spray
"	350930			Paint, Pressurized Spray B
"	350938			Paint, Pressurized Spray B
"	799344			Paint, Touch-Up)
"	8529894	346764		Kit, Hold Down
"	8579666A	W10466829		Blade
"	8541503			Kit, Stack Assembly
"	80047			PAINT, BULK (1 QT.) (KIT, DRYER REPAIR)
"	8521957	W10121663		Dryer Rack
"	W10206708	W10044609A		Hose-Kit
"	89503			Hose-Inlet
"	350027	49583		Hose-Fill
				Washer Inlet-Hose

"	W10242307	16123	Miscellaneous Parts Must be Ordered Separately.
"	353362	285452	Hose Screen
"	W10044604	49586	Mixer

