



Whirlpool [Residential Whirlpool WGD9470WW1 Dryer Parts](#) Parts Diagram 06 - OPTIONAL PARTS (NOT INCLUDED)
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|----------------------------|--------|---|
| NI | 72017 | | | Paint, Touch-Up |
| " | W10218245 | | | Paint, Touch-Up |
| " | W10268217 | | | Paint, Touch-Up |
| " | W10218247 | | | Paint, Pressurized Spray |
| " | 350930 | | | Paint, Pressurized Spray B |
| " | 350938 | | | Paint, Pressurized Spray B |
| " | 799344 | | | Paint, Touch-Up) |
| " | 8529894 | 346764 | | Kit, Hold Down |
| " | 8579666A | W10466829 | | Blade |
| " | 8541503 | | | Kit, Stack Assembly |
| " | 80047 | | | PAINT, BULK (1 QT.) (KIT, DRYER REPAIR) |
| " | 8521957 | W10121663 | | Dryer Rack |
| " | W10206708 | W10044609A | | Hose-Kit |
| " | 89503 | | | Hose-Inlet |
| " | 350027 | 49583 | | Hose-Fill |
| | | | | Washer Inlet-Hose |

| | | | |
|---|-----------|------------------------|---|
| " | W10242307 | 16123 | Miscellaneous Parts Must be Ordered Separately. |
| " | 353362 | 285452 | Hose Screen |
| " | W10044604 | 49586 | Mixer |

