


# Whirlpool WGD9500TU1 02 - CABINET PARTS

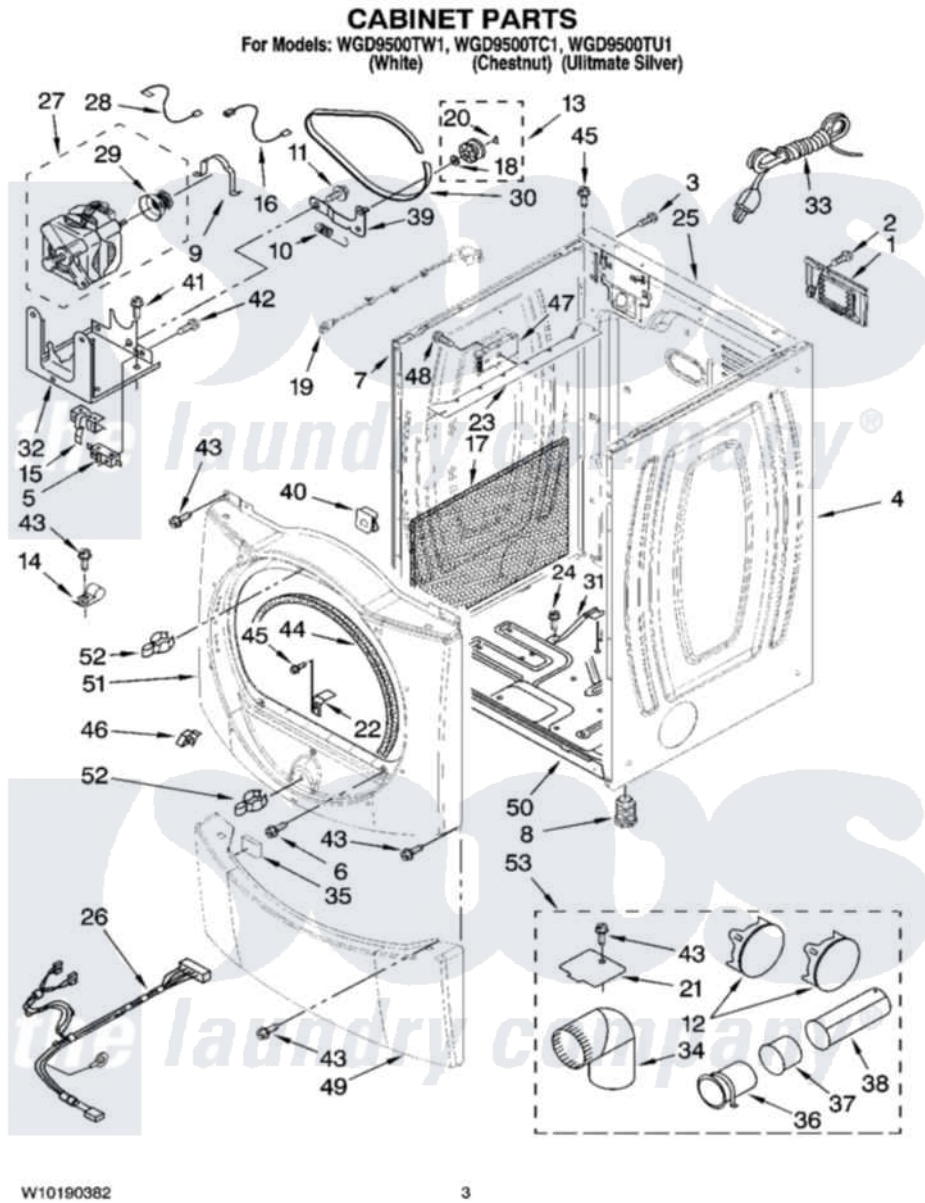

W10190382

3

Whirlpool Residential Whirlpool WGD9500TU1 Dryer Parts Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8317340</a>			Cover, Terminal Block
2	3390814	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
4	W10139003	<a href="#">W10117273</a>		Panel
"	W10139014	<a href="#">W10156775</a>		Panel
"	W10139009	<a href="#">W10117287</a>		Panel
5	3394881	<a href="#">279782</a>		Switch-Lid
6	3357011	<a href="#">308685</a>		Side Trim )
7	W10138989	<a href="#">W10117272</a>		Panel
"	W10139000	<a href="#">W10156769</a>		Panel
"	W10138995	<a href="#">W10117286</a>		Panel
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler

11	<a href="#">3389420</a>		Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	<a href="#">W10136988</a>		Plug, Multivent
"	<a href="#">8579117</a>		Plug, Multivent
13	3388672	<a href="#">279640</a>	Pulley-Idr
14	<a href="#">3978776</a>		Bracket, Gas Pipe Switch
15	<a href="#">8066120</a>		Lever, Door Switch
16	<a href="#">W10167612</a>		Wire, Broken Belt Switch
17	W10128772	<a href="#">8564134</a>	Board, Sound Dampening
18	<a href="#">W10121334</a>		Washer, Thrust
19	W10128087	<a href="#">W10318609</a>	Switch, Assembly Door
20	<a href="#">690997</a>		Washer, Thrust
21	8066115	<a href="#">3394331</a>	Plate Cover
22	<a href="#">8529053</a>		Ramp, Door Door Switch
23	<a href="#">8563727</a>		Bracket, Control
24	<a href="#">693995</a>		Screw, Hex Head
25	W10133213	<a href="#">W10202864</a>	Panel-Rear
26	8579736	<a href="#">W10181464</a>	Harness, Digital Interface
27	8538263	<a href="#">279787</a>	Motor-Drve
28	<a href="#">3398948</a>		Wire, Jumper
29	<a href="#">8578220</a>		Pulley, Motor
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">8529757</a>		Bracket, Burner
32	<a href="#">3387118</a>		Bracket, Motor
33	3401401	<a href="#">3401402</a>	Cord, Power
34	<a href="#">49026</a>		4" - 90° Elbow
35	<a href="#">3389682</a>		Space-Toe Panel User-Interface
36	<a href="#">8563747</a>		Exhaust Pipe Medium Pipe
37	<a href="#">8563750</a>		Exhaust Pipe
38	<a href="#">8563749</a>		Exhaust Pipe
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	<a href="#">62825</a>		Clip-S Type Control Board
41	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
42	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
43	3390647	<a href="#">488729</a>	Screw
44	<a href="#">3387242</a>		Seal, Front Panel
45	3393008	<a href="#">308685</a>	Side Trim )
46	<a href="#">8519459</a>		Clip, Toe Panel
47	W10182365	<a href="#">W10174746</a>	Board, Control
48	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
49	W10116271	<a href="#">W10246269</a>	Panel, Toe
"	<a href="#">W10140573</a>		Panel, Toe
"	<a href="#">W10116277</a>		Toe, Panel
50	<a href="#">8519207</a>		Base, Cabinet
51	<a href="#">W10180423</a>		Front Panel
"	<a href="#">W10180433</a>		Front Panel
"	<a href="#">W10180429</a>		Front Panel
52	696144	<a href="#">279570</a>	Latch
"	BLANK	Not Available	Optional Parts Not Included
53	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	W10152955	<a href="#">W10470674</a>	Dryer Exhaust Kit

