


Whirlpool WGD9500TW1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WGD9500TW1, WGD9500TC1, WGD9500TU1
(White) (Chestnut) (Ultimate Silver)

GAS DRYER

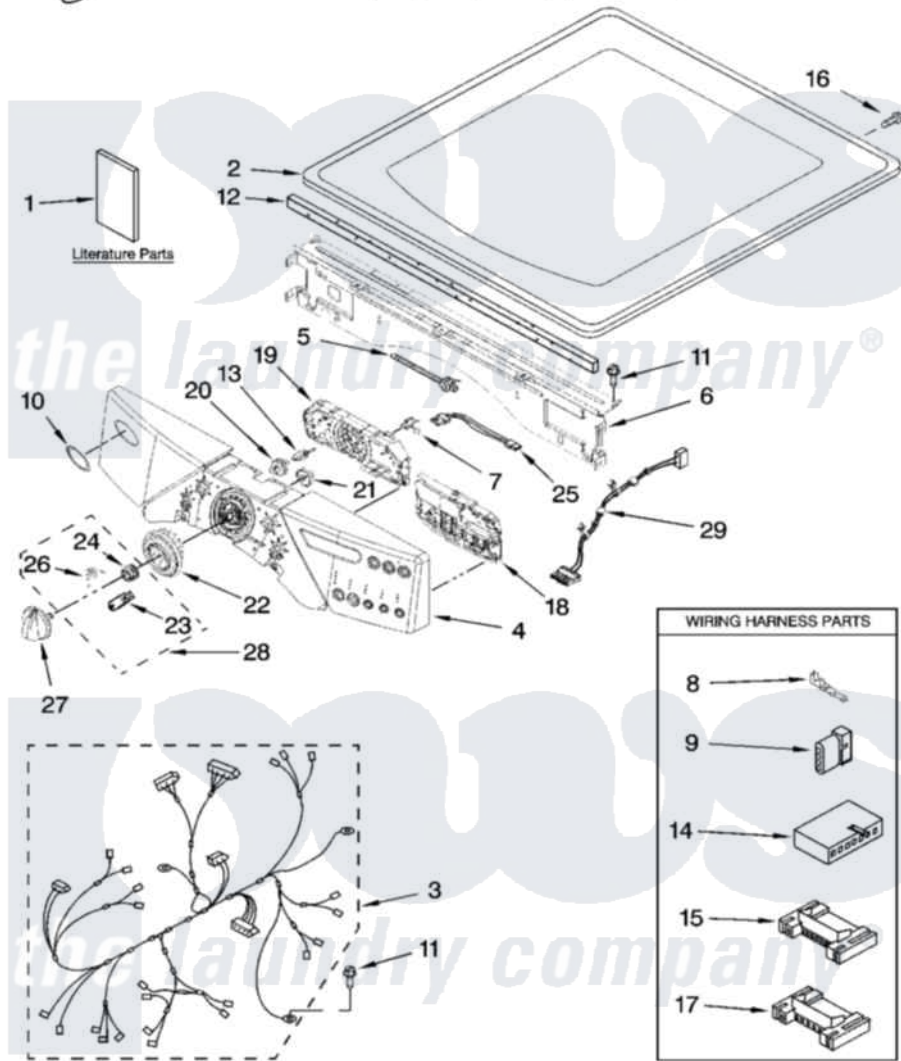

3-08 LITHO IN U.S.A. (LAN)

1

Part No. W10190382 Rev. A

Whirlpool Residential Whirlpool WGD9500TW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10122320		Not Available	Use & Care Guide
"	W10177456		Not Available	Tech Sheet
"	W10139322		Not Available	TIP SHEET DRYER STEAM
"	W10122321		Not Available	Guide, Quick Start
2	8519251	W10117263		Top
"	W10140291			Top
"	W10114785			Top
3	W10181775			Harness, Main
4	W10153649			Panel, Console
"	W10177358			Panel, Console
"	W10133748			Panel, Console
5	3391018			Tie Cable
6	W10006840	W10215656		Bracket, Console
7	W10112268			Clip-Harness
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals

10	W10117943	8303811	Badge, Assembly
11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	98139	303776	Screw
17	2203186		Connector, 5-Circuit
18	W10137338	W10294630	Kit
19	W10121375		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10095960		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10116702		Knob, Control
"	W10153664		Knob, Control
"	W10116704		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10111020		Power Cable, User-Interface

