


# Whirlpool WGD9600TA2 02 - CABINET PARTS

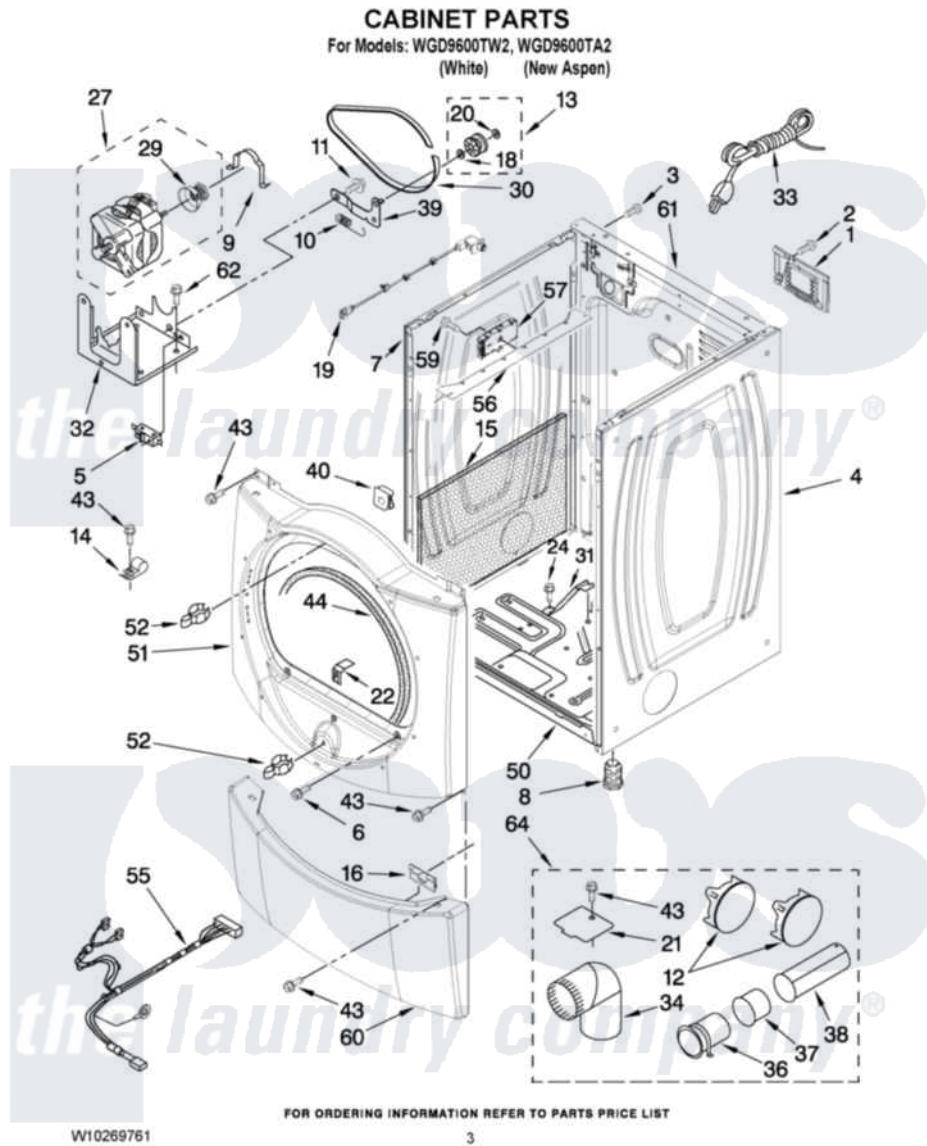

Whirlpool Residential Whirlpool WGD9600TA2 Dryer Parts Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8317340</a>			Cover, Terminal Block
2	3390814	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
4	<a href="#">W10192446</a>			Panel, Side
"	<a href="#">W10192454</a>			Panel, Side
5	W10246525	<a href="#">W10314253</a>		Switch, Assembly Broken Belt
6	3357011	<a href="#">308685</a>		Side Trim )
7	<a href="#">W10192435</a>			Panel, Side
"	<a href="#">W10192443</a>			Panel, Side
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">W10121316</a>			Plug, Multivolt
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	<a href="#">49252</a>			Plug, Multivolt
"	<a href="#">W10136987</a>			Plug, Multivolt

13	3388672	<a href="#">279640</a>	Pulley-Idr
14	<a href="#">3978776</a>		Bracket, Gas Pipe Switch
15	<a href="#">W10123956</a>		Dampening Panel
16	<a href="#">8519459</a>		Clip, Toe Panel
18	<a href="#">233520</a>		Washer, Thrust
19	W10128087	<a href="#">W10318609</a>	Switch, Assembly Door
20	<a href="#">W10121334</a>		Washer, Thrust
21	8066115	<a href="#">3394331</a>	Plate Cover
22	<a href="#">8529053</a>		Ramp, Door Door Switch
24	<a href="#">693995</a>		Screw, Hex Head
27	8538263	<a href="#">279787</a>	Motor-Drve
29	<a href="#">8578220</a>		Pulley, Motor
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">8529757</a>		Bracket, Burner
32	<a href="#">W10242878</a>		Bracket, Motor Mounting
33	3401401	<a href="#">3401402</a>	Cord, Power
34	<a href="#">49026</a>		4" - 90° Elbow
36	<a href="#">8563747</a>		Exhaust Pipe Medium Pipe
37	<a href="#">8563750</a>		Exhaust Pipe
38	<a href="#">8563749</a>		Exhaust Pipe
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	<a href="#">62825</a>		Clip-S Type Control Board
43	3390647	<a href="#">488729</a>	Screw
44	<a href="#">3387242</a>		Seal, Front Panel
50	<a href="#">W10239098</a>		Front Panel
51	<a href="#">W10180423</a>		Front Panel
"	<a href="#">W10180432</a>		Front Panel
52	696144	<a href="#">279570</a>	Latch
55	<a href="#">W10242903</a>		Harness, Digital Interface
56	<a href="#">8563727</a>		Bracket, Control
57	<a href="#">W10174746</a>		Board, Control
59	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
60	<a href="#">W10246269</a>		Panel, Toe
"	<a href="#">W10246278</a>		Toe Panel
61	<a href="#">W10116475</a>		Panel, Rear
62	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
64	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit

