


Whirlpool WGD9600TB1 01 - TOP AND CONSOLE PARTS

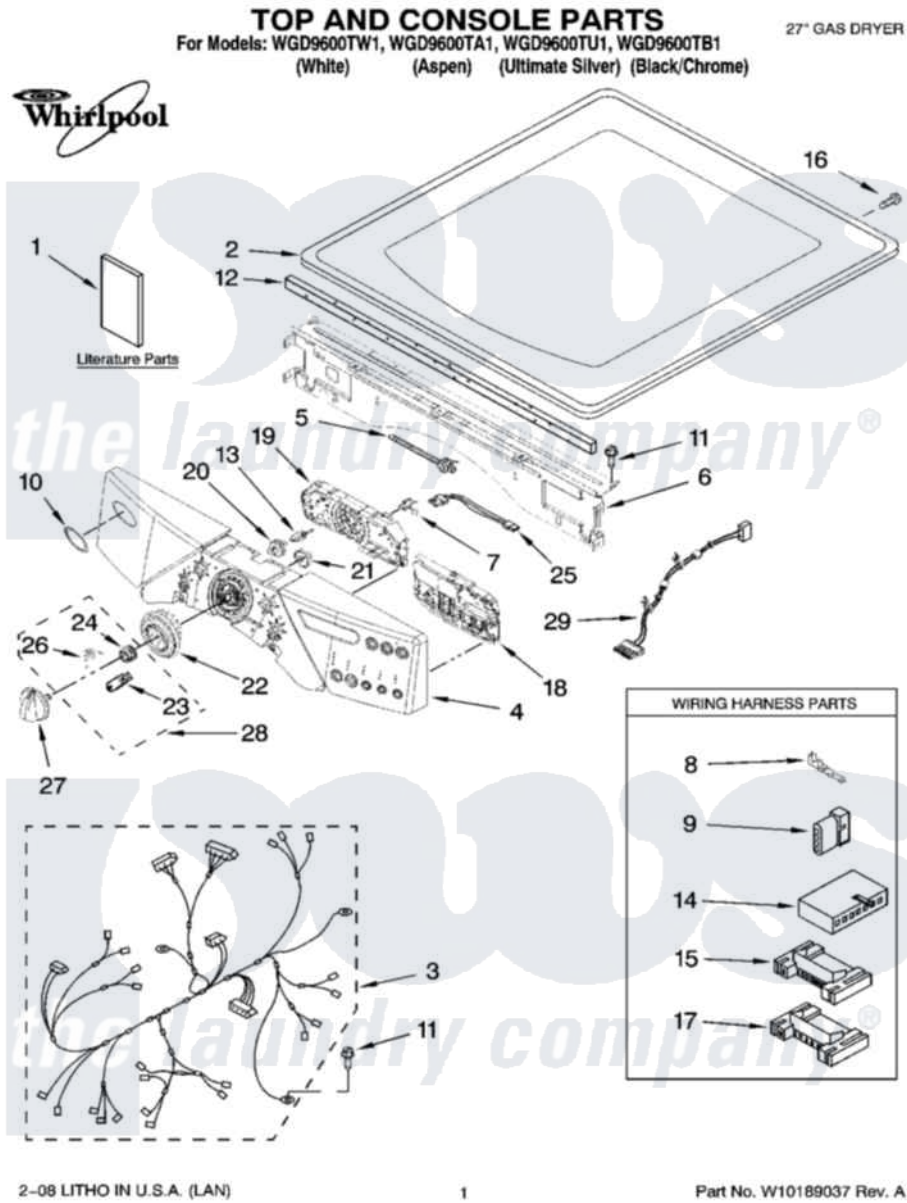

Whirlpool [Residential Whirlpool WGD9600TB1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10136970		Not Available	Use & Care Guide
"	W10177462		Not Available	Tech Sheet
"	W10139791		Not Available	Guide, Quick Start
"	W10139322		Not Available	TIP SHEET DRYER STEAM
2	8519251	W10117263		Top
"	W10140290			Top
"	W10114785			Top
"	8579997	W10192490		Top
3	W10111015			Harness, Main
4	W10153650			Panel, Console
"	W10153655			Panel, Console
"	W10153654		Not Available	Panel, Console (Includes Illus: 20,21,22,27,28 & 29) (Ultimate Silver)
"	W10153652			Panel, Console
5	3391018			Tie Cable
6	W10006840	W10215656		Bracket, Console

7	W10112268		Clip-Harness
8	94614		Terminal
9	3936144		Do-It-Yourself Repair Manuals
10	W10117943	8303811	Badge, Assembly
11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	98139	303776	Screw
17	2203186		Connector, 5-Circuit
18	W10110659	W10294708	Kit
19	W10110658		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10095960		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10116702		Knob, Control
"	W10153663		Knob, Control
"	W10116704		Knob, Control
"	W10116705		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10111020		Power Cable, User-Interface

the laundry company[®]

the laundry company[®]