


# Whirlpool WGD9750WL1 01 - TOP AND CONSOLE PARTS

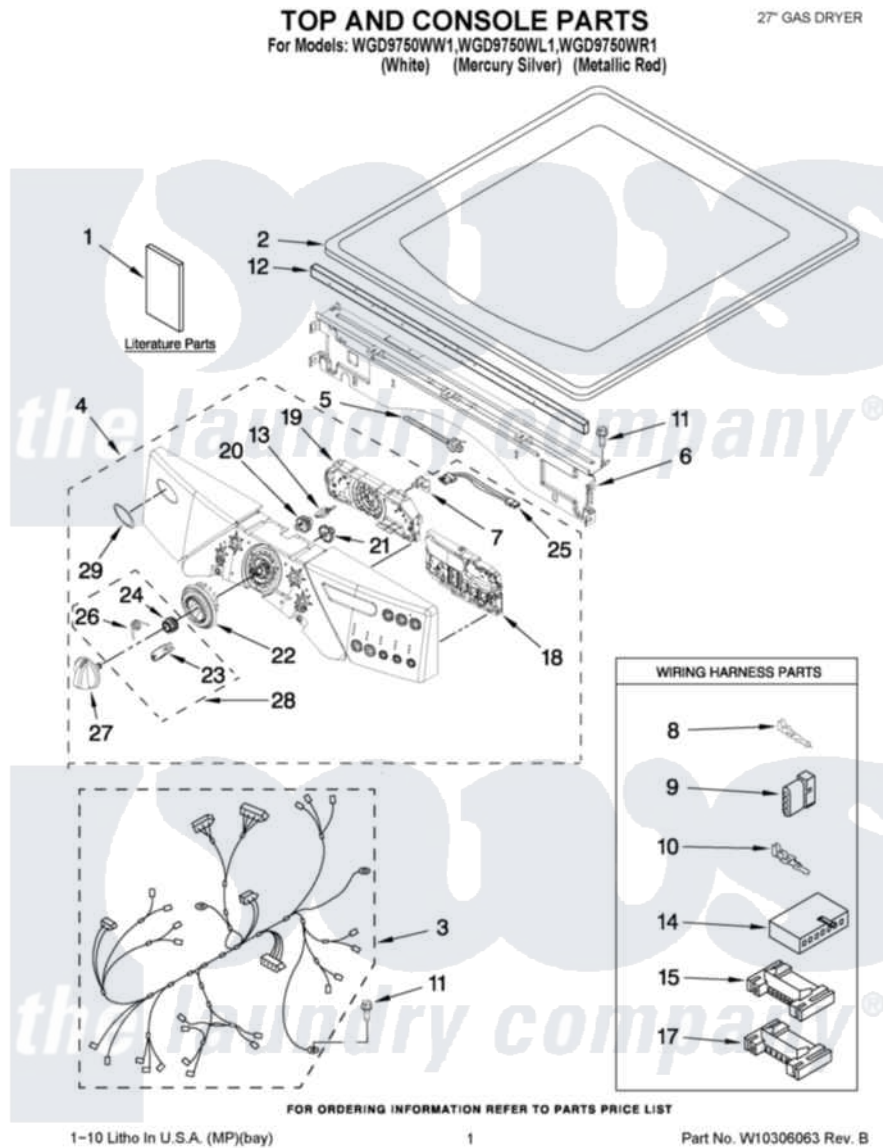

Whirlpool [Residential Whirlpool WGD9750WL1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10289764		Not Available	USE & CARE GUIDE
"	W10258369		Not Available	TECH SHEET
"	W10255469		Not Available	INSTALLATION INSTRUCTIONS
2	3980634	<a href="#">W10117263</a>		Top
"	<a href="#">W10249739</a>			Top
"	<a href="#">W10249738</a>			Toe Panel
3	<a href="#">W10111069</a>			Harness, Main
4	<a href="#">W10287715</a>			Panel, Console
"	<a href="#">W10287716</a>			Panel, Console
"	<a href="#">W10287717</a>			Panel, Console
5	<a href="#">3391018</a>			Tie Cable
6	<a href="#">W10215656</a>			Bracket, Console
7	<a href="#">W10112268</a>			Clip-Harness
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal

11	3390647	<a href="#">488729</a>	Screw
12	<a href="#">W10112267</a>		Foam-Seal Control Bracket
13	W10030070	<a href="#">W10012480</a>	Kit
14	<a href="#">3936150</a>		Connector, 7-Circuit
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
17	<a href="#">2203186</a>		Connector, 5-Circuit
18	<a href="#">W10288016</a>		User-Interface
19	<a href="#">W10280044</a>		User Interface
20	<a href="#">W10012430</a>		Encoder, Wheel Kit.
21	<a href="#">W10012440</a>		Retainer-Snap
22	<a href="#">W10250089</a>		Knob, Light Ring
23	W10012810	<a href="#">280230</a>	Encoder, Wheel Kit.
24	<a href="#">W10236765</a>		Detent Wheel
25	<a href="#">W10242906</a>		Harness, Communication
26	W10012820	<a href="#">280230</a>	Encoder, Wheel Kit.
27	<a href="#">W10190685</a>		Knob, Control
28	<a href="#">W10012480</a>		Kit
29	W10117943	<a href="#">8303811</a>	Badge, Assembly

