


Whirlpool WGD97HEXL0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WGD97HEXW0 (White), WGD97HEXR0 (Red), WGD97HEXL0 (Silver)

27" GAS DRYER

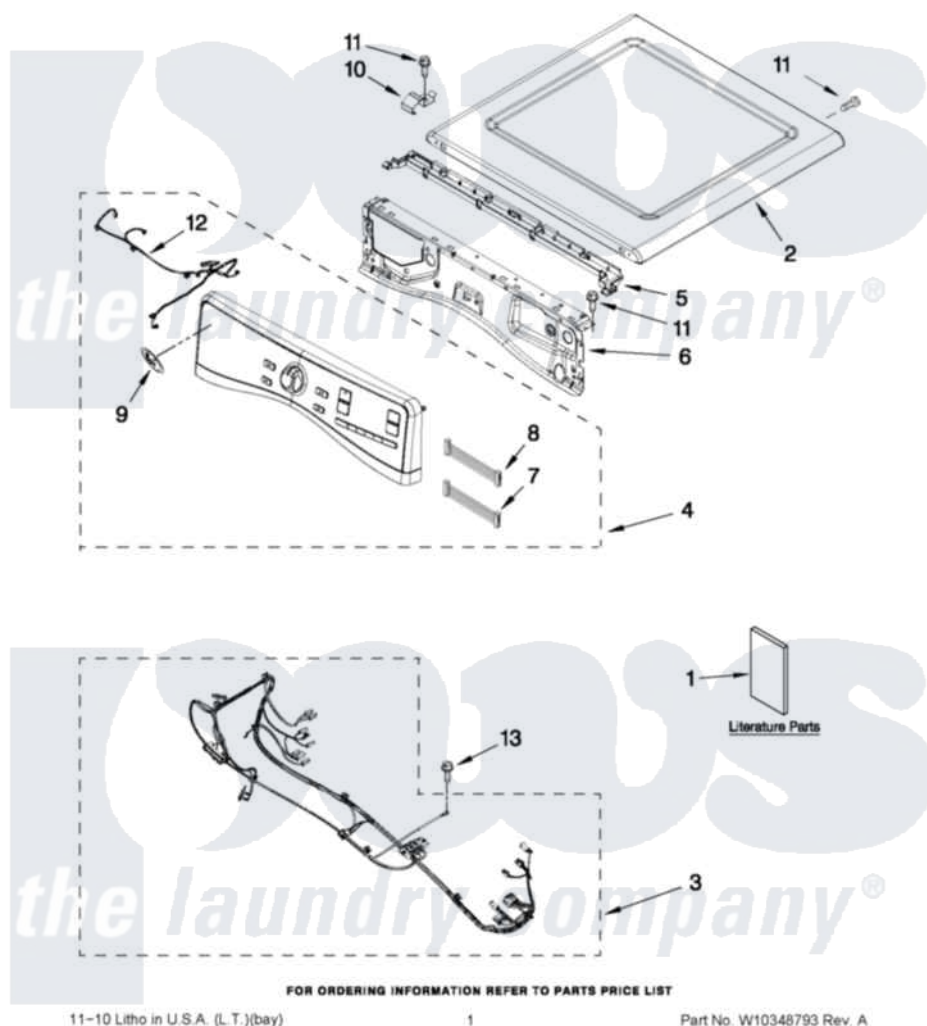

Whirlpool Residential Whirlpool WGD97HEXL0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10305728		Not Available	USE & CARE GUIDE
"	W10319757		Not Available	TECH SHEET
"	W10057364		Not Available	INSTALLATION INSTRUCTIONS
2	W10208383			Top
"	W10337792			Top
"	W10316282			Top
3	W10319341			Harness, Main
4	W10352483		Not Available	PANEL, CONSOLE ASSEMBLY (INCLUDE ITEMS, 7,8,9,10,13, 14,15 & 16) (WHITE)
"	W10352485			Panel, Console Assembly
"	W10352484			Panel, Console Assembly
5	W10317570			Water Channel
6	W10208198			Bracket, Console
7	W10267938			Harness, UI Jumper
8	W10267937			Harness, Jumper

9	W10117943	8303811	Badge, Assembly
10	W10317566		Spring, Clip Water Channel
11	3390647	488729	Screw
12	W10267832		Cable, User Interface
13	693995		Screw, Hex Head

