


Whirlpool WGD97HEXR1 05 - DOOR PARTS

DOOR PARTS

For Models: WGD97HEXW1, WGD97HEXR1, WGD97HEXL1
 (White) (Red) (Silver)

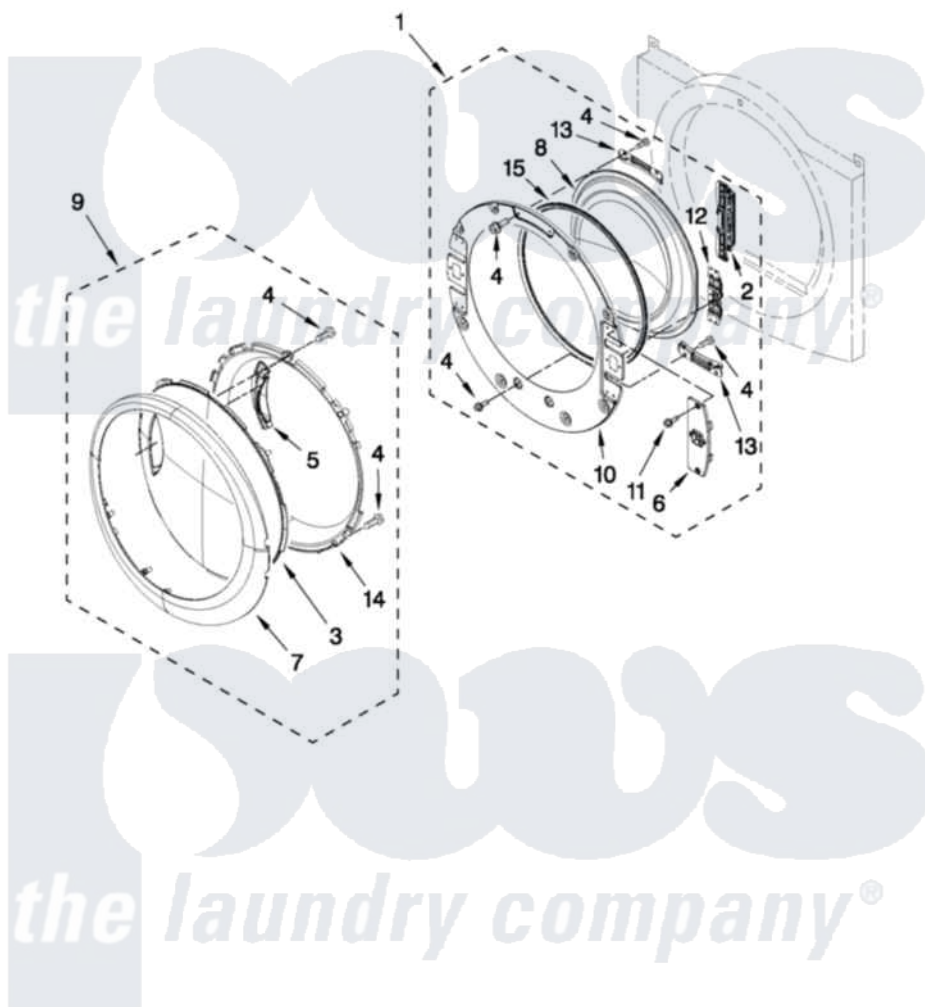

W10431374

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

9

Whirlpool [Residential Whirlpool WGD97HEXR1 Dryer Parts](#) Parts Diagram 05 - DOOR PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10208266			Door, Inner Assembly
2	W10208414			Door Hinge Assembly
3	W10208270			Door, Outer Screen
4	9742177			Screw, 8-18 X .625
5	W10208411			Handle, Door
6	W10208413			Cover, Door Switch
7	W10208271			Door, Trim Ring
8	W10208417			Window Inner Door
9	W10208268			Door Assembly (Outer) (Include Items, (3, 4, 5, 7 And 14)
10	W10267837			Door, Inner Assembly
11	W10288126			Screw, 10-32 X 1/2
12	W10208254			Door Inner Screw, 10-32 X 1/2
13	W10208252			Bracket, Glass
14	W10208269			Frame, Door Front Support
15	W10208254			Door Inner Screw, 10-32 X 1/2