


# Whirlpool WGD97HEXW1 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Models: WGD97HEXW1, WGD97HEXR1, WGD97HEXL1  
(White) (Red) (Silver)

27" GAS DRYER

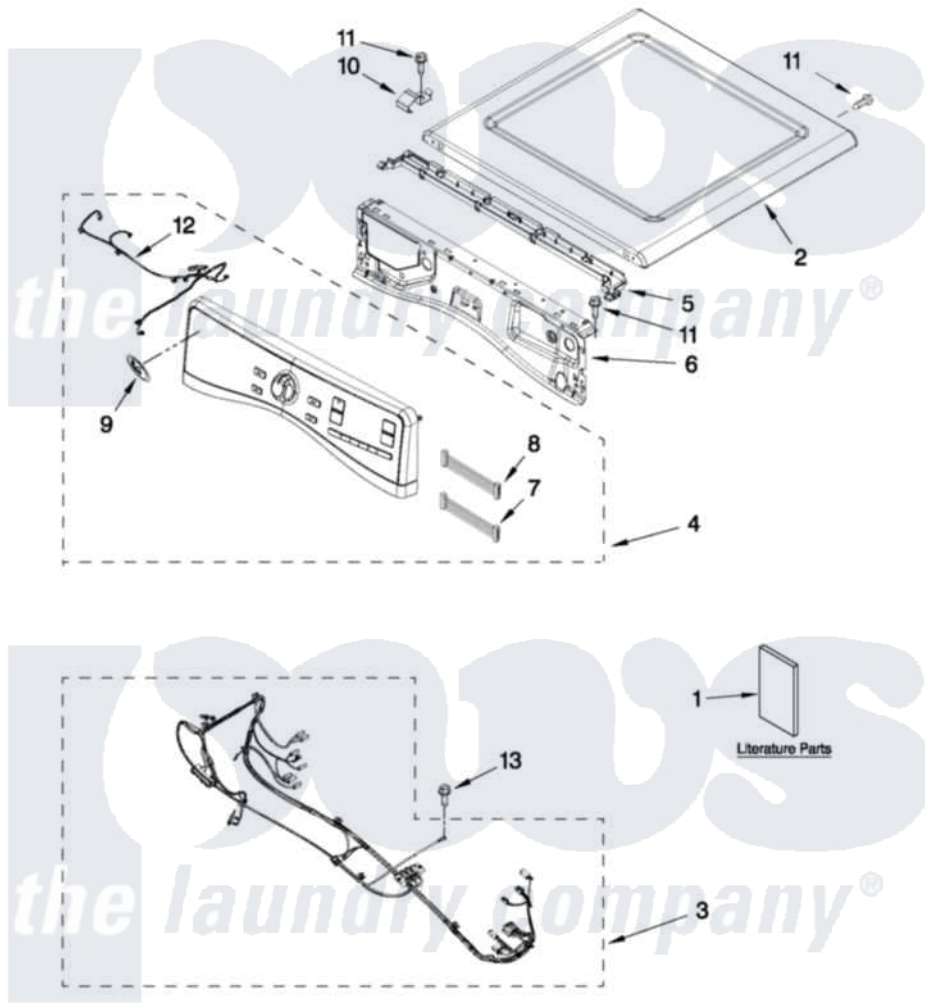

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

7-11 Litho in U.S.A. (L.T.) (eeb)

1

Part No. W10431374 Rev. A

[Whirlpool Residential Whirlpool WGD97HEXW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10305728		Not Available	USE & CARE GUIDE
"	W10319757		Not Available	TECH SHEET
"	W10423115		Not Available	INSTALLATION, INSTRUCTION
2	<a href="#">W10208383</a>			Top
"	<a href="#">W10337792</a>			Top
"	<a href="#">W10316282</a>			Top
3	<a href="#">W10357657</a>			Harness, Main
4	W10352483		Not Available	PANEL, CONSOLE ASSEMBLY (INCLUDE ITEMS, 7,8,9,10,13, 14,15 & 16 ) (WHITE)
"	<a href="#">W10352485</a>			Panel, Console Assembly
"	<a href="#">W10352484</a>			Panel, Console Assembly
5	<a href="#">W10317570</a>			Water Channel
6	<a href="#">W10208198</a>			Bracket, Console
7	<a href="#">W10267938</a>			Harness, UI Jumper
8	<a href="#">W10267937</a>			Harness, Jumper

9	W10117943	<a href="#">8303811</a>	Badge, Assembly
10	<a href="#">W10317566</a>		Spring, Clip Water Channel
11	3390647	<a href="#">488729</a>	Screw
12	<a href="#">W10267832</a>		Cable, User Interface
13	<a href="#">693995</a>		Screw, Hex Head

