


Whirlpool WGD97HEXW1 04 - W10307147 BURNER ASSEMBLY

W10307147 BURNER ASSEMBLY

For Models: WGD97HEXW1, WGD97HEXR1, WGD97HEXL1
(White) (Red) (Silver)

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

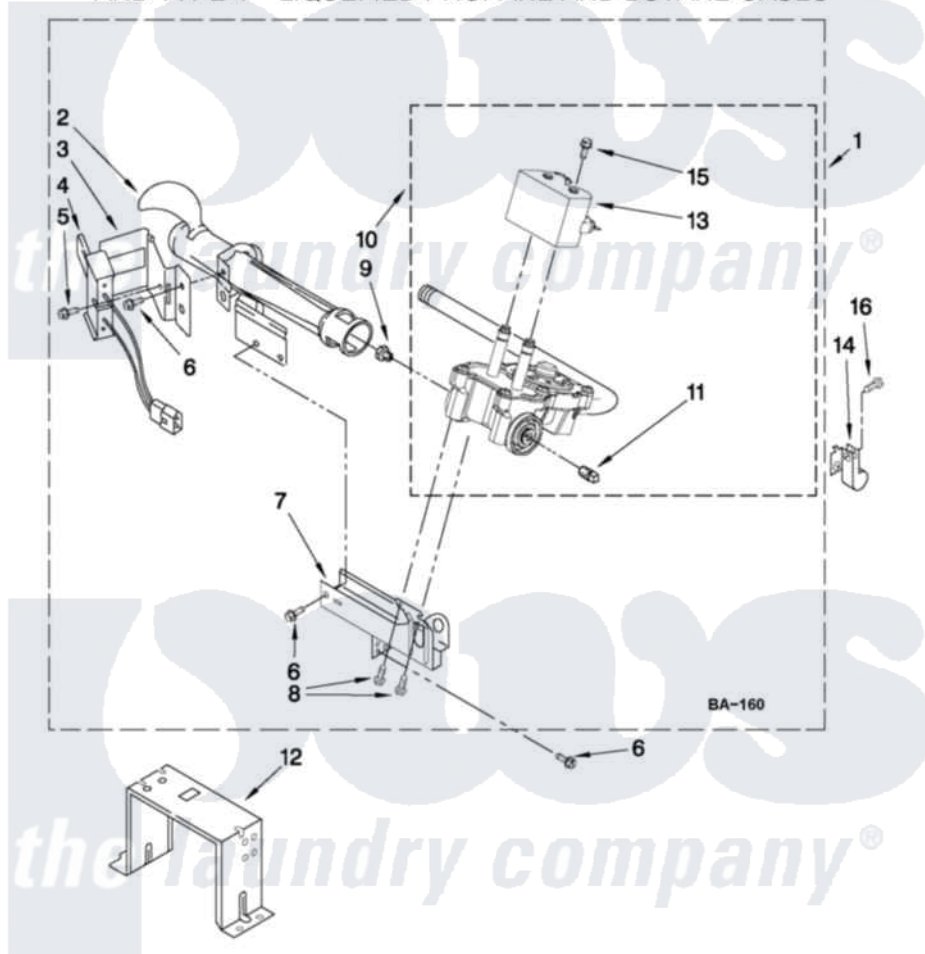

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10431374

7

Whirlpool [Residential Whirlpool WGD97HEXW1 Dryer Parts](#) Parts Diagram 04 - W10307147 BURNER ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10307147	W10353165		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	3389871		Not Available	Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	15418			Orifice, Burner Type 1
10	W10175144	W10293912		Valve-Gas
11	W10295523			Plug, Pipe
12	3389889			Bracket, Support
13	W10328463			Coil, 60 Hz
14	3978776			Bracket, Gas Pipe Switch
15	326049536			Screw, Coil
16	3390647	488729		Screw

