


Whirlpool WGD97HEXW2 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WGD97HEXW2, WGD97HEXR2, WGD97HEXL2
(White) (Red) (Silver)

27" GAS DRYER

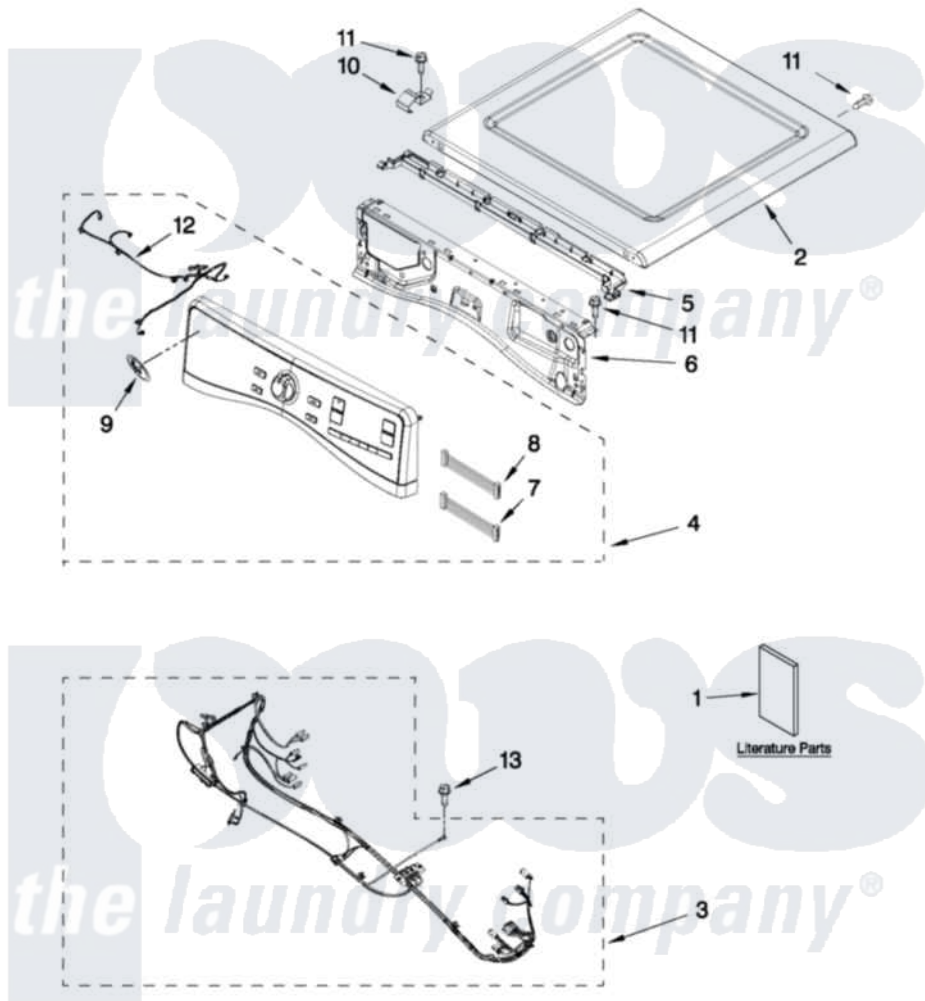

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

9-11 Litho in U.S.A. (L.T.)(bay)

1

Part No. W10440815 Rev. A

[Whirlpool Residential Whirlpool WGD97HEXW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10434873		Not Available	USE & CARE GUIDE
"	W10410465		Not Available	TECH SHEET
"	W10423115		Not Available	INSTALLATION, INSTRUCTION
2	W10208383			Top
"	W10337792			Top
"	W10316282			Top
3	W10355891			Harness, Main
4	W10388454			Panel, Console Assembly
"	W10388456			Panel, Console Assembly
"	W10388455			Panel, Console Assembly
5	W10317570			Water Channel
6	W10208198			Bracket, Console
7	W10267938			Harness, UI Jumper
8	W10267937			Harness, Jumper
9	W10117943	8303811		Badge, Assembly
10	W10317566			Spring, Clip Water Channel

11 3390647

[488729](#)

Screw

12 [W10267833](#)

Cable, Led User-Interface

13 [693995](#)

Screw, Hex Head

