


Whirlpool WGT3300SQ2 01 - WASHER/DRYER CONTROL PANEL PARTS

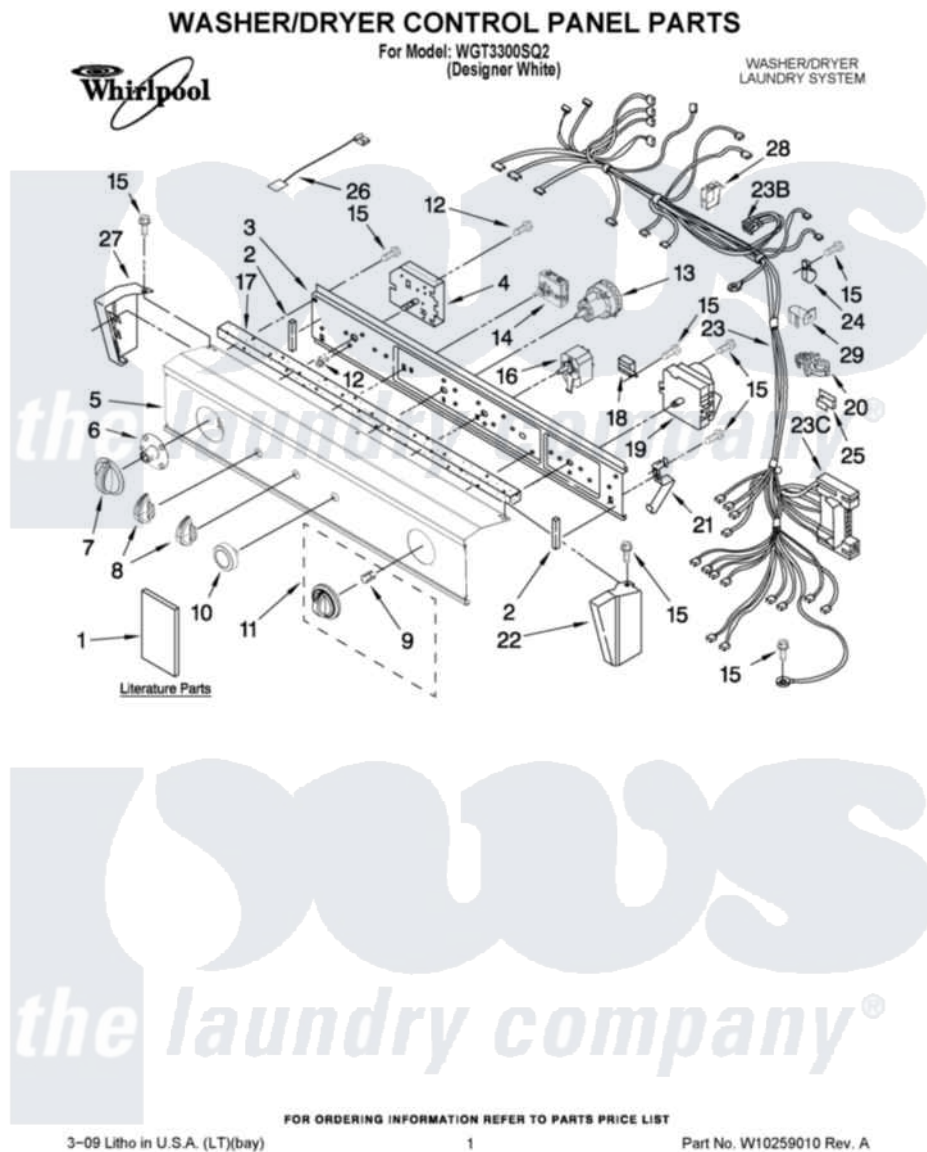

Whirlpool [Residential Whirlpool WGT3300SQ2 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10222381		Not Available	INSTALLATION INSTRUCTIONS
"	W10196553		Not Available	Guide, Use & Care
"	W10118304		Not Available	Sheet, Cycle Feature
"	W10113806		Not Available	Wiring Diagram
"	W10172275		Not Available	ENERGY GUIDE
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	W10113761			Timer, Washer
5	W10114898			Panel, Control
6	8566018			Dial,
7	8566022			Knob, Timer
8	8565944			Knob, Control
9	8536939			Clip, Knob
10	8566073			Knob, Push-To-Start
11	8566061			Timer Knob Assembly

12	3400808		Screw, Mounting
13	W10112533	W10339337	Switch-WL
14	W10114118		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
17	8521965		Gasket, Console
18	694419		Mini-Buzzer
19	W10113804		Timer, Washer
20	2219077		Clip, Pressure Switch Hose
21	3389453		Bracket, Hinge
22	3389456		End Cap
23	W10139463		Harness, Dryer
"	2154470		Receptacle,
"	3395683		Receptacle, Multi-Terminal
24	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
26	W10121648		Jumper Wire
27	3389464		End Cap
28	W10210799		Clip, Harness
29	W10134186		Clip, Harness

